
CURTAIN SHIELD AIRBAG ASSEMBLY

COMPONENTS

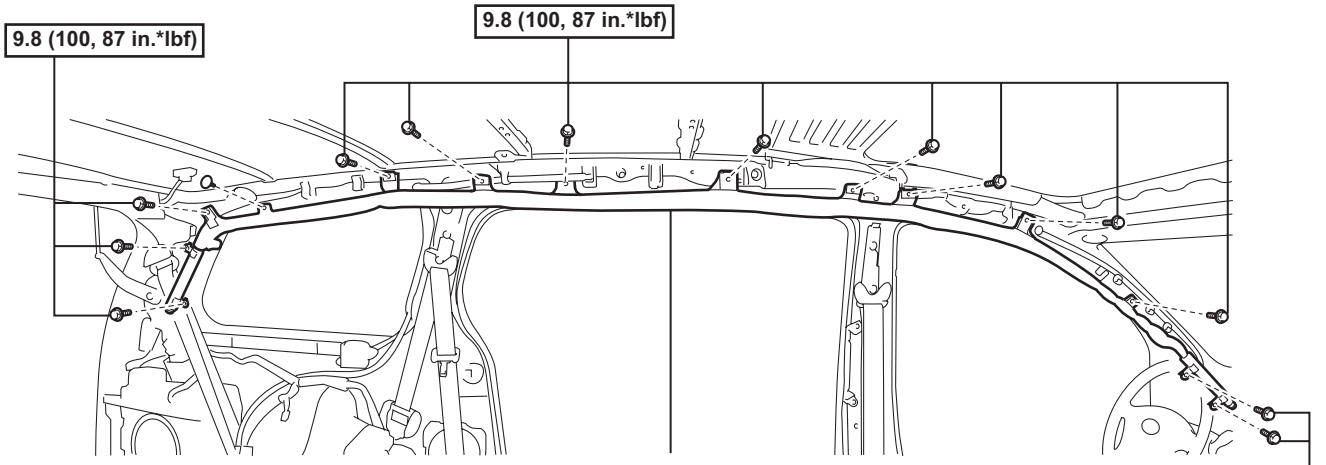

CURTAIN SHIELD AIRBAG ASSEMBLY LH

N*m (kgf*cm, ft.*lbf) : Specified torque

C


C119350E01

ON-VEHICLE INSPECTION

1. INSPECT CURTAIN SHIELD AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

(a) Perform a diagnostic system check (See page RS-27).

(b) With the curtain shield airbag assembly installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front pillar garnish RR window side garnish assembly No. 2 or roof headlining assembly with a new one:
Cuts, minute cracks or marked discoloration on the front pillar garnish RR window side garnish assembly No. 2 or roof headlining assembly around the curtain shield airbag assembly.

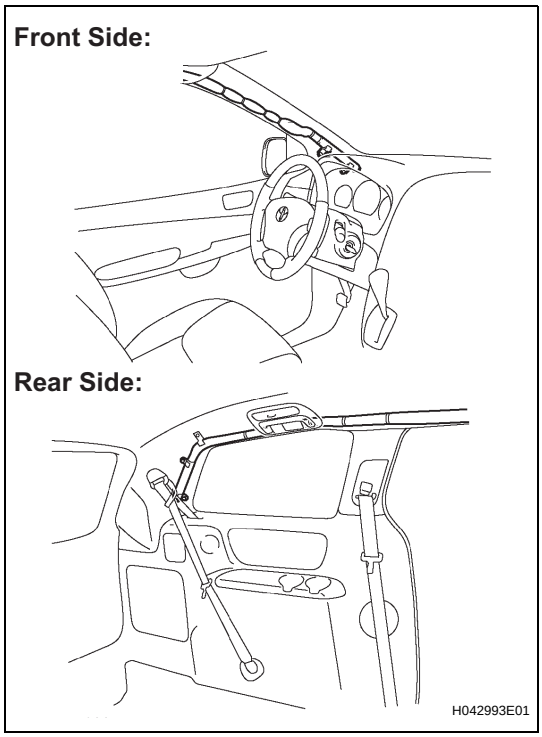

2. INSPECT CURTAIN SHIELD AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

(a) Perform a diagnostic system check (See page RS-27).

(b) With the curtain shield airbag assembly removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the curtain shield airbag assembly with a new one:

- Cuts, minute cracks or marked discoloration on the curtain shield airbag assembly.
- Cracks or other damage to the connector.

CAUTION:
Be sure to follow the correct removal and installation procedures.

