
CENTER AIRBAG SENSOR ASSEMBLY

COMPONENTS

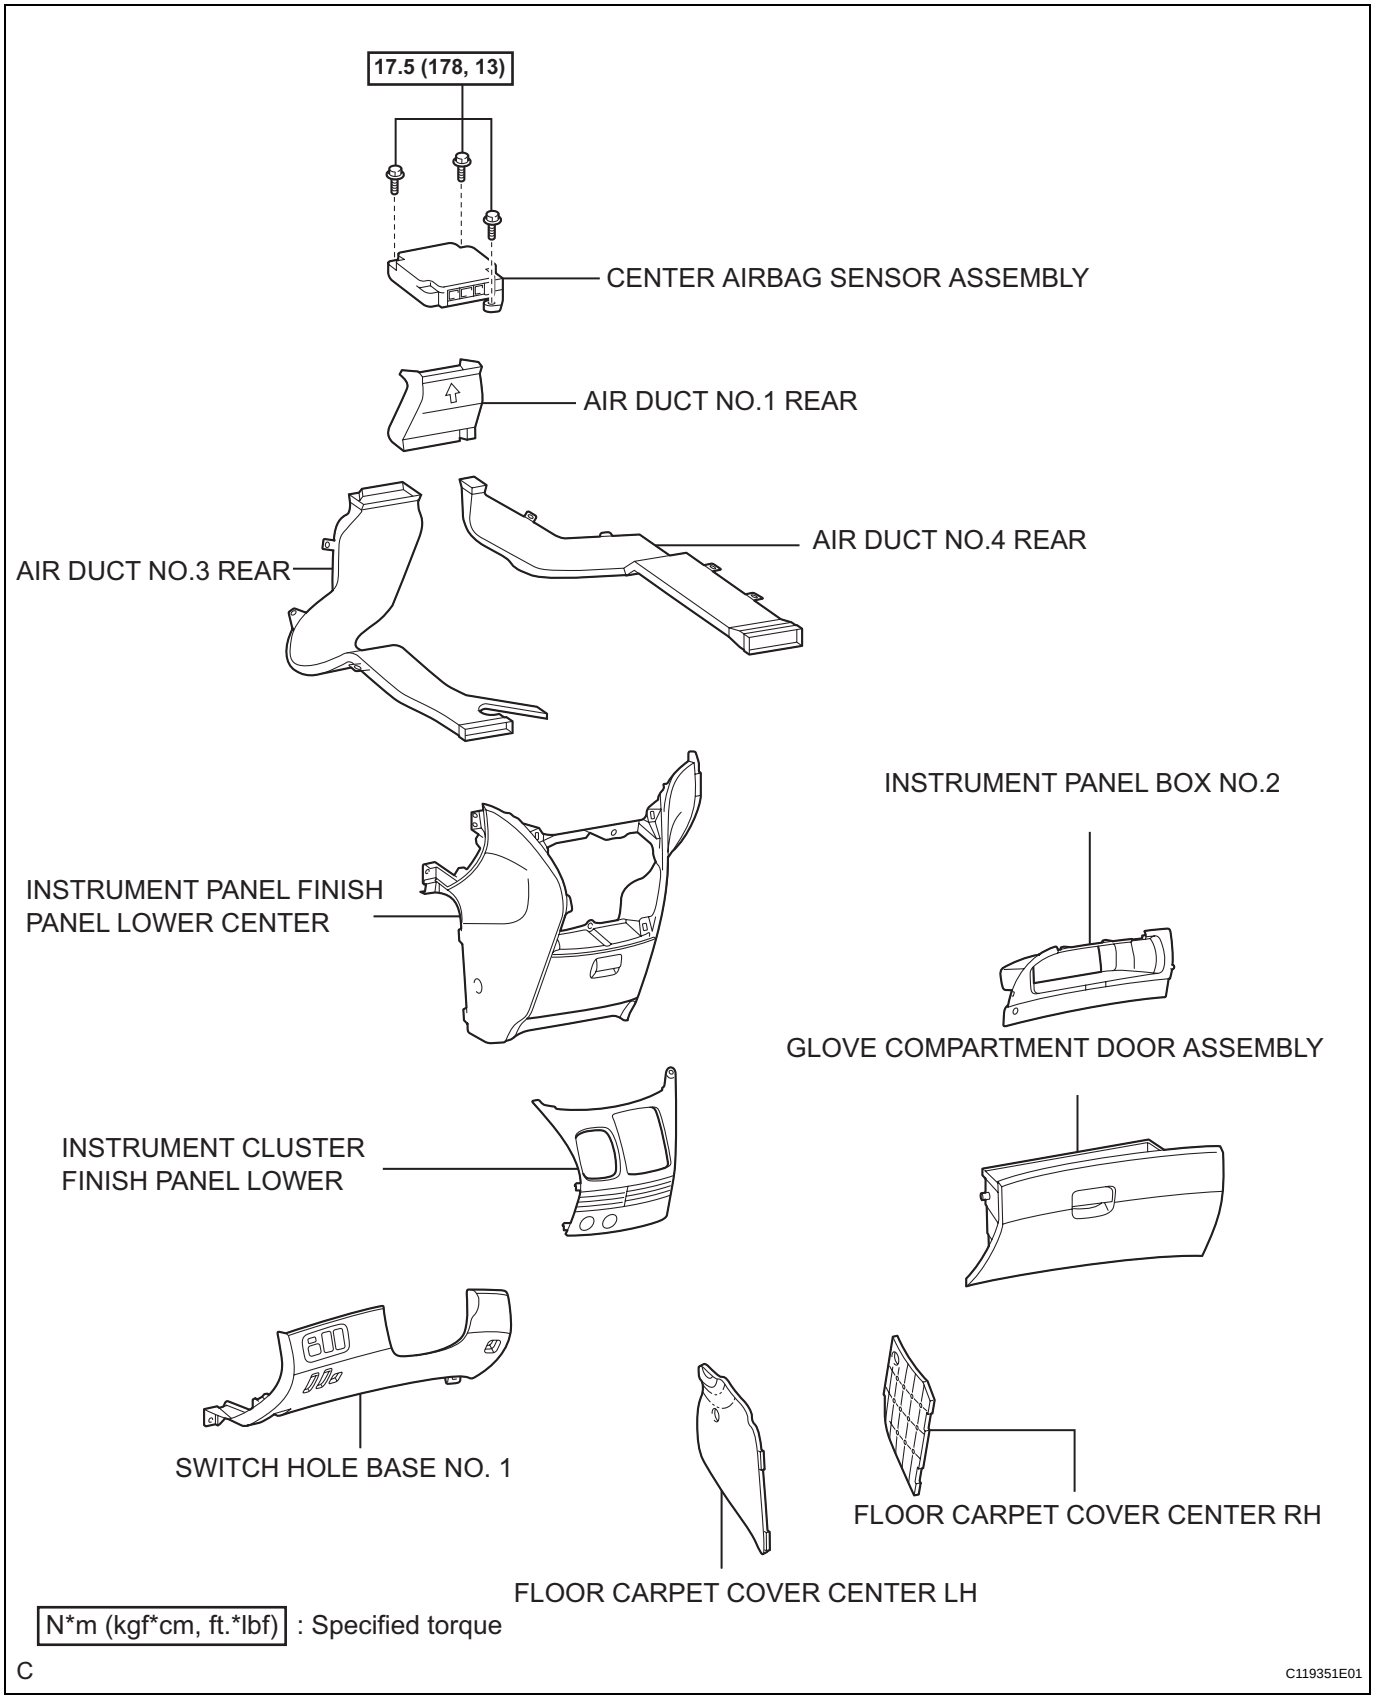

ON-VEHICLE INSPECTION

1. **INSPECT CENTER AIRBAG SENSOR ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)**
   (a) Perform a diagnosis system check (See page RS-27).

2. **INSPECT CENTER AIRBAG SENSOR ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)**
   (a) Perform a diagnosis system check (See page RS-27).

3. **INSPECT CENTER AIRBAG SENSOR ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS DEPLOYED)**
   (a) Replace the center airbag sensor assembly.
   CAUTION:
   Be sure to follow the correct removal and installation procedures.
   HINT:
   The center airbag sensor assembly should be replaced after any of the airbags has deployed, as it has been subjected to the impact.