
REMOVAL

1. **PRECAUTION**
   CAUTION:
   Be sure to read "PRECAUTION" thoroughly before servicing (See page RS-1).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
   CAUTION:
   Wait for 90 seconds after disconnecting the cable to prevent the airbag working.
3. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER LH (See page IP-6)**
4. **REMOVE FLOOR CARPET COVER CENTER LH (See page IP-8)**
5. **REMOVE FLOOR CARPET COVER CENTER RH**
   HINT:
   Use the same procedures for the floor carpet cover center RH and floor carpet cover center LH.
6. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page IP-7)**
7. **REMOVE INSTRUMENT PANEL BOX NO.2 (See page IP-7)**
8. **REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY CENTER (See page IP-9)**
9. **REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY LOWER CENTER (See page IP-9)**
10. **REMOVE AIR DUCT NO.4 REAR**
11. **REMOVE AIR DUCT NO.3 REAR**
12. **REMOVE AIR DUCT NO.1 REAR**
13. **REMOVE CENTER AIRBAG SENSOR ASSEMBLY**
    (a) Disconnect the 3 connectors from the center airbag sensor assembly.
    (b) Remove the 3 bolts and the center airbag sensor assembly.

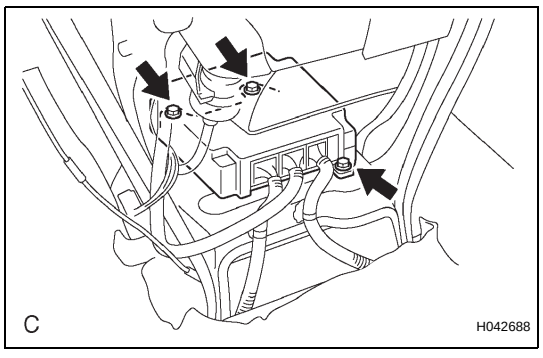


INSTALLATION

1. INSTALL CENTER AIRBAG SENSOR ASSEMBLY

(a) Check that the ignition switch is off.

(b) Check that the battery negative (-) terminal is disconnected.

CAUTION:
After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

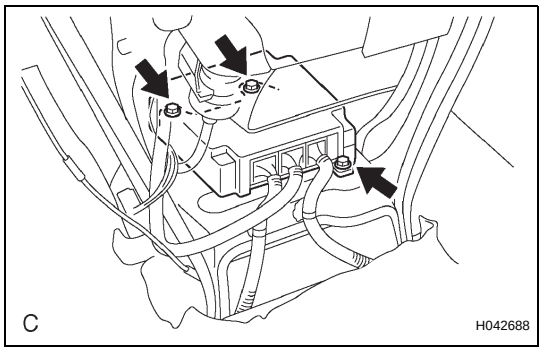

(c) Temporarily install the center airbag sensor assembly with the 3 bolts.

NOTICE:
- **If the center airbag sensor assembly has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the center airbag sensor assembly, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

(d) Tighten the 3 bolts to the specified torque.
Torque: 17.5 N*m (179 kgf*cm, 13 ft.*lbf)

(e) Check that there is no looseness in the installation parts of the center airbag sensor assembly.

(f) Connect the 3 connectors to the center airbag sensor assembly.

(g) Check that the waterproof sheet is properly set.

2. INSTALL AIR DUCT NO.1 REAR

3. INSTALL AIR DUCT NO.3 REAR

4. INSTALL AIR DUCT NO.4 REAR

5. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY LOWER CENTER
HINT:
(See page IP-15)

6. INSTALL INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY CENTER
HINT:
(See page IP-15)

7. INSTALL INSTRUMENT PANEL BOX NO.2
HINT:
(See page IP-15)

8. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY
HINT:
(See page IP-15)

9. INSTALL FLOOR CARPET COVER CENTER LH
HINT:
(See page IP-15)

10. **INSTALL FLOOR CARPET COVER CENTER RH**
HINT:
Use the same procedures for the floor carpet cover center RH and floor carpet cover center LH.

11. **INSTALL INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER LH**
HINT:
(See page IP-16)

12. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

13. **PERFORM INITIALIZATION**
(a) Perform initialization.
HINT:
Some systems need initialization when disconnecting the cable from the negative battery terminal.

14. **INSPECT SRS WARNING LIGHT**
(a) Inspect the SRS warning light (See page RS-27).