
REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. **PRECAUTION**
   CAUTION:
   Be sure to read "PRECAUTION" thoroughly before servicing (See page RS-1).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
   CAUTION:
   Wait for 90 seconds after disconnecting the cable to prevent the airbag working.
3. **REMOVE FRONT DOOR SCUFF PLATE LH**
   HINT:
   (See page IR-7)
4. **REMOVE REAR DOOR SCUFF PLATE LH**
   HINT:
   (See page IR-7)
5. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**
   HINT:
   (See page IR-7)
6. **REMOVE REAR DOOR WEATHERSTRIP LH (See page IR-7)**
7. **REMOVE LAP BELT OUTER ANCHOR COVER LH**
8. **REMOVE CENTER PILLAR GARNISH LOWER LH (See page IR-8)**
9. **REMOVE FRONT SEAT OUTER BELT ASSEMBLY (See page SB-7)**
10. **REMOVE SIDE AIRBAG SENSOR LH**
    (a) Disconnect the connector from the side airbag sensor LH.
    (b) Remove the 2 nuts and the side airbag sensor LH.

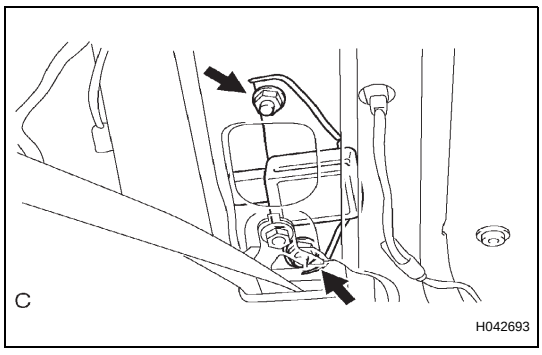


INSTALLATION

HINT:
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL SIDE AIRBAG SENSOR LH

(a) Check that the ignition switch is off.

(b) Check that the battery negative (-) terminal is disconnected.
CAUTION:
After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

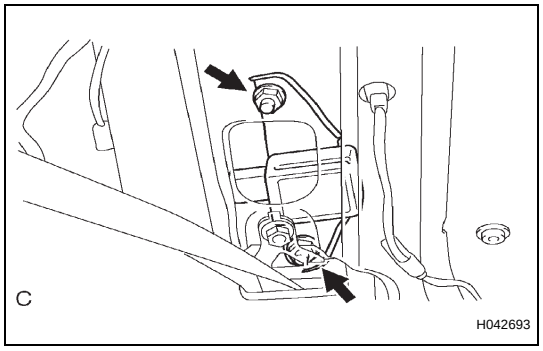

(c) Install the side airbag sensor LH with the 2 nuts.
Torque: 17.5 N*m (179 kgf*cm, 13 ft.*lbf)
NOTICE:
- **If the side airbag sensor LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the side airbag sensor LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

(d) Check that there is no looseness in the installation parts of the side airbag sensor LH.

(e) Connect the connector to the side airbag sensor LH.

2. INSTALL FRONT SEAT OUTER BELT ASSEMBLY
HINT:
(See page SB-8)

3. INSTALL CENTER PILLAR GARNISH LOWER LH
HINT:
(See page SB-8)

4. INSTALL LAP BELT OUTER ANCHOR COVER LH

5. INSTALL REAR DOOR WEATHERSTRIP LH

6. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

7. INSTALL FRONT DOOR SCUFF PLATE LH
HINT:
(See page SB-8)

8. INSTALL REAR DOOR SCUFF PLATE LH
HINT:
(See page SB-8)

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

10. PERFORM INITIALIZATION

(a) Perform initialization.

HINT:

Some systems need initialization when disconnecting the cable from the negative battery terminal.

11. INSPECT SRS WARNING LIGHT

(a) Inspect the SRS warning light (See page RS-27).