
REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. **PRECAUTION**
   CAUTION:
   Be sure to read "PRECAUTION" thoroughly before servicing (See page RS-1).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
   CAUTION:
   Wait for 90 seconds after disconnecting the cable to prevent the airbag working.
3. **REMOVE REAR DOOR SCUFF PLATE RH (See page IR-7)**
4. **REMOVE REAR DOOR WEATHERSTRIP RH (See page IR-7)**
5. **REMOVE BACK DOOR WEATHERSTRIP**
   HINT:
   (See page SB-21)
6. **REMOVE BACK DOOR SCUFF PLATE (See page IR-8)**
7. **REMOVE LAP BELT OUTER ANCHOR COVER**
8. **REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH (See page SB-21)**
9. **REMOVE AIR DUCT ASSEMBLY**
   (a) Remove the screw and the air duct assembly.
10. **REMOVE REAR AIRBAG SENSOR LH**
    (a) Disconnect the connector from the rear airbag sensor LH.
    (b) Remove the 2 bolts and the rear airbag sensor LH.

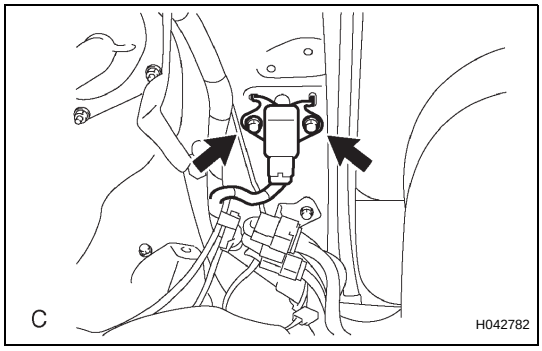

INSTALLATION

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL REAR AIRBAG SENSOR LH

(a) Check that the ignition switch is off.

(b) Check that the battery negative (-) terminal is disconnected.

CAUTION:
After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

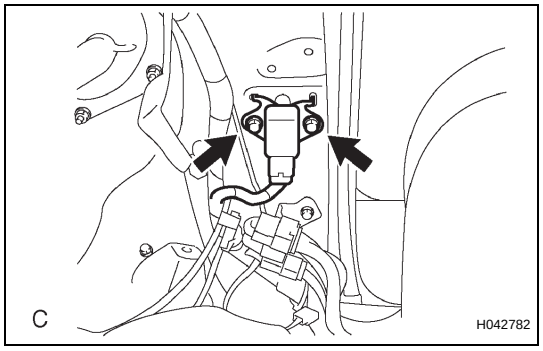

(c) Install the rear airbag sensor LH with the 2 bolts.
Torque: 17.5 N*m (179 kgf*cm, 13 ft.*lbf)
CAUTION:
- **If the rear airbag sensor LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the rear airbag sensor LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

(d) Check that there is no looseness in the installation parts of the rear airbag sensor LH.

(e) Connect the connector to the rear airbag sensor LH.

2. INSTALL AIR DUCT ASSEMBLY

3. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH (See page SB-24)

4. INSTALL LAP BELT OUTER ANCHOR COVER

5. INSTALL BACK DOOR SCUFF PLATE
HINT:
(See page SB-24)

6. INSTALL BACK DOOR WEATHERSTRIP
HINT:
(See page SB-24)

7. INSTALL REAR DOOR WEATHERSTRIP RH
HINT:
(See page SB-24)

8. INSTALL REAR DOOR SCUFF PLATE RH
HINT:
(See page SB-24)

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

RS

10. PERFORM INITIALIZATION

(a) Perform initialization.

HINT:

Some systems need initialization when disconnecting the cable from the negative battery terminal.

11. INSPECT SRS WARNING LIGHT

(a) Inspect the SRS warning light (See page RS-27).