RS

REMOVAL

1. **PRECAUTION**
   CAUTION:
   Be sure to read "PRECAUTION" thoroughly before servicing (See page RS-1).


2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
   CAUTION:
   Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. **REMOVE FRONT SEAT ASSEMBLY (for Manual Seat)**
   HINT:
   (See page SE-48)


4. **REMOVE FRONT SEAT ASSEMBLY (for Power Seat)**
   HINT:
   (See page SE-58)

5. **REMOVE OCCUPANT CLASSIFICATION ECU**
   (a) Disconnect the 2 connectors from the occupant classification ECU.

   (b) Using a screwdriver, remove the occupant classification ECU.

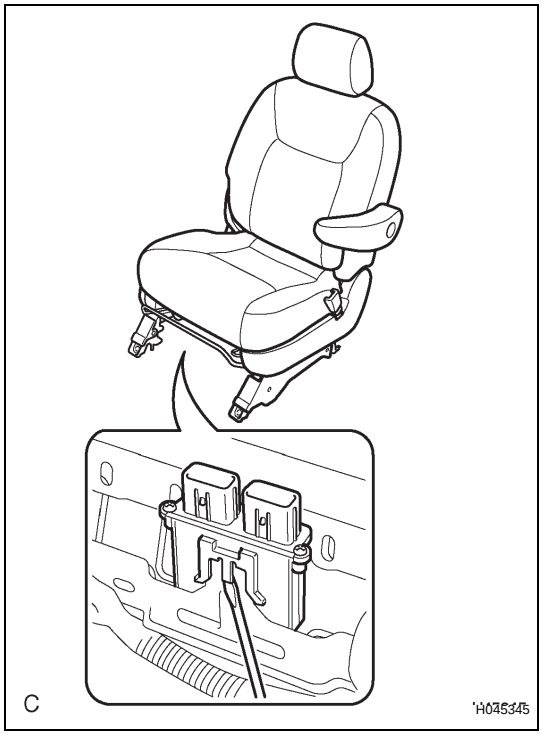

INSTALLATION

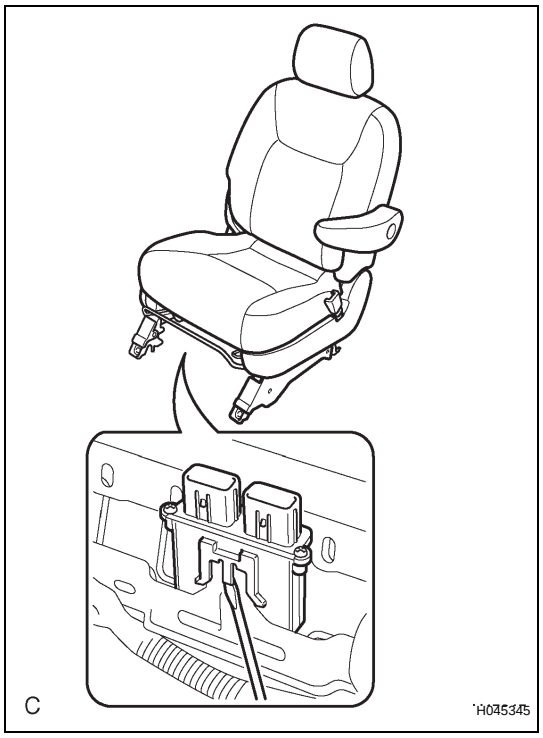

1. **INSTALL OCCUPANT CLASSIFICATION ECU**
   (a) Check that the ignition switch is off.
   (b) Check that the negative battery (-) terminal is disconnected.
   CAUTION:
   After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.
   (c) Install the occupant classification ECU.
   (d) Connect the 2 connectors to the occupant classification ECU.
   NOTICE:
   - **If the occupant classification ECU has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.**
   - **When installing the occupant classification ECU, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**
2. **INSTALL FRONT SEAT ASSEMBLY (for Manual Seat)**
   HINT:
   (See page SE-55)
3. **INSTALL FRONT RH SEAT ASSEMBLY (for Power Seat)**
   HINT:
   (See page SE-66)
4. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
5. **PERFORM INITIALIZATION**
   (a) Perform initialization.
   HINT:
   Some systems need initialization when disconnecting the cable from the negative battery terminal.
6. **INSPECT SLIDE ADJUSTER LOCK (for Manual Seat)**
7. **INSPECT POWER SEAT OPERATION (for Power Seat)**
8. **INSPECT SEAT HEATER OPERATION (w/ Seat Heater System)**
9. **INSPECT SRS WARNING LIGHT**
   (a) Inspect the SRS warning light (See page RS-27).

RS