
SEAT BELT WARNING SYSTEM

PARTS LOCATION

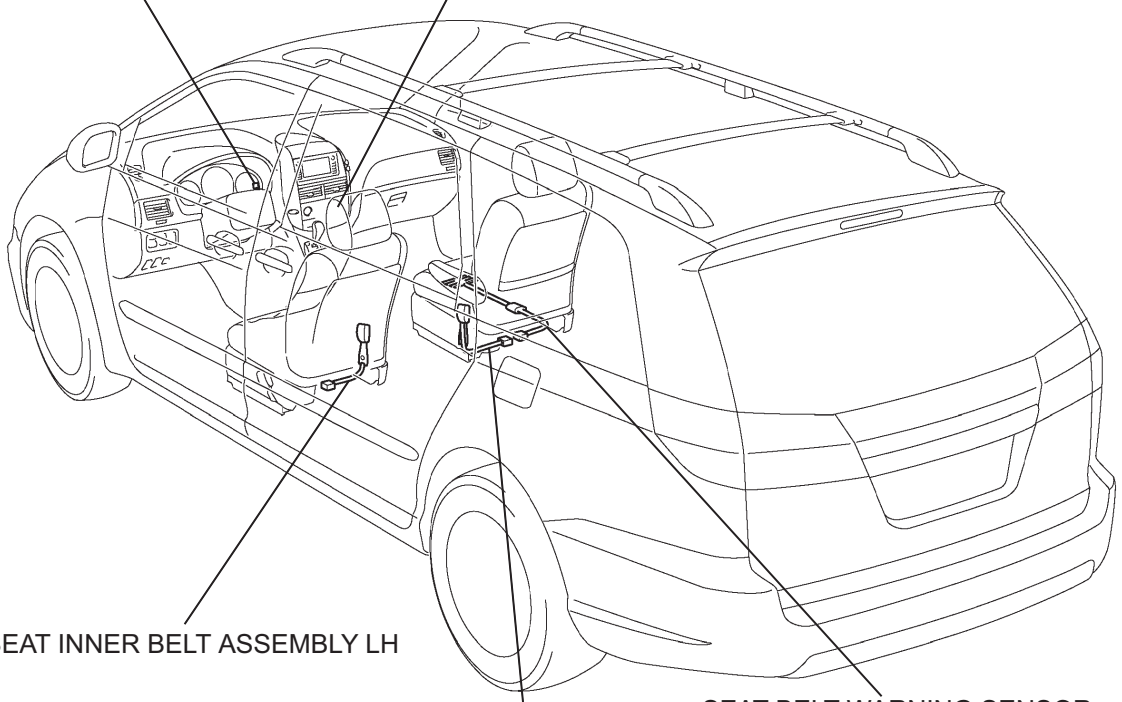

Y

B127540E01

PROBLEM SYMPTOMS TABLE

SEAT BELT WARNING SYSTEM

Symptom	Suspected Area	See page
Driver side seat belt waning light does not operate	1. Fuse	-
	2. Combination meter	ME-6
	3. Center airbag sensor assembly	RS-466
	4. Front seat inner belt assembly LH	SB-4
	5. Wire harness	-
Front passenger side seat belt warning light does not operate	1. Fuse	-
	2. Passenger side seat belt warning light assembly	SB-4
	3. Front seat inner belt assembly LH	SB-4
	4. Wire harness	-