
FRONT SEAT INNER BELT ASSEMBLY

COMPONENTS

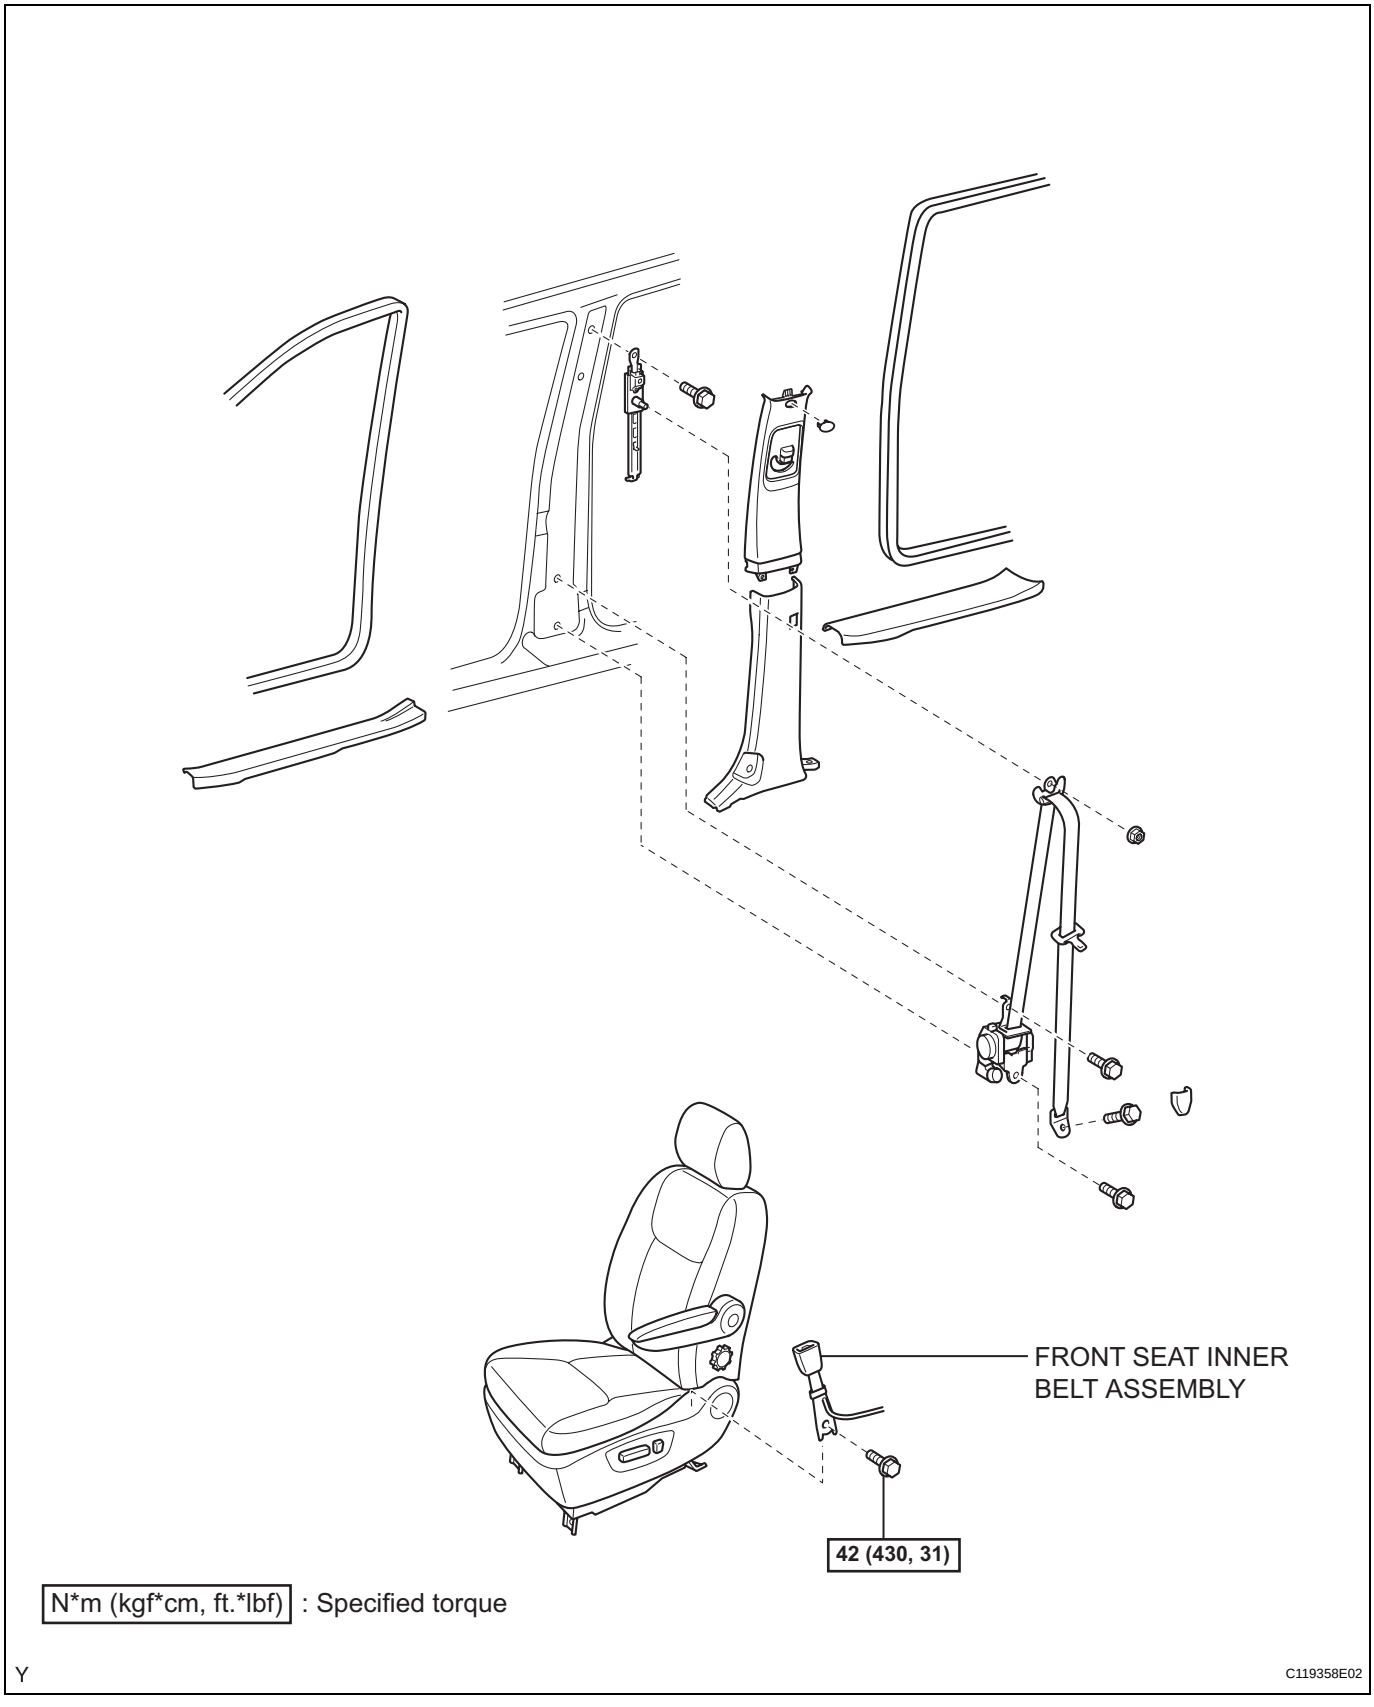

N*m (kgf*cm, ft.*lbf) : Specified torque

Y

C119358E02

SB

SB

REMOVAL

1. REMOVE FRONT SEAT INNER BELT ASSEMBLY

HINT:

- Refer to the instructions for disassembly of the front seat assembly (for flat type) (See page SE-40).
- Refer to the instructions for disassembly of the front seat assembly (for manual seat) (See page SE-48).
- Refer to the instructions for disassembly of the front seat assembly (for power seat) (See page SE-58).

(a) Remove the nut and front seat inner belt assembly.

INSPECTION

1. INSPECT FRONT SEAT INNER BELT ASSEMBLY RH


(a) Release the seat belt (Buckle switch is ON).

(b) Check the resistance between the terminals.

Standard

Terminal No.	Specified Condition
1 - 2	Below 1 Ω

If the result is not as specified, replace the inner belt assembly.

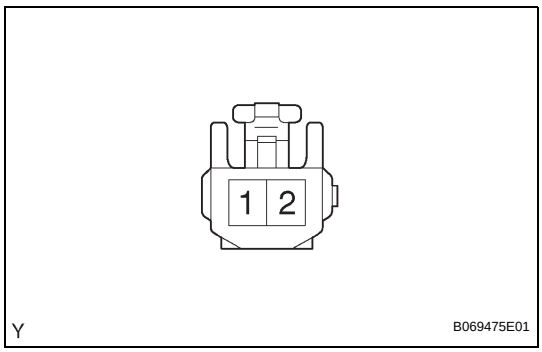


(c) Inspect the buckle switch.

(1) Fasten the seat belt (Buckle switch is OFF).

(2) Check the resistance between the terminals.

Standard

Terminal No.	Specified Condition
1 - 2	10 kΩor higher

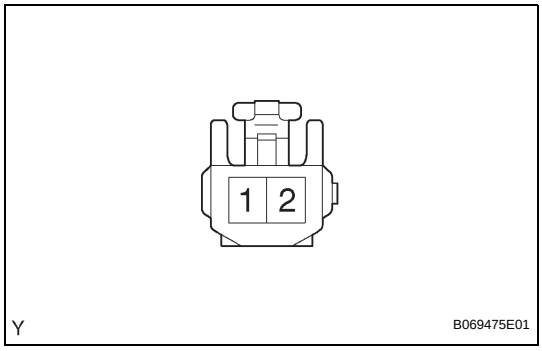


(d) Inspect the circuit for the airbag seat position sensor.

(1) Check the resistance between the terminals.

Standard

Terminal No.	Specified Condition
1 - 2 (Connector for airbag seat position sensor)	Below 1 Ω

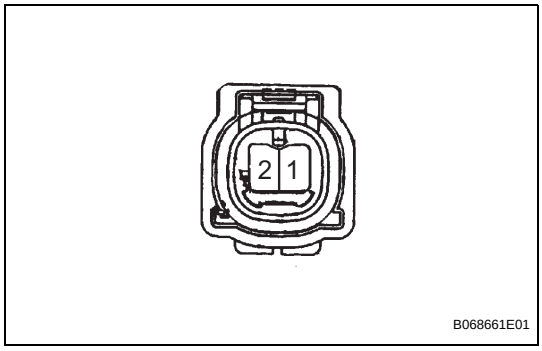

If the result is not as specified, replace the seat cushion assembly.

2. INSPECT FRONT SEAT INNER BELT ASSEMBLY LH


(a) Inspect the buckle switch.


(1) Fasten the seat belt (Buckle switch is ON).

(2) Check the resistance between the terminals.

Standard

Terminal No.	Specified Condition
1 - 2	330 Ω

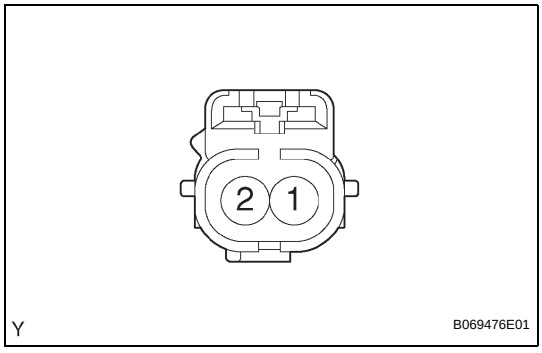

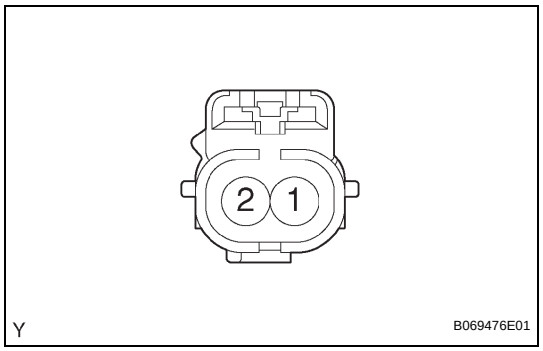

(b) Release the seat belt (Buckle switch is OFF).
(c) Check the resistance between the terminals.

Standard

Terminal No.	Specified Condition
1 - 2	1,330 Ω

If the result is not as specified, replace the inner belt assembly.