
FRONT SEAT OUTER BELT ASSEMBLY

COMPONENTS

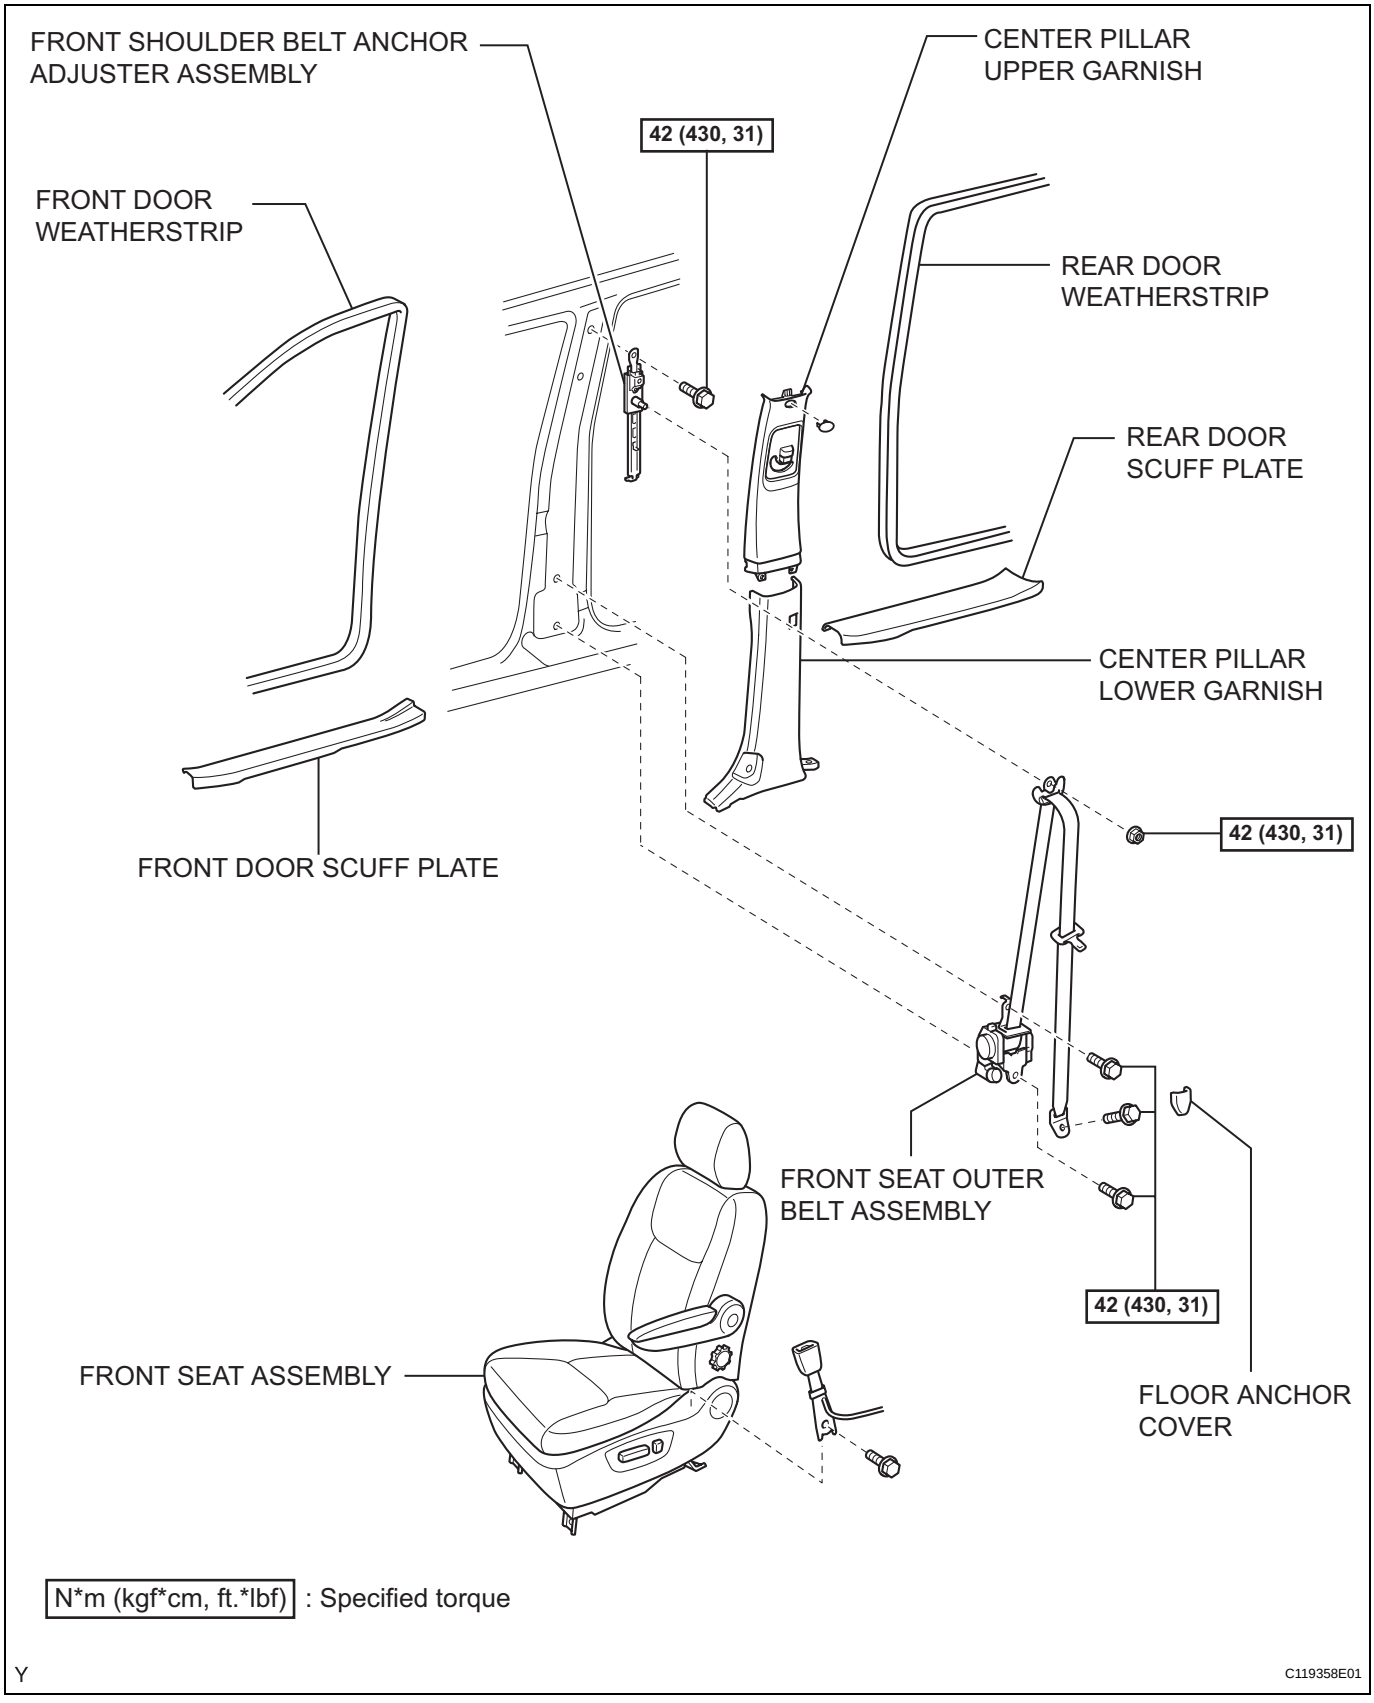

N*m (kgf*cm, ft.*lbf) : Specified torque

Y

C119358E01

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
   CAUTION:
   Wait for 90 seconds after disconnecting the cable to prevent the airbag working (See page RS-1).

2. **REMOVE FRONT SEAT ASSEMBLY**
   HINT:
   - Refer to the instructions for removal of the front seat assembly (for flat type) (See page SE-40).
   - Refer to the instructions for removal of the front seat assembly (for manual seat) (See page SE-48).
   - Refer to the instructions for removal of the front seat assembly (for power seat) (See page SE-58).

3. **REMOVE FRONT DOOR SCUFF PLATE (See page IR-7)**

4. **REMOVE REAR DOOR SCUFF PLATE (See page IR-7)**


5. **REMOVE FRONT DOOR WEATHERSTRIP**

6. **REMOVE REAR DOOR WEATHERSTRIP (See page IR-7)**

7. **REMOVE CENTER PILLAR LOWER GARNISH (See page IR-8)**

8. **REMOVE FRONT SEAT OUTER BELT ASSEMBLY**
   NOTICE:
   - **Removal operation concerning the seat belt with the pretensioner must be started in 90 seconds or more after the ignition switch is turned OFF and the battery negative terminal is disconnected.**
   - **Carefully read the notices for the "pretensioner" in the SRS airbag system and the outer belt assembly.**

   (a) Remove the floor anchor cover.
   (b) Remove the bolt and the front seat outer belt assembly on the floor anchor side.
   (c) Remove the nut and the front seat outer belt assembly on the shoulder anchor side.
   (d) Disconnect the pretensioner connector, as shown in the illustration.
   (e) Remove the 2 bolts and front seat outer belt assembly.

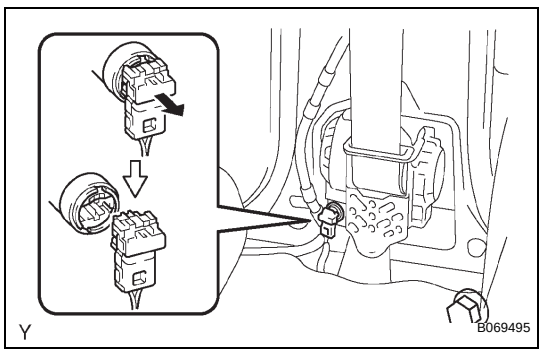

9. **REMOVE CENTER PILLAR UPPER GARNISH (See page IR-8)**

10. **REMOVE FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY**
    (a) Remove the bolt and front shoulder belt anchor adjuster assembly.

SB