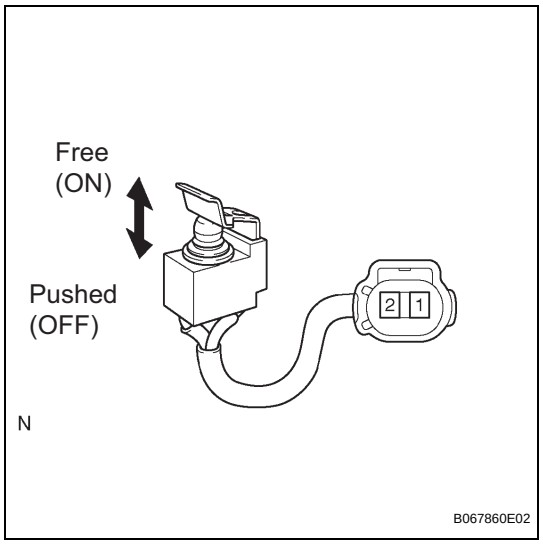


ENGINE HOOD COURTESY SWITCH

INSPECTION

1. INSPECT ENGINE HOOD COURTESY SWITCH

(a) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Switch Position	Specified Condition
1 - 2	Pushed (OFF)	10 kΩ or higher
	Free (ON)	Below 1 Ω

If the result is not as specified, replace the hood lock assembly.