
# REASSEMBLY


**1. INSTALL LIGHT CONTROL ECU (DISCHARGE HEADLIGHT)**

(a) Install a new headlight leveling motor base packing.

(b) Install the headlight leveling motor assembly as shown in the illustration.

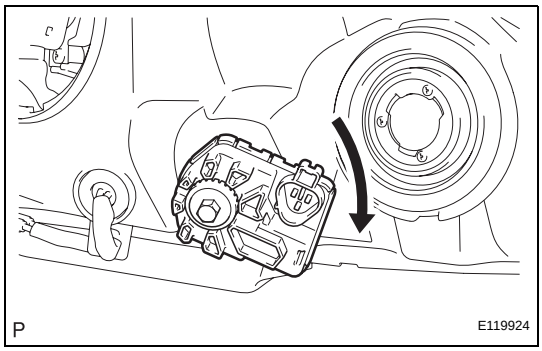



(c) Connect the connector with the claw.

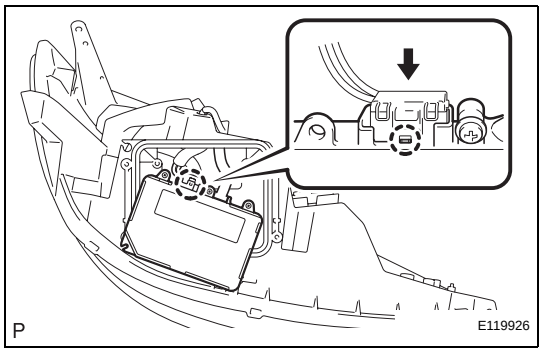


(d) Install the light control ECU with the 2 screws.


(e) Install a new headlight gasket.

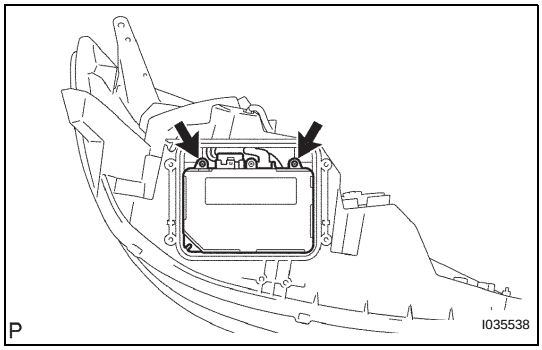



(f) Install the headlight cover with the 4 screws.

**2. INSTALL FRONT SIDE MARKER LIGHT BULB**

(a) Install the side marker light bulb to the side marker light socket.

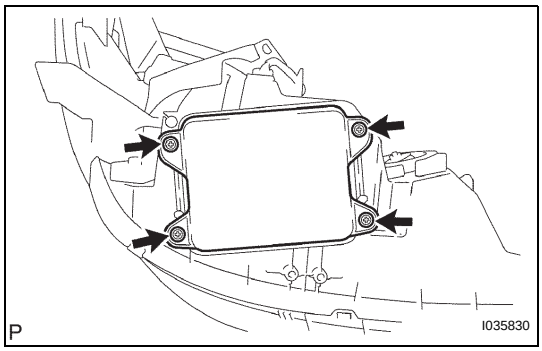



LI

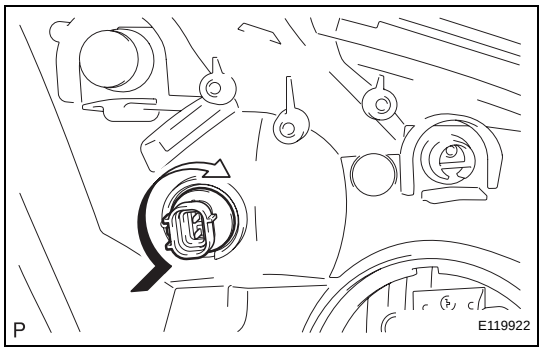


(b) Turn in the direction indicated by the arrow and install the side marker light bulb and side marker light socket as a unit.


**3. INSTALL FRONT TURN SIGNAL LIGHT BULB**

(a) Install the front turn signal light bulb to the front turn signal light socket.

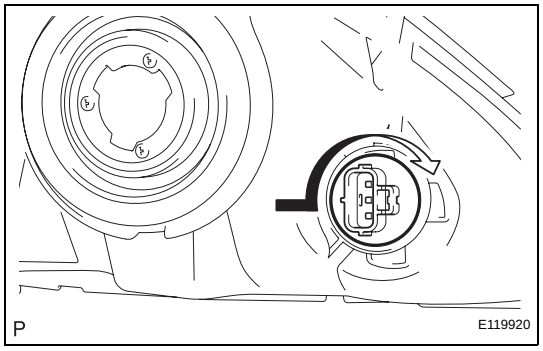



(b) Turn in the direction indicated by the arrow and install the front turn signal light bulb and front turn signal light socket as a unit.



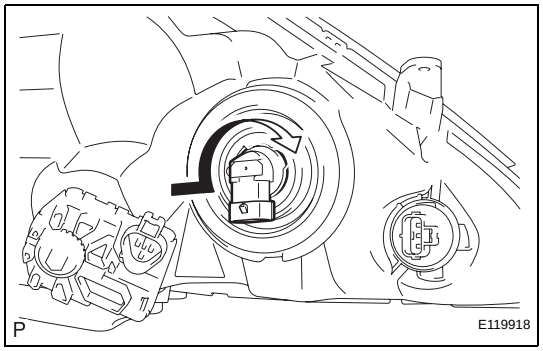



**4. INSTALL NO. 2 HEADLIGHT BULB**

(a) Turn in the direction indicated by the arrow and install the No.2 headlight bulb.

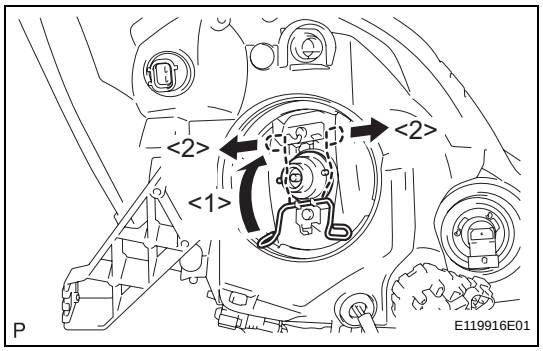



**5. INSTALL DISCHARGE HEADLIGHT BULB (DISCHARGE HEADLIGHT)**


(a) Install the discharge headlight bulb with the set spring as shown in the illustration.

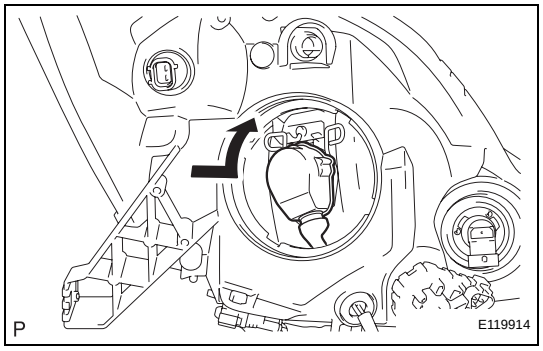


(b) Turn in the direction indicated by the arrow and install the socket.

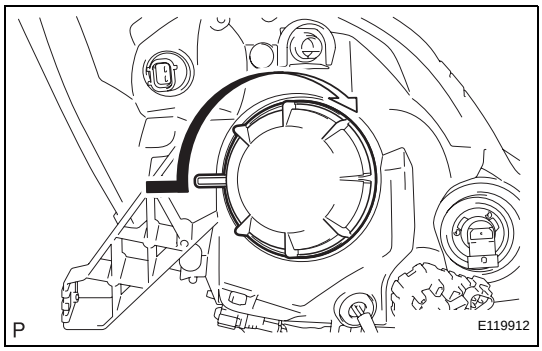


(c) Turn in the direction indicated by the arrow and install the headlight socket cover.

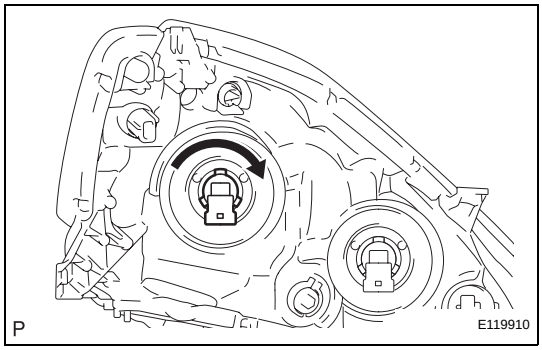


**6. INSTALL NO. 1 HEADLIGHT BULB (HALOGEN HEADLIGHT)**

(a) Turn in the direction indicated by the arrow and install the No.1 headlight bulb.