
REMOVAL

1. **REMOVE BACK DOOR GARNISH CENTER (See page ED-214)**
2. **REMOVE BACK DOOR SIDE GARNISH LH (See page ED-214)**
3. **REMOVE BACK DOOR SIDE GARNISH RH (See page ED-214)**
4. **REMOVE BACK DOOR STRAP COVER**
5. **REMOVE BACK DOOR PULL STRAP (See page ED-214)**
6. **REMOVE BACK DOOR TRIM BOARD ASSEMBLY (See page ED-214)**
7. **REMOVE BACK DOOR GARNISH SUB-ASSEMBLY OUTSIDE (See page ET-39)**
8. **REMOVE LICENSE PLATE LIGHT ASSEMBLY**
   (a) Release the 2 claw fittings and disconnect the license plate light assembly.
   (b) Disconnect the connector and remove the license plate light assembly.

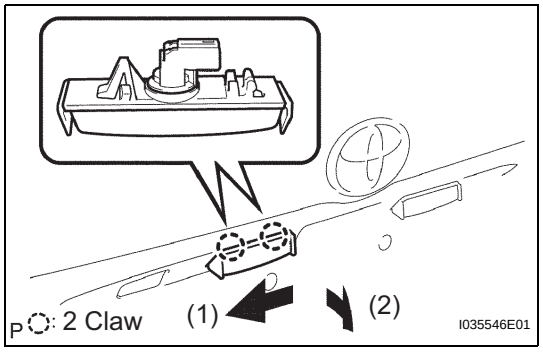

DISASSEMBLY

1. **REMOVE LICENSE PLATE LIGHT LENS GASKET**
2. **REMOVE LICENSE PLATE LIGHT BULB**
   (a) Remove the license plate light bulb and the license plate light socket plug.
   (b) Remove the license plate light bulb from the license plate light socket plug.
3. **REMOVE LICENSE PLATE LIGHT SOCKET PLUG**
4. **REMOVE LICENSE PLATE LIGHT LENS**