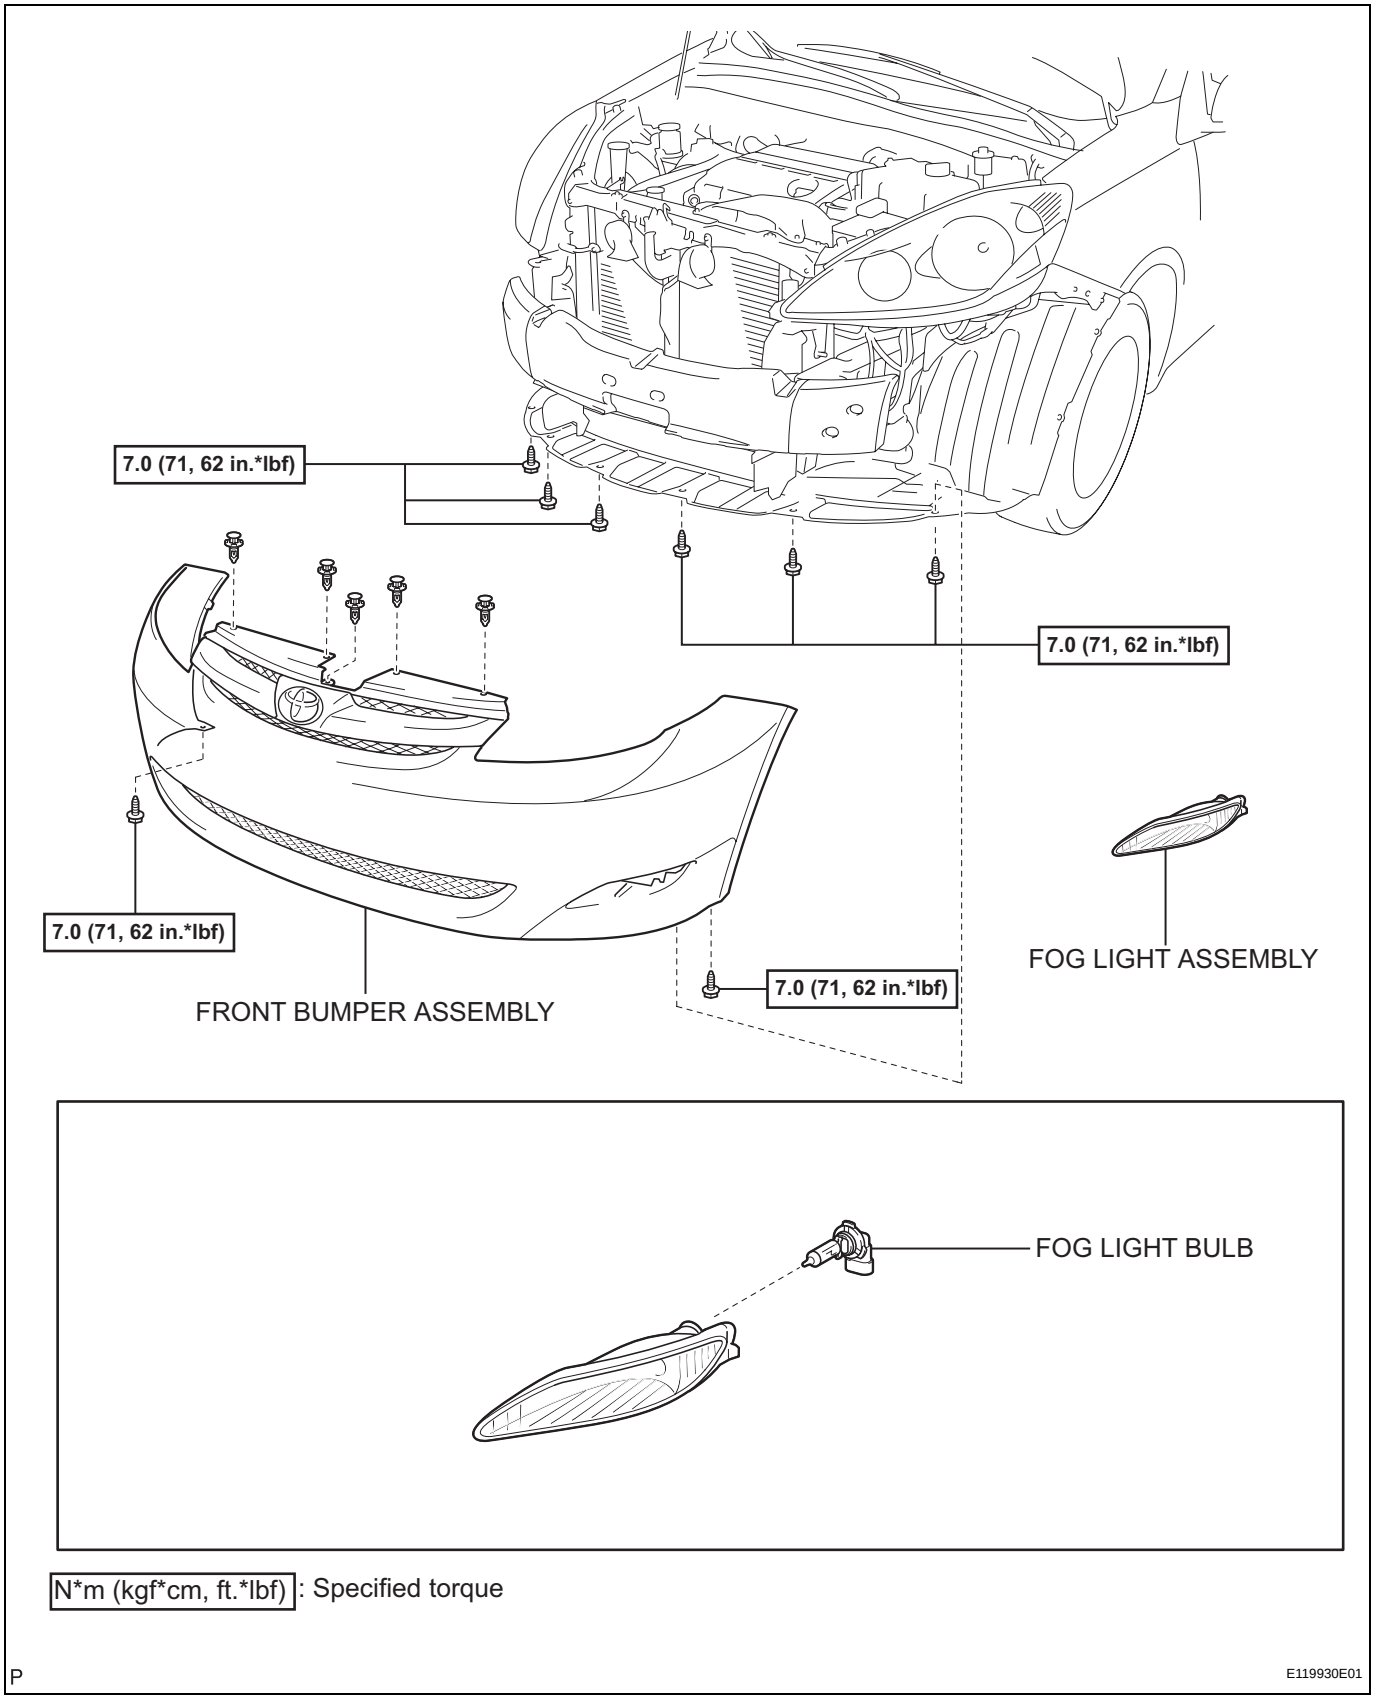
# FOG LIGHT ASSEMBLY

## COMPONENTS



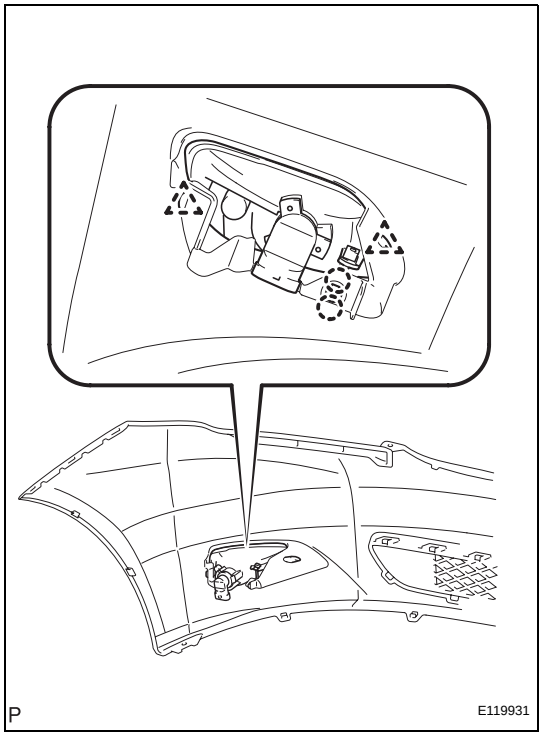

N*m (kgf*cm, ft.*lbf) : Specified torque

P

E119930E01

# REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT BUMPER ASSEMBLY (See page ET-3)**
3. **REMOVE FOG LIGHT ASSEMBLY**
   (a) Disengage the 2 claws
   (b) Disengage the 2 pins and remove the fog light assembly.






# DISASSEMBLY

1. **REMOVE FOG LIGHT BULB**
   (a) Turn in the direction indicated by the arrow and remove the fog light bulb.

