
REAR COMBINATION LIGHT ASSEMBLY

COMPONENTS

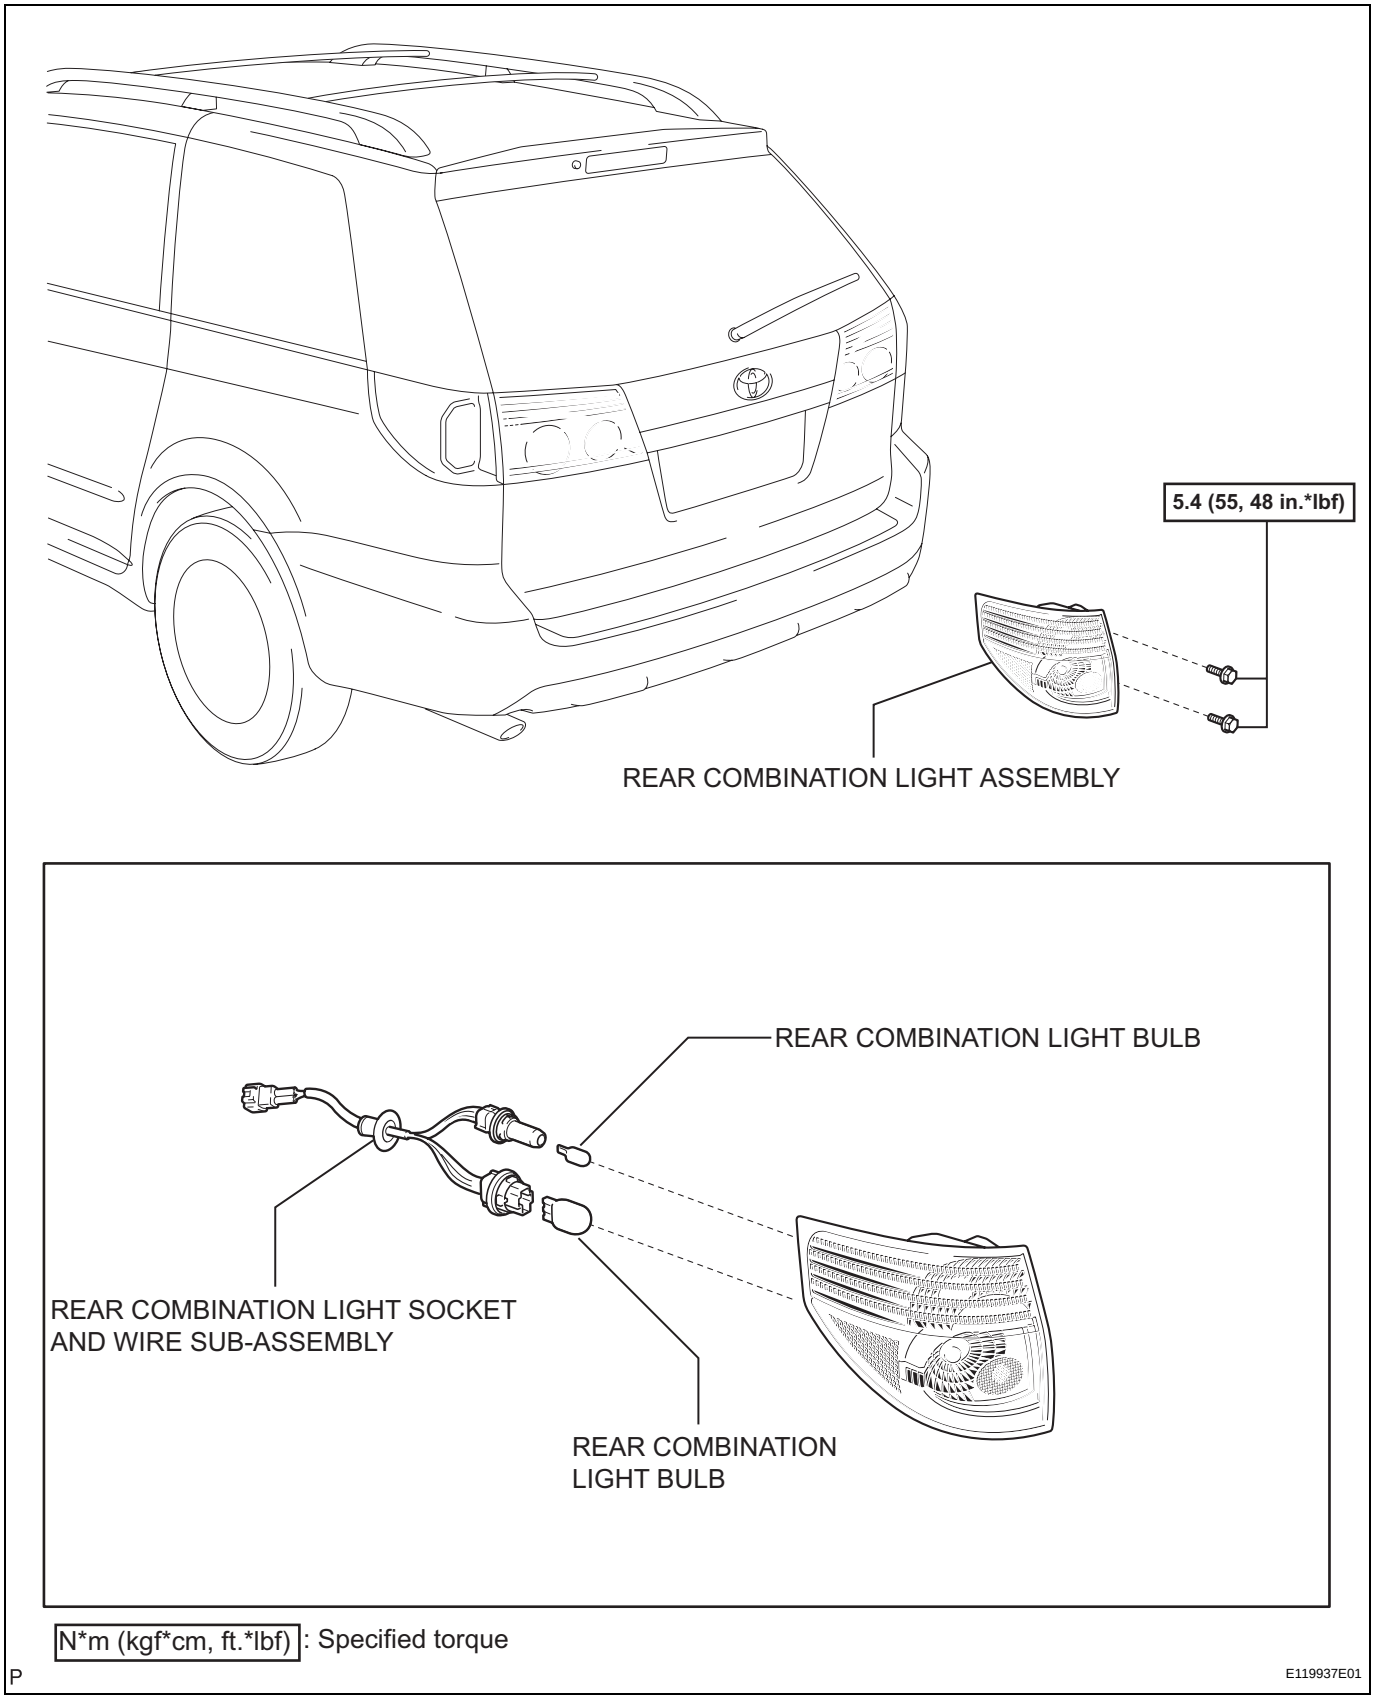


N*m (kgf*cm, ft.*lbf) : Specified torque

P

E119937E01

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

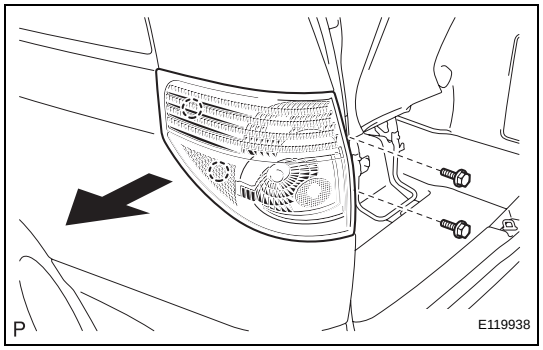

2. REMOVE REAR COMBINATION LIGHT ASSEMBLY


(a) Remove the 2 bolts.

(b) Disengage the 2 pins and separate the rear combination light assembly as shown in the illustration.

(c) Disconnect the connector and remove the rear combination light assembly.

DISASSEMBLY

1. REMOVE REAR COMBINATION LIGHT BULB

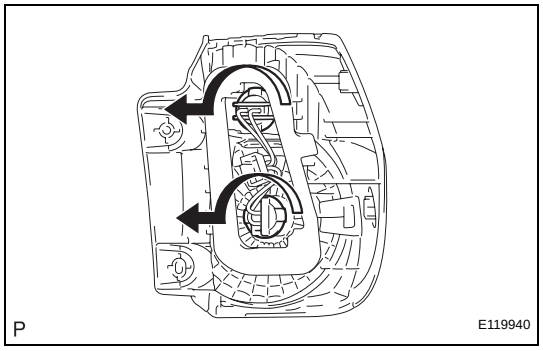

(a) Turn in the direction indicated by the arrow and separate the 2 rear combination light bulbs.

(b) Remove the 2 rear combination light bulbs from the rear combination light socket and wire sub-assembly.