
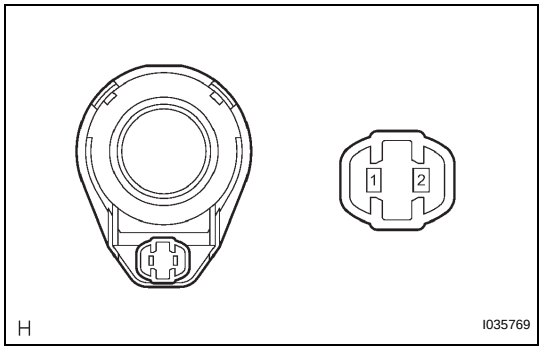


IGNITION KEY CYLINDER LIGHT

ON-VEHICLE INSPECTION

1. KEY CYLINDER LIGHT ASSEMBLY

(a) Connect the battery positive (+) lead to the terminal 1 and the battery negative (-) lead to the terminal 2, and check that the indicator light comes on.

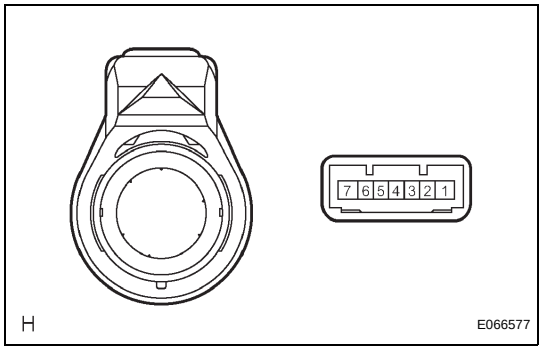

2. TRANSPONDER KEY AMPLIFIER

(a) Inspect key cylinder light operation.

(1) Connect the battery positive (+) lead to the terminal 2 and the battery negative (-) lead to the terminal 6, and check that the indicator light comes on.