
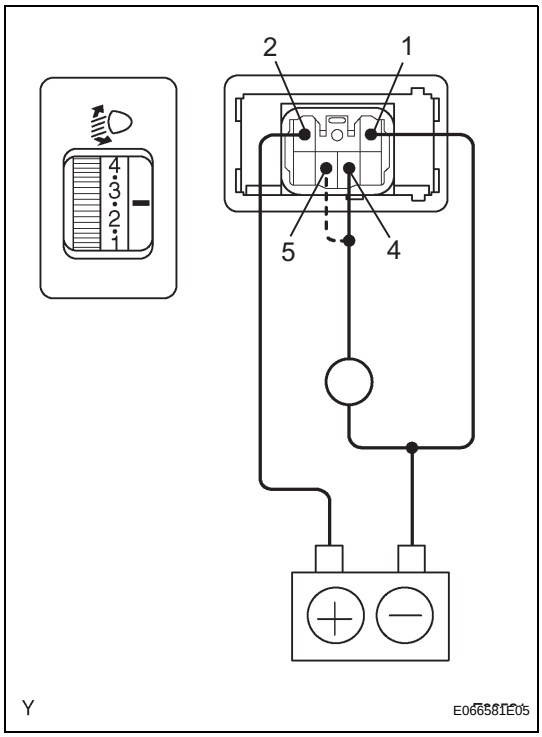


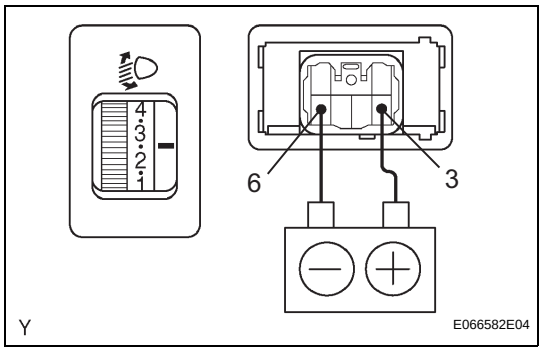

HEADLIGHT LEVELING SWITCH

ON-VEHICLE INSPECTION

1. HEADLIGHT LEVELING SWITCH

(a) Connect the battery positive (+) lead to the terminal 1 and the battery negative (-) lead to the terminal 5.

(b) Measure the resistance between the terminal 4 and the battery negative (-) lead when headlight leveling switch is operated.

(c) Measure the resistance between the terminal 5 and the battery negative (-) lead when headlight leveling switch is operated.

Voltage

Switch position	Specified voltage (V)
0	9.0 to 12.6
1	7.9 to 11.1
2	6.9 to 9.6
3	5.8 to 8.2
4	4.7 to 6.6
5	3.7 to 5.1

(d) Inspect switch illumination.

(1) Connect the battery positive (+) lead to the terminal 3 and the battery negative (-9 lead to the terminal 6, and check that the illumination comes on.

LI