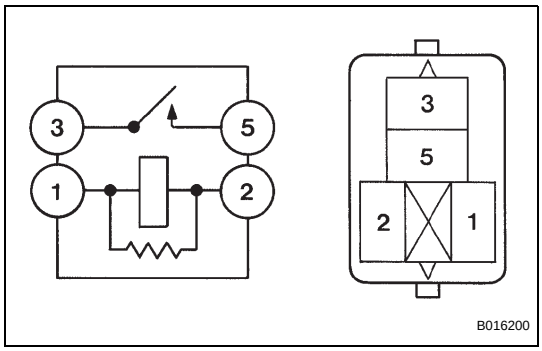



# LIGHT CONTROL RELAY

## ON-VEHICLE INSPECTION

### 1. LIGHT CONTROL RELAY

(a) Inspect relay resistance.

**Resistance**

| Condition | Tester Connection | Specified Condition |
|---|---|---|
| Always | 3 - 5 | 10 kΩ to higher |
| Apply B+ between the terminal 1 and 2 | 3 - 5 | Below 1 Ω |