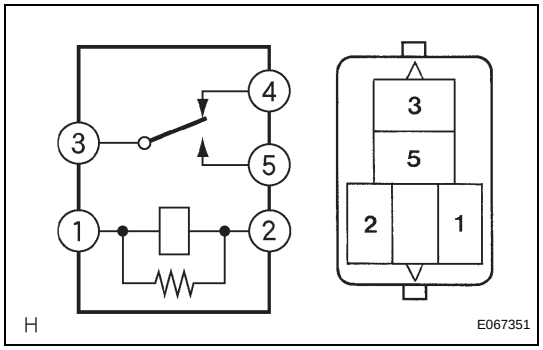


BRK RELAY

ON-VEHICLE INSPECTION

1. BRK RELAY

(a) Inspect relay resistance.

Resistance

Condition	Tester Connection	Specified Condition
Always	3 - 4	Below 1 Ω
Always	3 - 5	10 kΩ or higher
Apply B+ between the terminal 1 and 2	3 - 5	Below 1 Ω