
REAR WIPER RUBBER

COMPONENTS

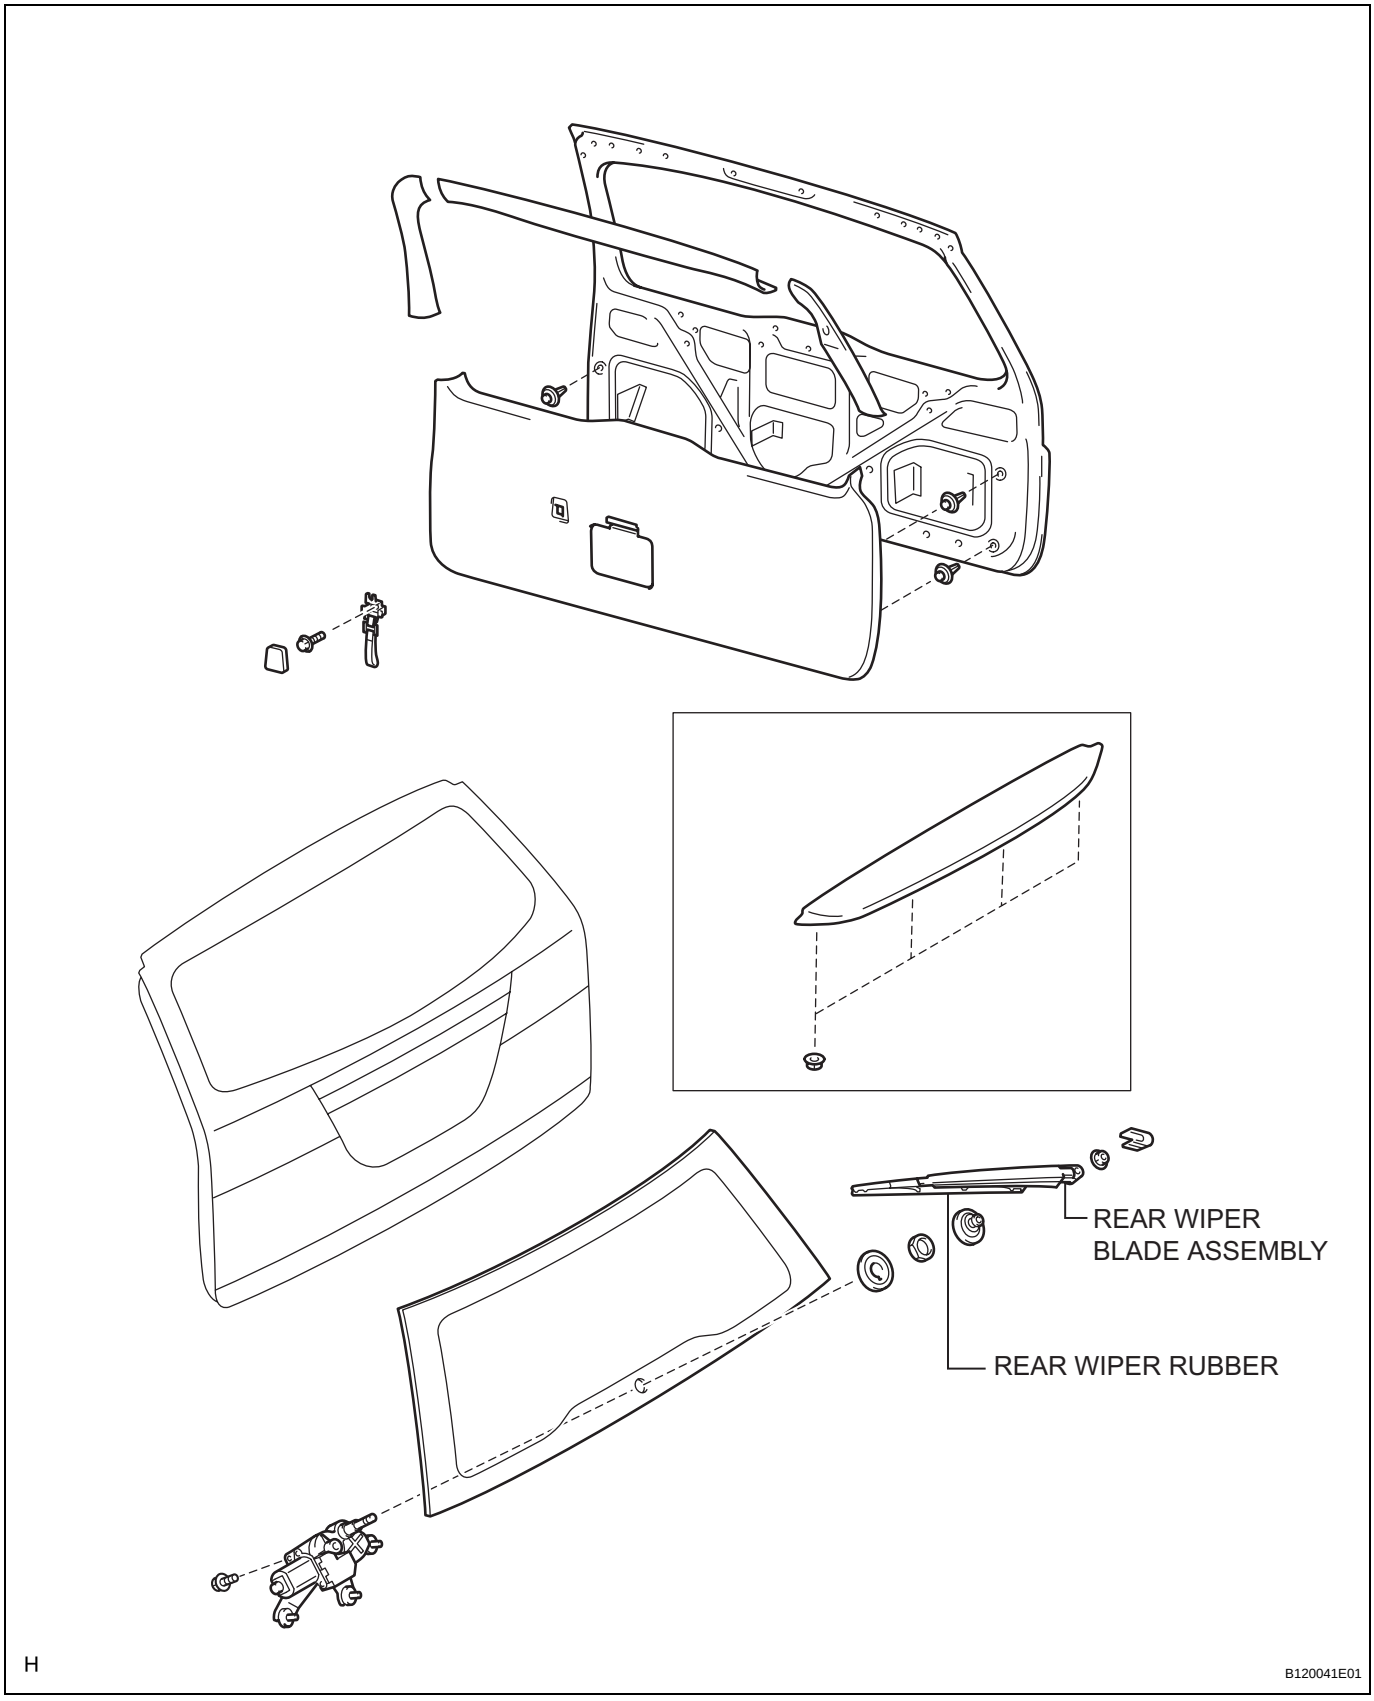


REMOVAL

1. REMOVE REAR WIPER BLADE ASSEMBLY

(a) Remove the rear wiper arm head cap from the rear wiper arm.


(b) Raise the rear wiper blade to the position as shown in the illustration where the meshing of the claw is disengaged with the click sound.
NOTICE:
Be careful not to break the claw.

(c) Pull the rear wiper blade straight from the wiper arm toward the left side of the vehicle.
NOTICE:
Do not fold the rear wiper arm with the rear wiper blade being removed from it.

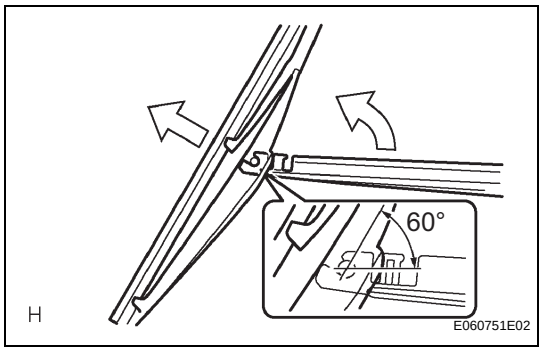

2. REMOVE REAR WIPER RUBBER


(a) Pull the end of the rubber protruded from the blade stopper as shown in the illustration.
NOTICE:
Do do not pull out the wiper rubber forcibly. Otherwise, the backing plates are deformed or blade claw is damaged.
HINT:
Pushing the position close to the middle of the blade raises the rubber, making easier to pull the rubber out.

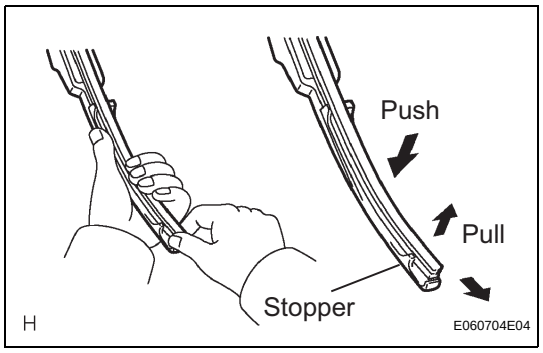

INSTALLATION

1. INSTALL REAR WIPER RUBBER

(a) Install the 2 wiper rubber backing plates to the rear wiper rubber.
NOTICE:
Be sure to install the wiper rubber backing plates in the right direction.

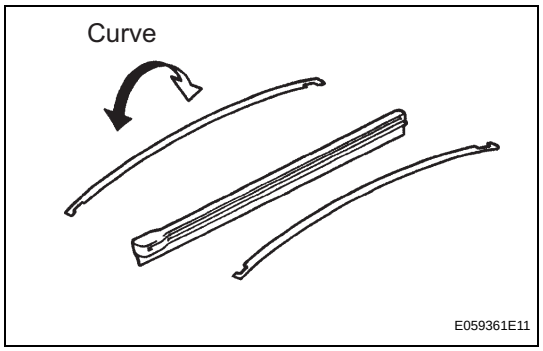

WW