
WASHER NOZZLE

ADJUSTMENT

1. REMOVE WASHER NOZZLE

(a) With the engine running, check that the point where the washer fluid hits the rear window is within the range indicated by the hatched line.

Rear:

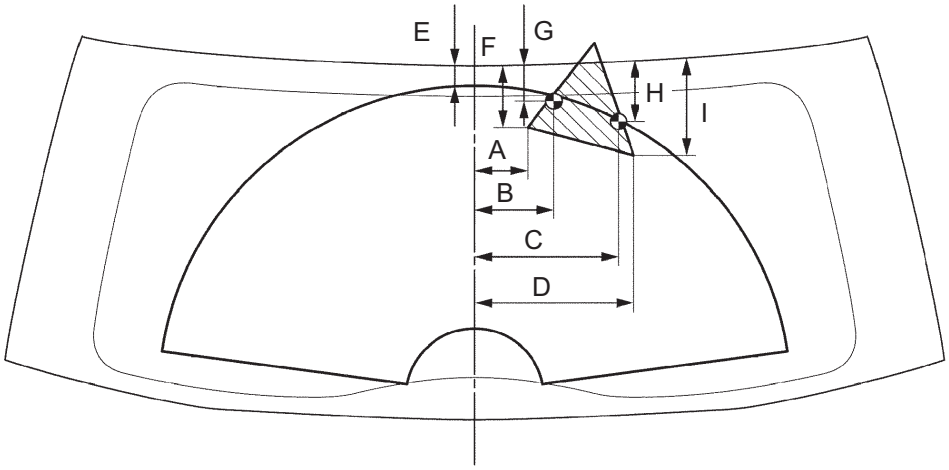

A: 86mm (3.39 in.)
B: 126mm (4.97 in.)
C: 230mm (9.07 in.)
D: 254mm (9.99 in.)
E: 31mm (1.21 in.)
F: 99mm (3.91 in.)
G: 57mm (2.22 in.)
H: 93mm (3.67 in.)
I: 149mm (5.87 in.)

P

I035786E01

WW