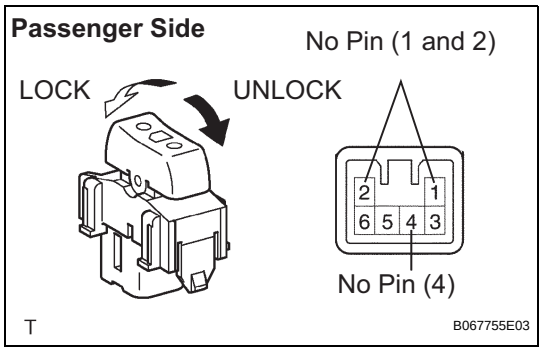


DOOR CONTROL SWITCH

INSPECTION

1. INSPECT DOOR CONTROL SWITCH ASSEMBLY

(a) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Condition	Specified Condition
3 - 6	Lock	Below 1 Ω
3 - 5 3 - 6	OFF (Free)	10 kΩ or higher
3 - 5	Unlock	Below 1 Ω

HINT:

If the result is not as specified, replace the switch.