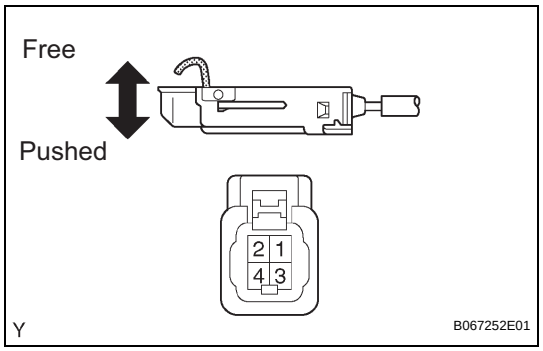


UNLOCK WARNING SWITCH

INSPECTION

1. INSPECT UNLOCK WARNING SWITCH ASSEMBLY

(a) Remove the unlock warning switch assembly .

(b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Switch Position	Specified Condition
1 - 2	Free	10 kΩ or higher
1 - 2	Pushed	Below 1 Ω