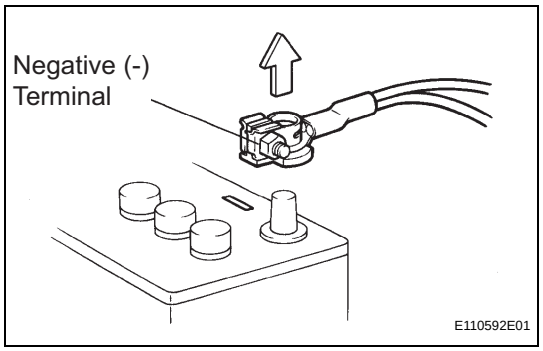

METER / GAUGE SYSTEM

PRECAUTION

1. REMOVAL AND INSTALLATION OF THE BATTERY TERMINAL

(a) Before performing electrical work, disconnect the battery negative (-) terminal in order to prevent a short in the system.

(b) When disconnecting and reconnecting the battery cable, turn the ignition switch and lighting switches off and loosen the terminal nut completely. Perform these operations without prying on the terminal.

(c) When the battery terminal is disconnected, the memories of the clock, radio, DTCs, etc. are erased. Before disconnecting the terminal, check and make a note of them.

PARTS LOCATION

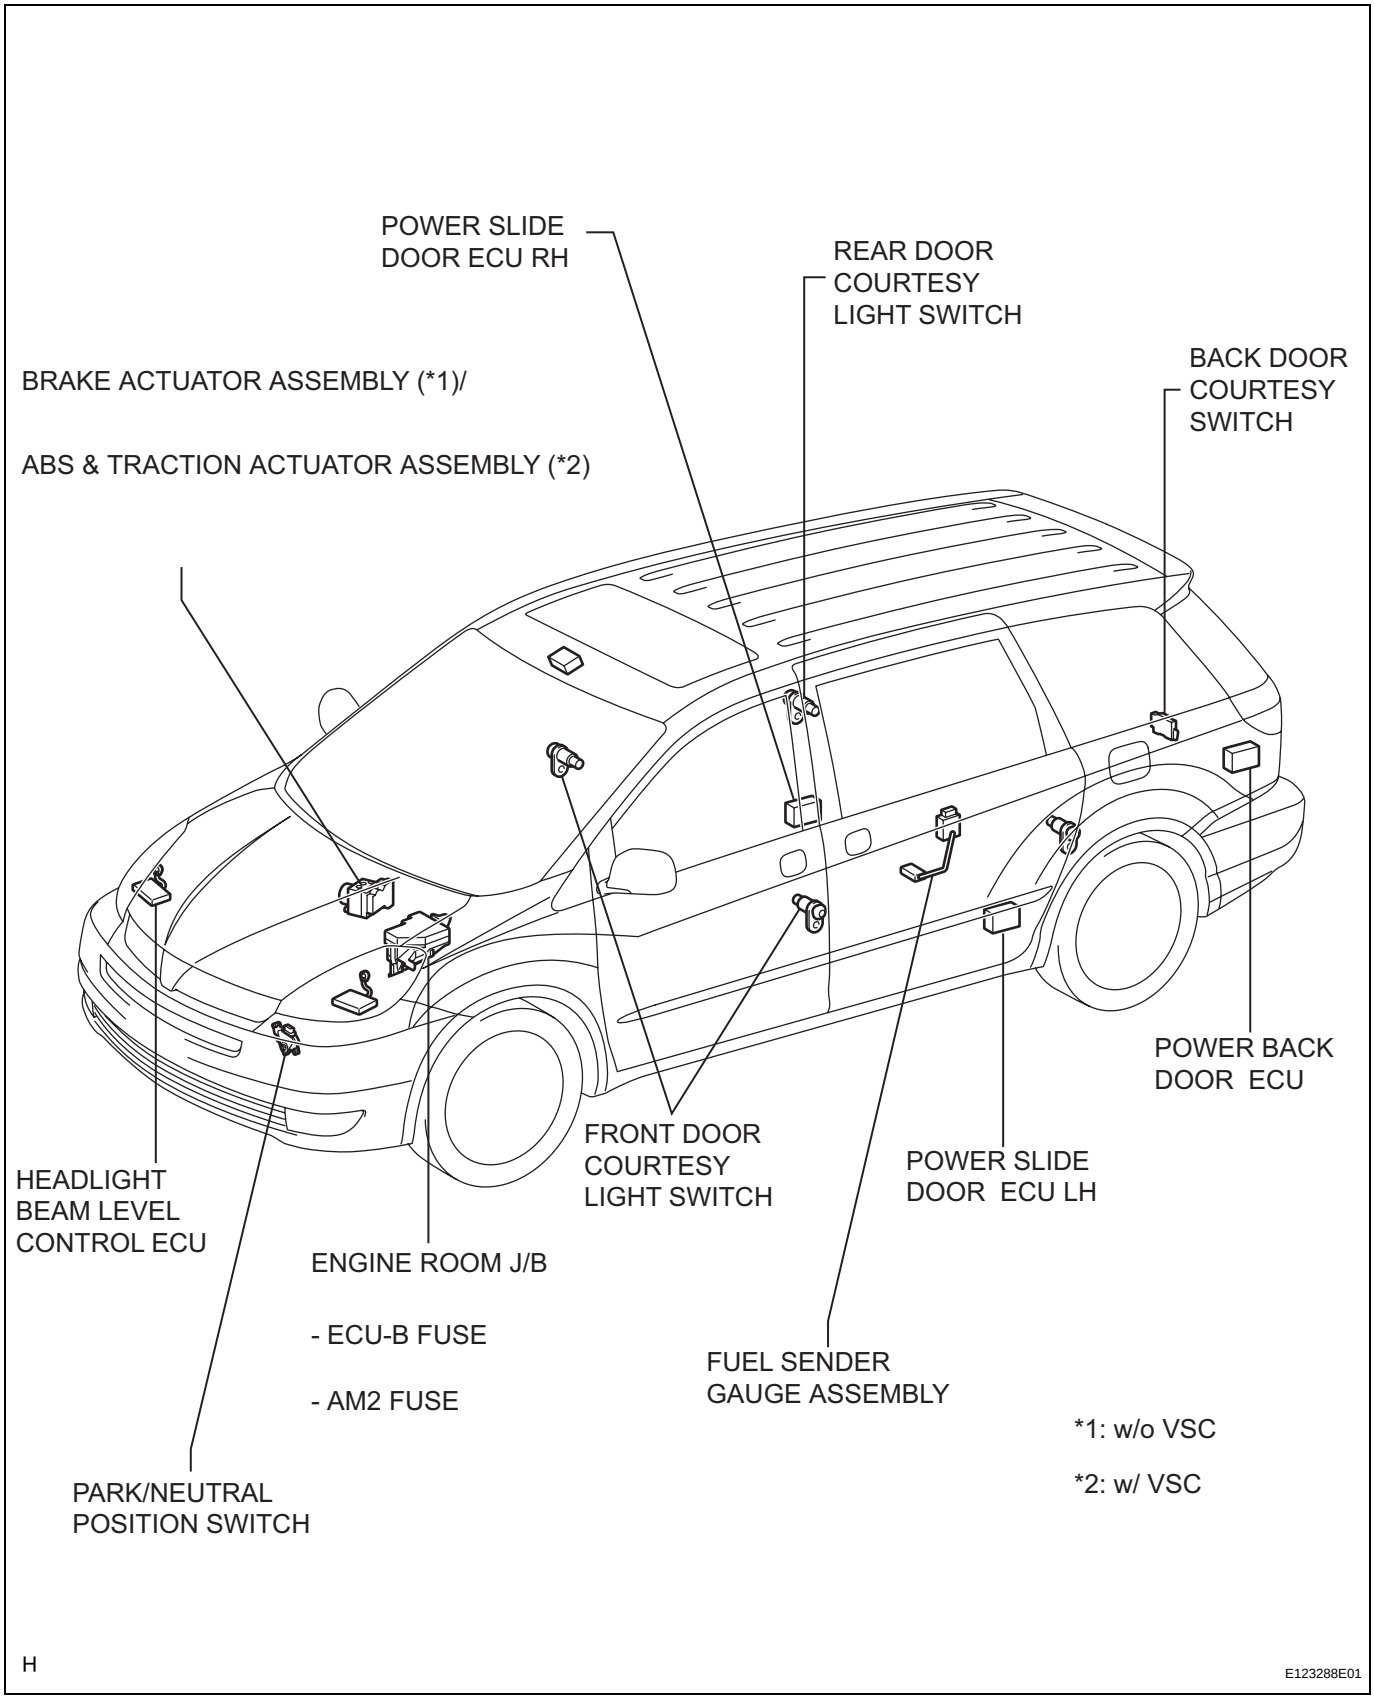

ME

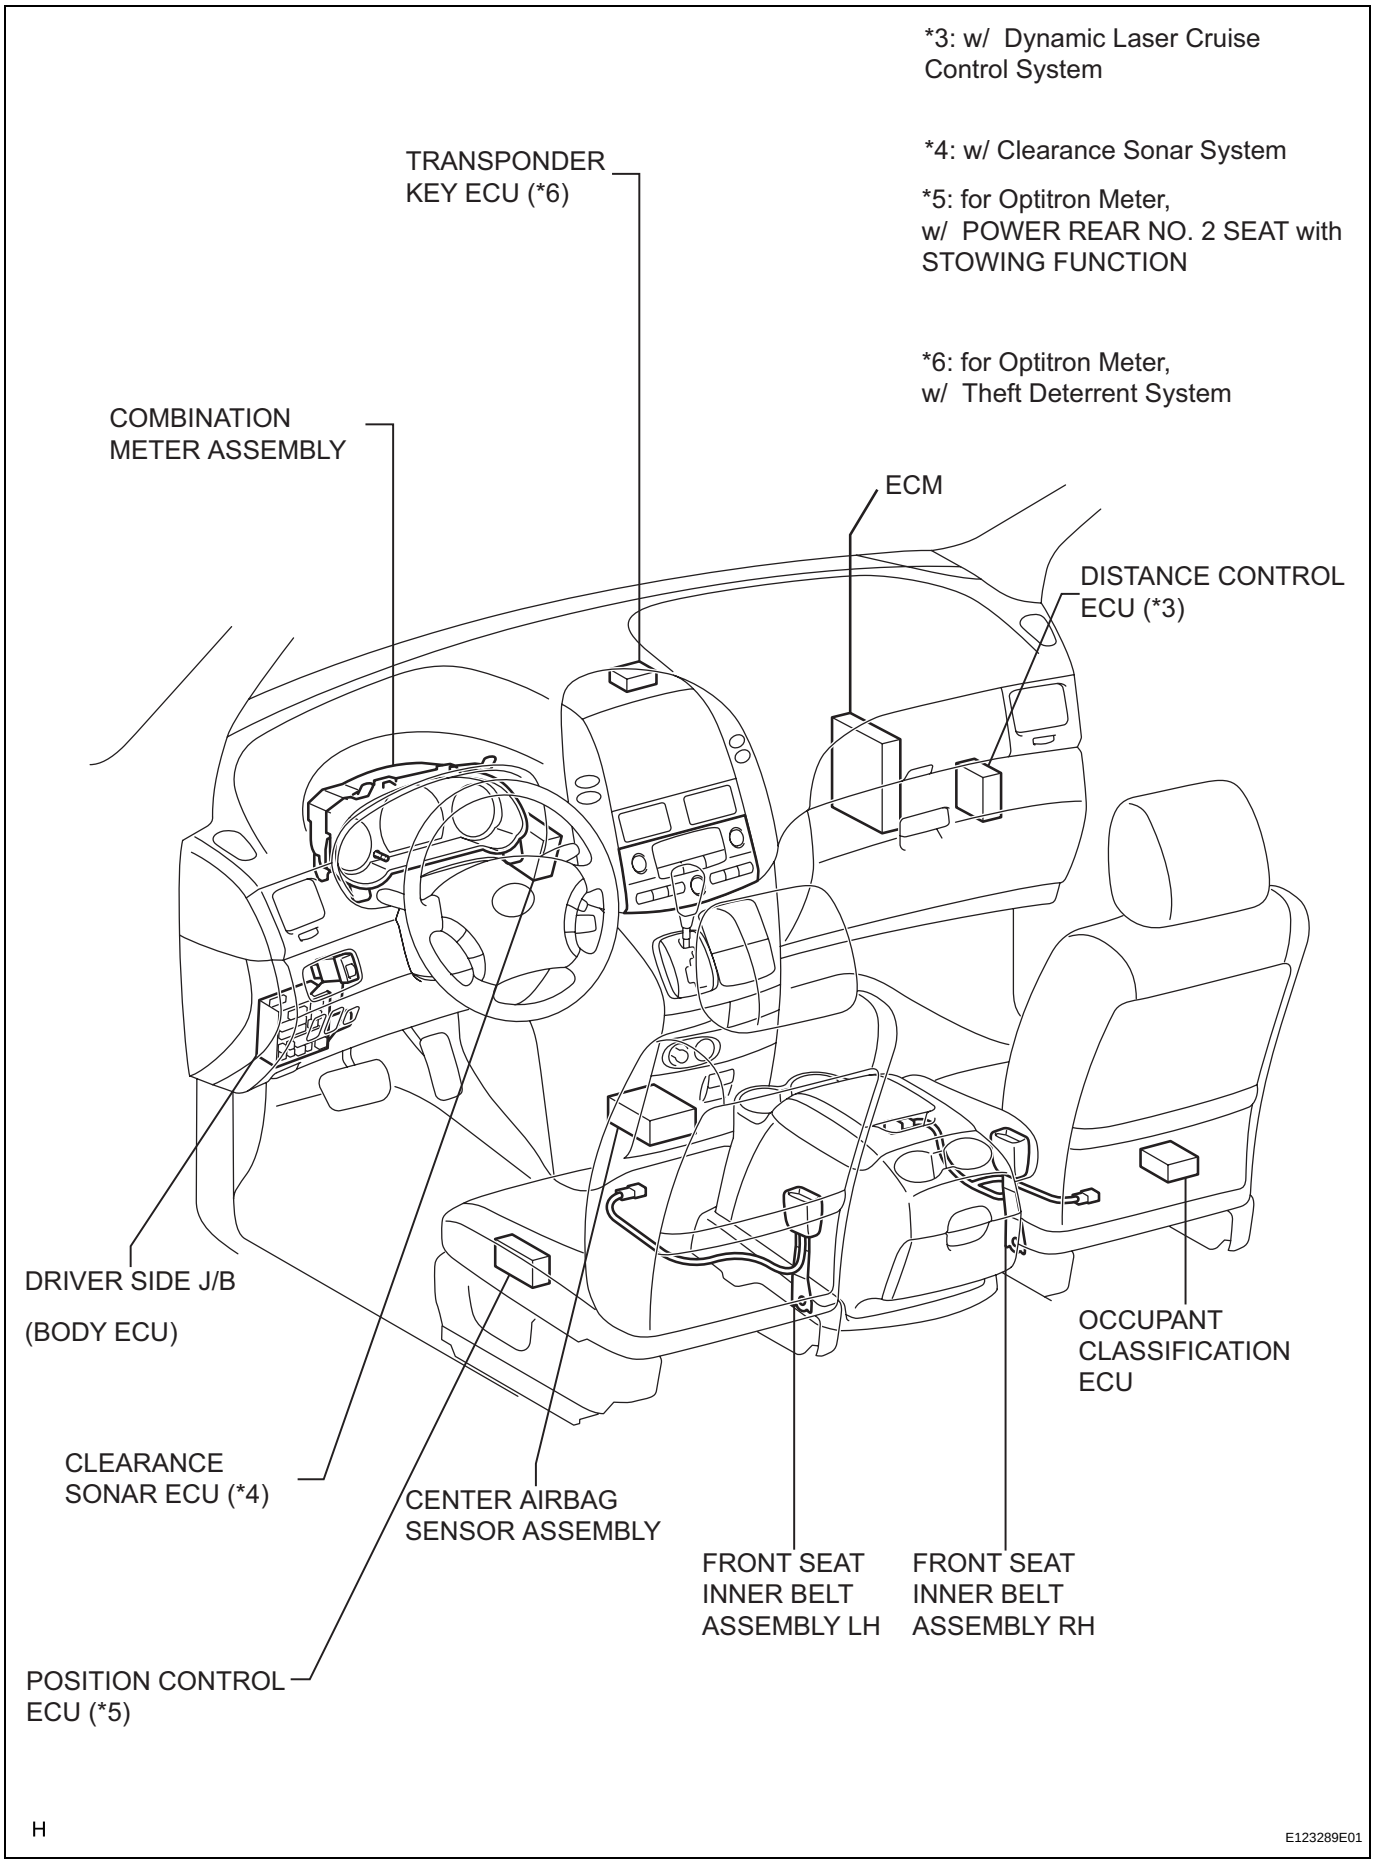
*3: w/ Dynamic Laser Cruise Control System
*4: w/ Clearance Sonar System
*5: for Optitron Meter, w/ POWER REAR NO. 2 SEAT with STOWING FUNCTION
*6: for Optitron Meter, w/ Theft Deterrent System
TRANSPONDER KEY ECU (*6)
COMBINATION METER ASSEMBLY
ECM
DISTANCE CONTROL ECU (*3)
DRIVER SIDE J/B
(BODY ECU)
OCCUPANT CLASSIFICATION ECU
CLEARANCE SONAR ECU (*4)
CENTER AIRBAG SENSOR ASSEMBLY
FRONT SEAT INNER BELT ASSEMBLY LH
FRONT SEAT INNER BELT ASSEMBLY RH
POSITION CONTROL ECU (*5)
H
E123289E01

ME