Fuel Sender Gauge Assembly
Wire Harness Connector Front View:

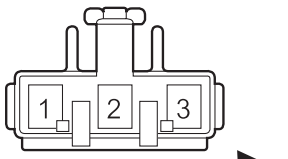

Fuel Sender Gauge Assembly:

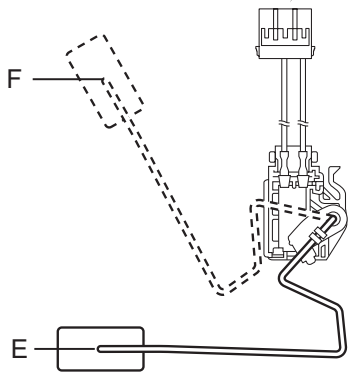

H

E143790E01

FUEL SENDER GAUGE ASSEMBLY

INSPECTION

1. INSPECT FUEL SENDER GAUGE ASSEMBLY

(a) Disconnect the connector from the fuel sender gauge.

(b) Check that the float moves smoothly between F and E.

(c) Measure the resistance between terminals 1 and 2 of the connector according to the value(s) in the table below.

Standard resistance: Fuel sender gauge

Float Level	Resistance (Ω)
F	**13.5 to 16.5**
Between E and F	**13.5 to 414.5 (Gradually changes)**
E	**405.5 to 414.5**

HINT:
If the value is not as specified, replace the fuel sender gauge assembly.