DTC	62-41	Wrong Disc

DTC	62-42	Disc cannot be Read

DTC	63-41	Wrong Disc

DTC	63-42	Disc cannot be Read

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
62-41	An unsuitable disc is inserted.	• CD • Radio receiver
62-42	The disc cannot be read.	
63-41	An unsuitable disc is inserted.	
63-42	The disc cannot be read.	

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.

1	CHECK DISC

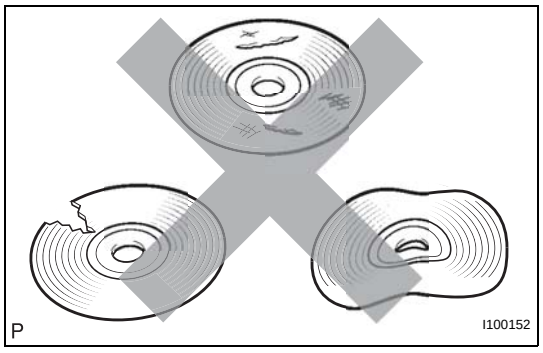

(a) Check that the disc is not deformed or cracked.
OK:
No deformation or cracks on the disc.

NG → **CHANGE DISC**

OK

2	DISC CLEANING

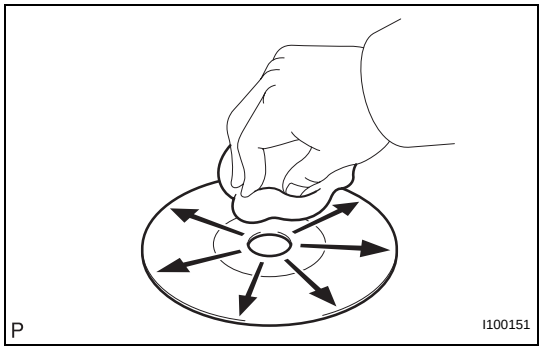

(a) Disc cleaning
(1) If dirt is on the disc surface, wipe it clean with a soft cloth from the inside to the outside in a radial direction.
NOTICE:
Do not use a conventional record cleaner or anti-static preservative.

NEXT

AV

3	CLEAR DTC

(a) Clear the DTCs (See page AV-18).

NEXT

4	RECHECK DTC

(a) Recheck for DTCs and check if the same trouble occurs again.

OK:

Malfunction disappears.

OK → END

NG

5	REPLACE DISC WITH ANOTHER AND RECHECK

(a) Replace the disc with another and recheck.
   (1) Replace the disc with another normal one.
   (2) Clear the DTCs (See page AV-18).
   (3) Recheck for DTCs and check if the same trouble occurs again.

OK:

Malfunction disappears.

NG → REPLACE RADIO RECEIVER

OK

END