CD cannot be Inserted / Played or CD is Ejected Right After Insertion

INSPECTION PROCEDURE

1	CHECK IF A PROPER CD IS INSERTED

(a) Make sure that the CD is an audio CD or a CD with an MP3 or WMA file, and that it is not deformed, flawed, stained, burred, or otherwise defective.
OK:
Normal CD.
HINT:
- Translucent or uniquely-shaped CDs cannot be played.
- CDs with adhesive paper labels should not be played.
- Commercial audio CDs can be played.
- CD-DA files on CD-ROMs, CD-Rs, and CD-RWs can be played.
- MP3 and WMA files on CD-ROMs, CD-Rs, and CD-RWs can be played.
- For details on playable CDs, refer to the Owner's Manual.

NG → **CHANGE DISC**

OK

AV


2	CHECK THAT CD IS INSERTED PROPERLY

(a) Check whether or not the CD is inserted upside down.
OK:
CD is properly inserted.

NG → **INSERT CD PROPERLY**

OK

3	CHECK CD

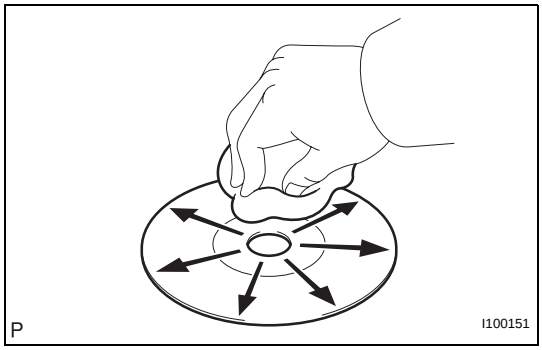

(a) Clean the disc by wiping it with a soft cloth from the inside to the outside in a radial direction.
OK:
Malfunction disappears.
NOTICE:
Do not use a conventional record cleaner or anti-static preservative.

NG → **Go to step 4**

OK

END

4	REPLACE CD WITH ANOTHER AND RECHECK

(a) Replace the CD with a normal one and check that the malfunction disappears.
OK:
Malfunction disappears.

NG → **REPLACE RADIO RECEIVER**

OK

END