

REMOVAL

1. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page IP-7)**
2. **REMOVE STEREO COMPONENT AMPLIFIER ASSEMBLY**
   (a) Disconnect the connectors.
   (b) Remove the 2 nuts and the stereo component amplifier assembly.

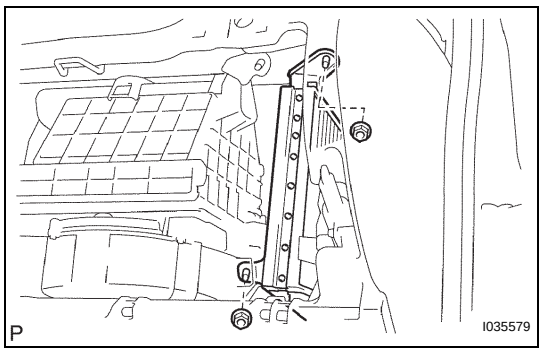

INSTALLATION

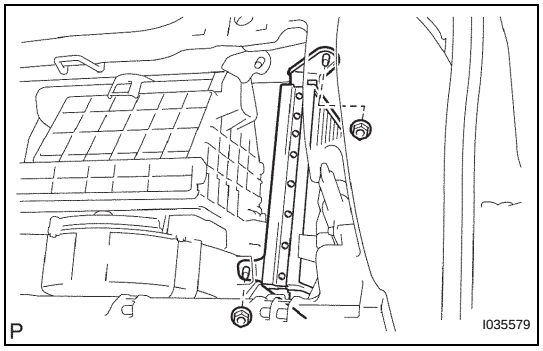

1. **INSTALL STEREO COMPONENT AMPLIFIER ASSEMBLY**
   (a) Install the stereo component amplifier assembly with the 2 nuts.
   (b) Connect the connectors.
2. **INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY**

AV