
REMOVAL

1. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSEMBLY**
   HINT:
   See page IP-5


2. **REMOVE ANTENNA CORD SUB-ASSEMBLY**
   (a) Replace the 5 clamps and remove the antenna cord sub-assembly.

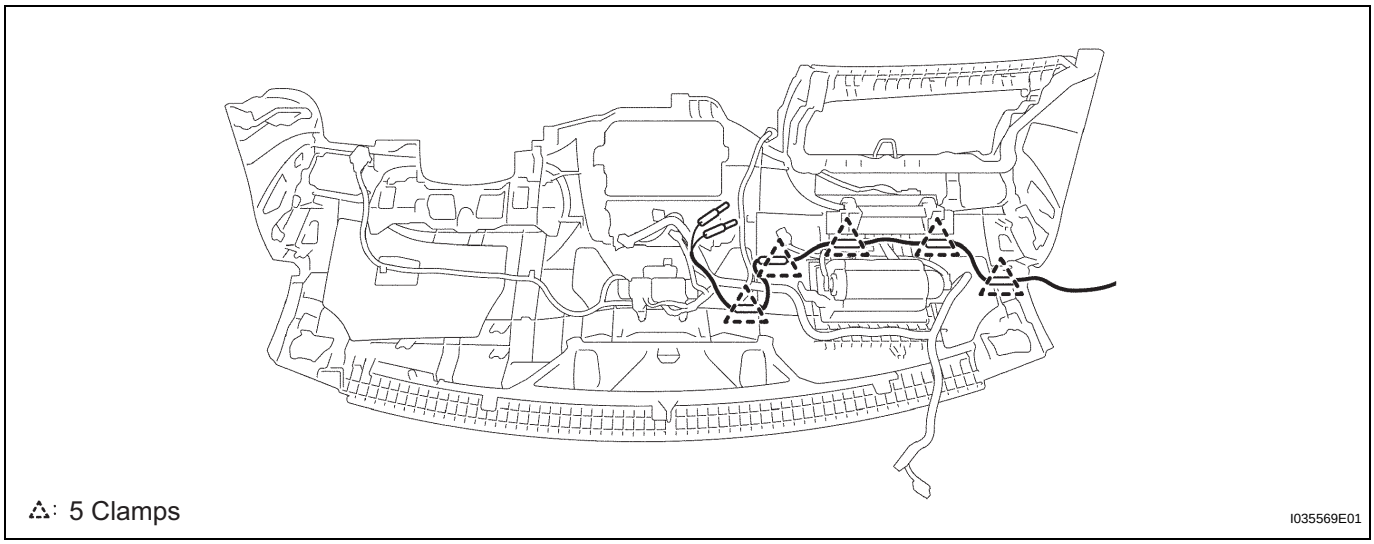


AV


3. **REMOVE PULL TOP ANTENNA POLE SUB-ASSEMBLY (See page AV-184)**

4. **REMOVE ANTENNA ORNAMENT**
   (a) Remove the antenna ornament.

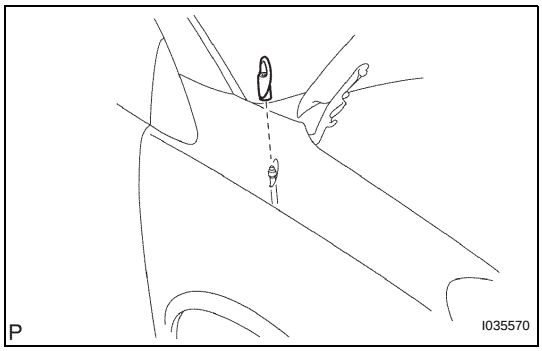


5. **REMOVE ANTENNA ASSEMBLY WITH HOLDER**
   (a) Disconnect the connector and remove the bolt.

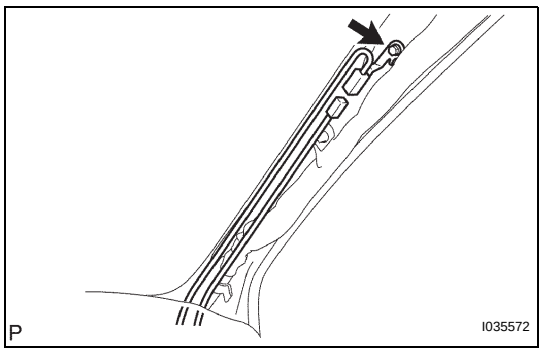

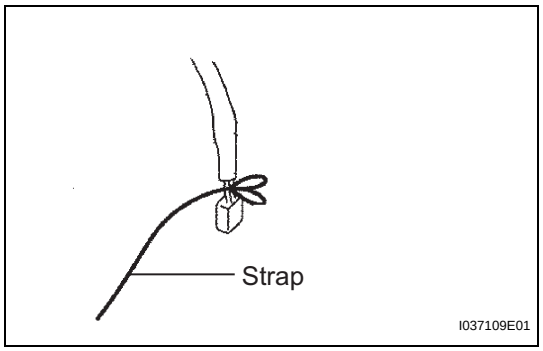

(b) Tie the string at the tip of the cable of the antenna assembly with holder.
HINT:
Leave the string in the vehicle. It will be used when installing the antenna assembly with holder.

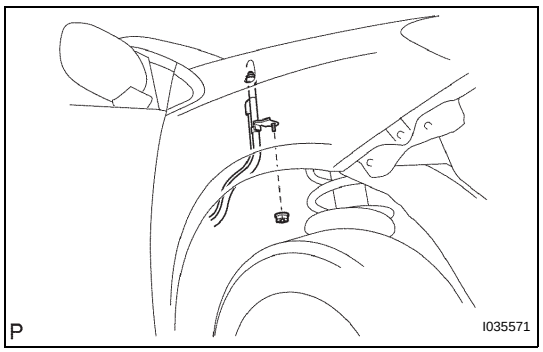


(c) Remove the nut and the antenna assembly with holder.

6. REMOVE ROOF HEADLINING ASSEMBLY
HINT:
See page IR-6

7. REMOVE AMPLIFIER ANTENNA ASSEMBLY
(a) Disconnect the connectors.

(b) Remove the 3 bolts.

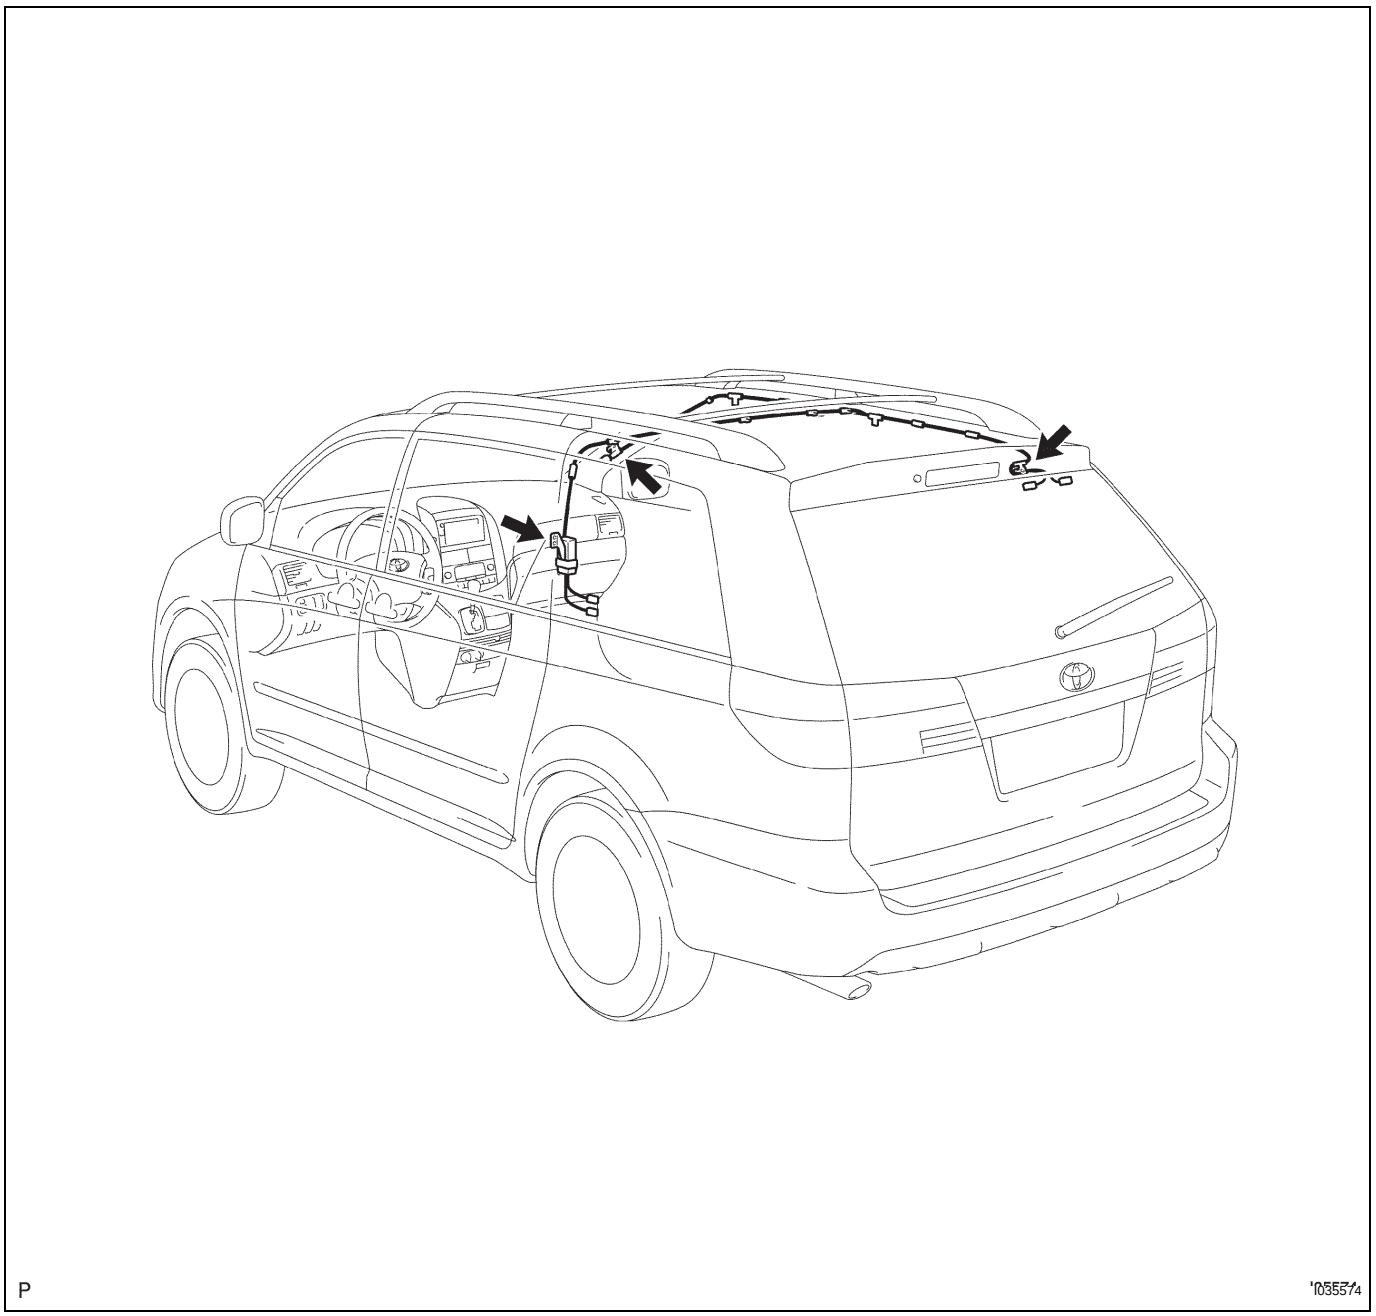

(c) Disengage the 16 clamps and remove the amplifier antenna assembly.