ON-VEHICLE INSPECTION

1. INSPECT FRONT NO.1 SPEAKER

HINT:

Remove interior parts so that the front No.1 speaker can be seen.

(a) Check the speaker installation.

OK:

The speaker is securely installed.

If the result is not as specified, reinstall the front No.1 speaker.

(b) Visually check the speaker.

OK:

The cone paper of the speaker is not torn.

If the result is not as specified, replace the front No.1 speaker.

(c) Speaker resistance check

(1) Disconnect the front No.1 speaker connector.

(2) Measure the resistance between the terminals of the speaker.

Standard resistance:

6 Speaker system:

Approximately 4 Ω


10 Speaker system:

4 to 6 Ω

If the result is not as specified, replace the front No.1 speaker.


REMOVAL

1. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH (See page ED-172)**
2. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG (See page ED-172)**
3. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (See page ED-172)**
4. **REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY**
5. **REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY (See page ED-172)**
6. **REMOVE FRONT NO. 1 SPEAKER ASSEMBLY**
   (a) Disconnect the connector.
   (b) Remove the 4 screws and front No. 1 speaker assembly.

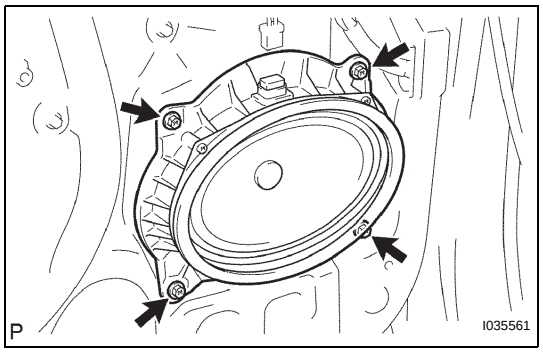

INSTALLATION

1. **INSTALL FRONT NO. 1 SPEAKER ASSEMBLY**
   (a) Install the front No. 1 speaker assembly with the 4 screws.
   NOTICE:
   Tighten the screws in order shown in the illustration to install the front No. 1 speaker assembly.
   (b) Connect the connector.
2. **INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY**
3. **INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY**
4. **INSTALL POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY**
5. **INSTALL FRONT DOOR INSIDE HANDLE BEZEL PLUG**
6. **INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH**

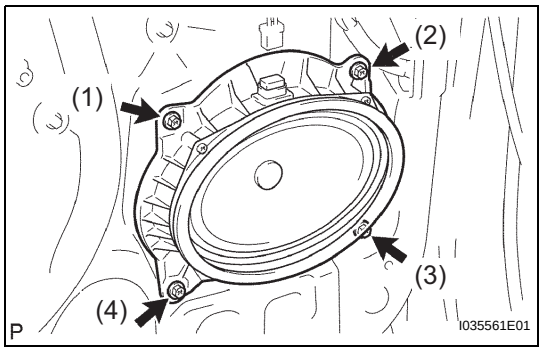

AV