
FRONT NO. 2 SPEAKER

COMPONENTS

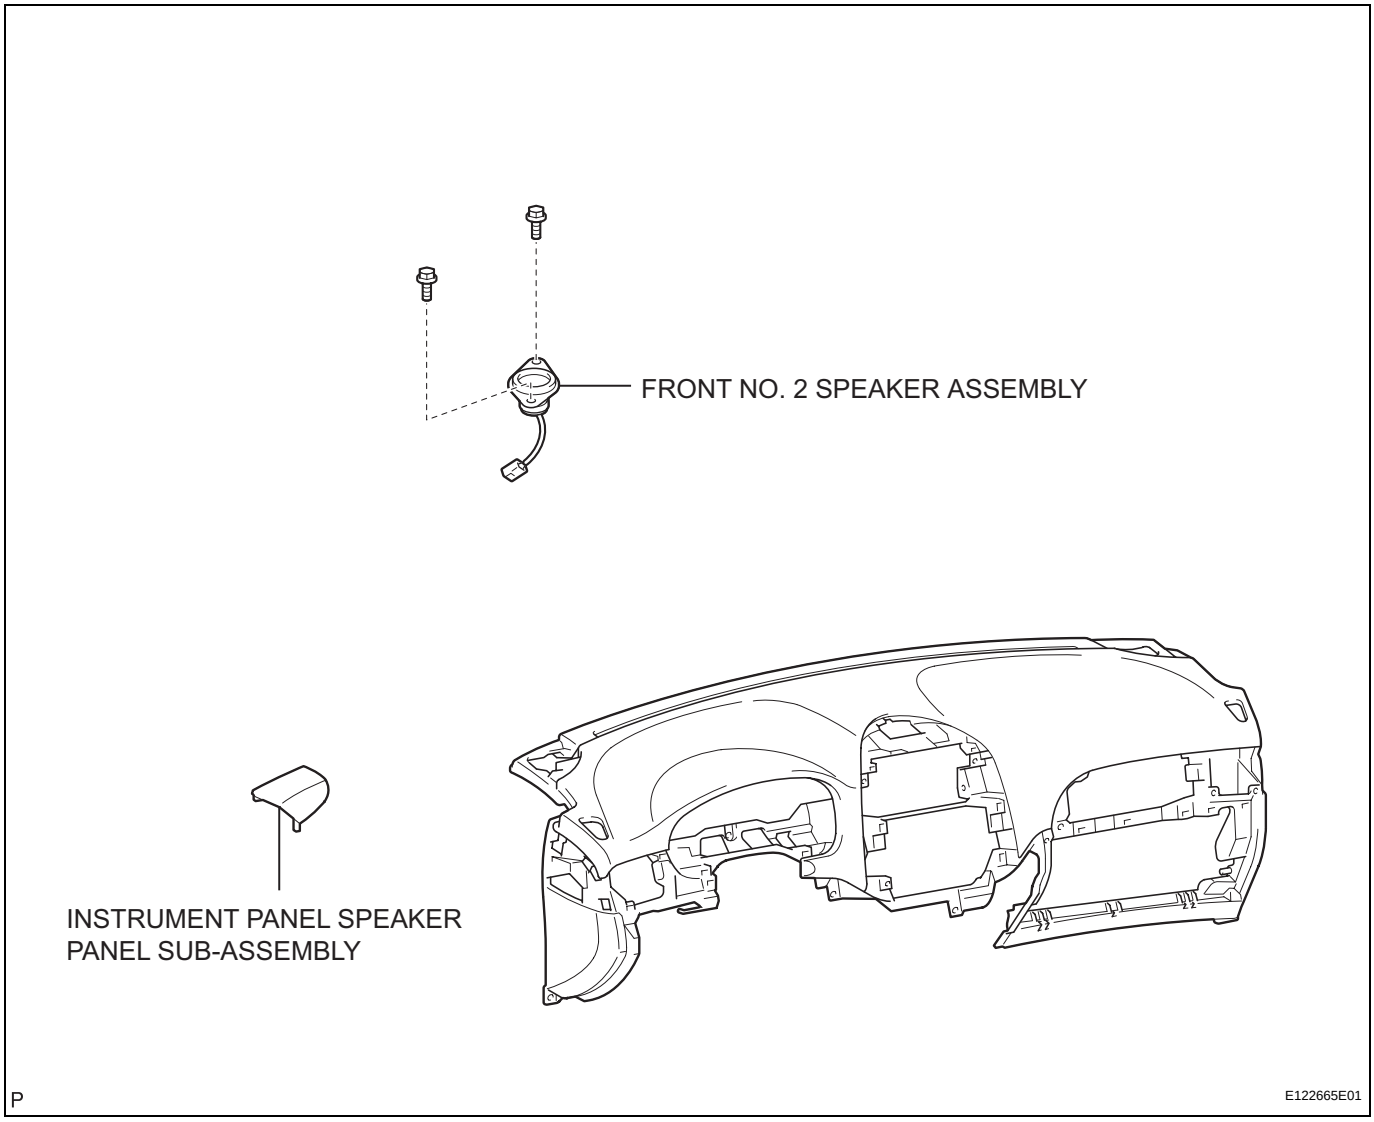

AV

ON-VEHICLE INSPECTION

1. INSPECT FRONT NO.2 SPEAKER

HINT:

Remove interior parts so that the front No.2 speaker can be seen.

(a) Check the speaker installation.

OK:

The speaker is securely installed.

If the result is not as specified, reinstall the front No.2 speaker.

(b) Visually check the speaker.

OK:

The cone paper of the speaker is not torn.

If the result is not as specified, replace the front No.2 speaker.