ON-VEHICLE INSPECTION

1. INSPECT NO.1 SPEAKER WITH BOX

HINT:

Remove interior parts so that the No.1 speaker with box can be seen.

(a) Check the speaker installation.

OK:

The speaker is securely installed.

If the result is not as specified, reinstall the No.1 speaker with box.

(b) Visually check the speaker.


OK:

The cone paper of the speaker is not torn.


If the result is not as specified, replace the No.1 speaker with box.

REMOVAL

1. **REMOVE REAR DOOR SCUFF PLATE (See page IR-7)**
2. **REMOVE REAR DOOR WEATHERSTRIP (See page IR-7)**
3. **REMOVE BACK DOOR WEATHERSTRIP**
4. **REMOVE BACK DOOR SCUFF PLATE (See page IR-8)**
5. **REMOVE QUARTER TRIM FRONT PANEL ASSEMBLY (See page IR-9)**
6. **REMOVE NO. 1 SPEAKER ASSEMBLY WITH BOX**
   (a) Remove the 2 screws and No. 1 speaker assembly with box.

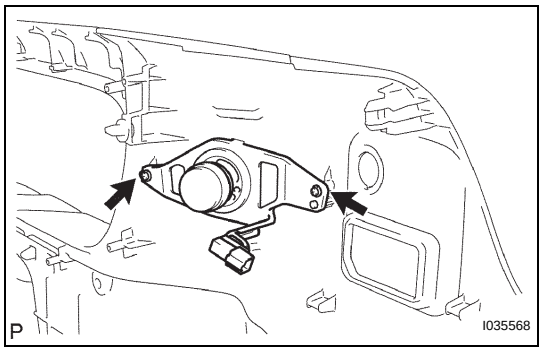

INSTALLATION

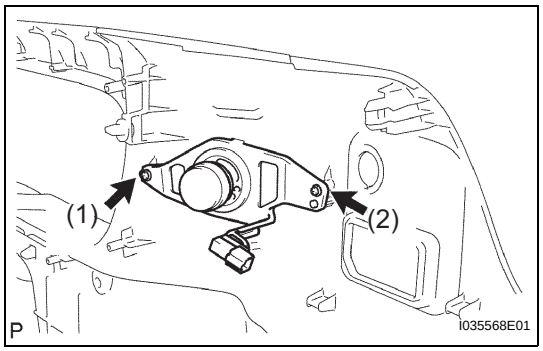

1. **INSTALL NO. 1 SPEAKER ASSEMBLY WITH BOX**
   (a) Install the No. 1 speaker assembly with box with the 2 screws.
   NOTICE:
   Tighten the screws in order shown in the illustration to install the No. 1 speaker assembly with box.
2. **INSTALL QUARTER TRIM FRONT PANEL ASSEMBLY**
3. **INSTALL BACK DOOR SCUFF PLATE**
4. **INSTALL BACK DOOR WEATHERSTRIP**
5. **INSTALL REAR DOOR WEATHERSTRIP**
6. **INSTALL REAR DOOR SCUFF PLATE**