# STEREO COMPONENT SPEAKER

## COMPONENTS

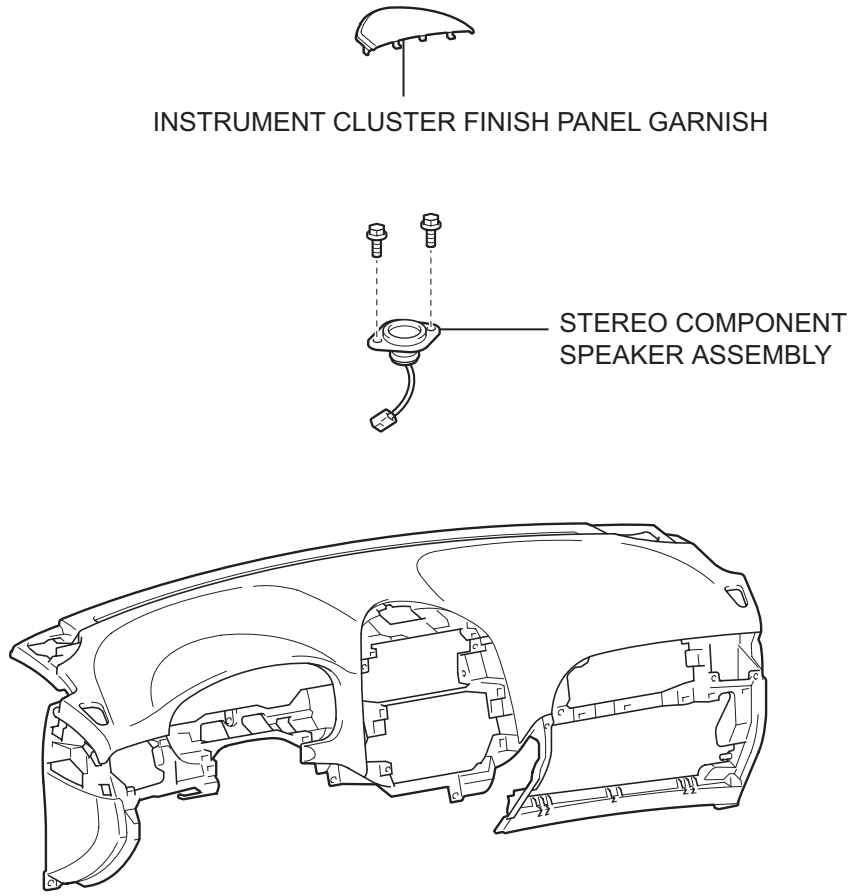


P

E125286E01

AV

# ON-VEHICLE INSPECTION

**1. INSPECT STEREO COMPONENT SPEAKER**

HINT:

Remove interior parts so that the stereo component speaker can be seen.

(a) Check the speaker installation.

**OK:**

**The speaker is securely installed.**

If the result is not as specified, reinstall the stereo component speaker speaker.

(b) Visually check the speaker.

**OK:**

**The cone paper of the speaker is not torn.**

If the result is not as specified, replace the stereo component speaker speaker.

(c) Speaker resistance check

(1) Disconnect the stereo component speaker speaker connector.

(2) Measure the resistance between the terminals of the speaker.

**Standard resistance:**

**1.2 to 2.2 Ω**

If the result is not as specified, replace the stereo component speaker speaker.