ON-VEHICLE INSPECTION

1. INSPECT NO.2 SPEAKER WITH BOX

HINT:

Remove interior parts so that the No.2 speaker with box can be seen.

(a) Check the speaker installation.

OK:

The speaker is securely installed.


If the result is not as specified, reinstall the No.2 speaker with box.

(b) Visually check the speaker.

OK:

The cone paper of the speaker is not torn.

If the result is not as specified, replace the No.2 speaker with box.

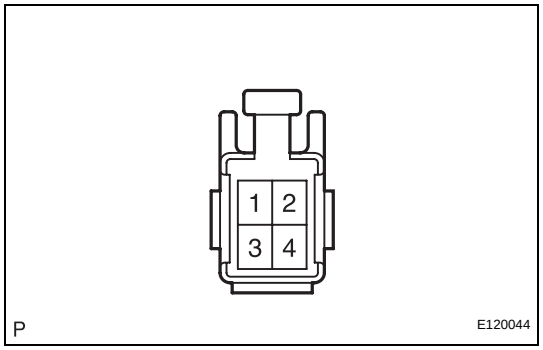

(c) Speaker resistance check

(1) Disconnect the front No.2 speaker with box connector.

(2) Measure the resistance between the terminals of the speaker.

NOTICE:

The speaker should not be removed for checking.

Standard resistance


Tester connection	Condition	Specified condition
1 - 3	Always	Approximately 1.2 Ω
2 - 4	Always	Approximately 1.2 Ω


If the result is not as specified, replace the No.2 speaker with box.

AV

REMOVAL

1. **REMOVE REAR DOOR SCUFF PLATE LH (See page IR-7)**
2. **REMOVE REAR DOOR WEATHERSTRIP LH (See page IR-7)**
3. **REMOVE BACK DOOR WEATHERSTRIP**
4. **REMOVE BACK DOOR SCUFF PLATE (See page IR-8)**
5. **REMOVE QUARTER TRIM FRONT PANEL ASSEMBLY LH (See page IR-9)**
6. **REMOVE NO. 2 SPEAKER ASSEMBLY WITH BOX**
   (a) Disconnect the connector.
   (b) Remove the 5 bolts and No. 2 speaker assembly with box.

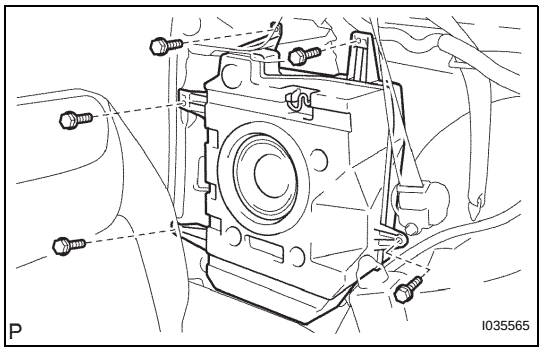

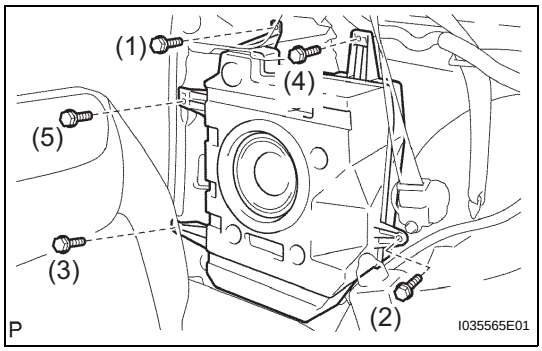

INSTALLATION

1. **INSTALL NO. 2 SPEAKER ASSEMBLY WITH BOX**
   (a) Install the No. 2 speaker assembly with box with the 5 bolts.
   NOTICE:
   Tighten the bolts in order shown in the illustration to install the No. 2 speaker assembly with box.
   (b) Connect the connector.
2. **INSTALL QUARTER TRIM FRONT PANEL ASSEMBLY LH**
3. **INSTALL BACK DOOR SCUFF PLATE**
4. **INSTALL BACK DOOR WEATHERSTRIP**
5. **INSTALL REAR DOOR WEATHERSTRIP LH**
6. **INSTALL REAR DOOR SCUFF PLATE LH**