DISPLAY CHECK MODE

HINT:

- This mode checks the color display on the display.
- Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.

1. ENTER DIAGNOSTIC MODE (See page NS-49)

2. DISPLAY CHECK

(a) Select "Display Check" from the "Diagnosis MENU" screen.

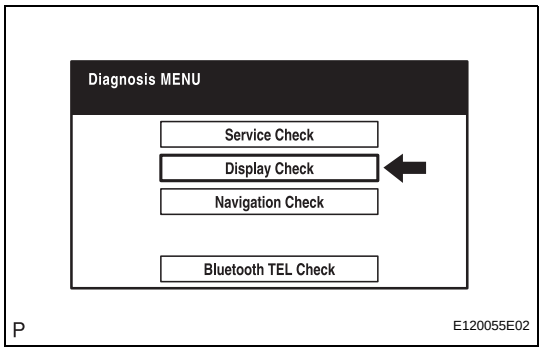

3. COLOR BAR CHECK

(a) Select "Color Bar Check" from the "Display Check" screen.

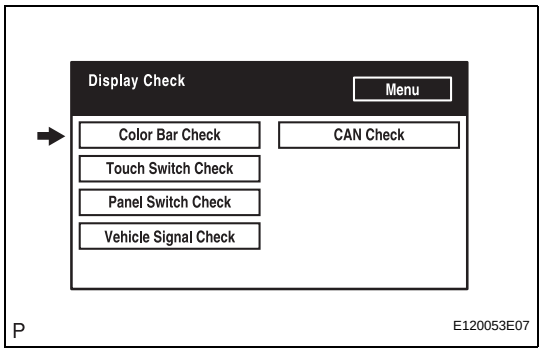

(b) Select a color bar from the "Color Bar Check Mode" screen.

(c) Check the display color.

HINT:

- The entire screen turns to the color or stripe selected.
- Touching the display will return to the "Color Bar Check" screen.

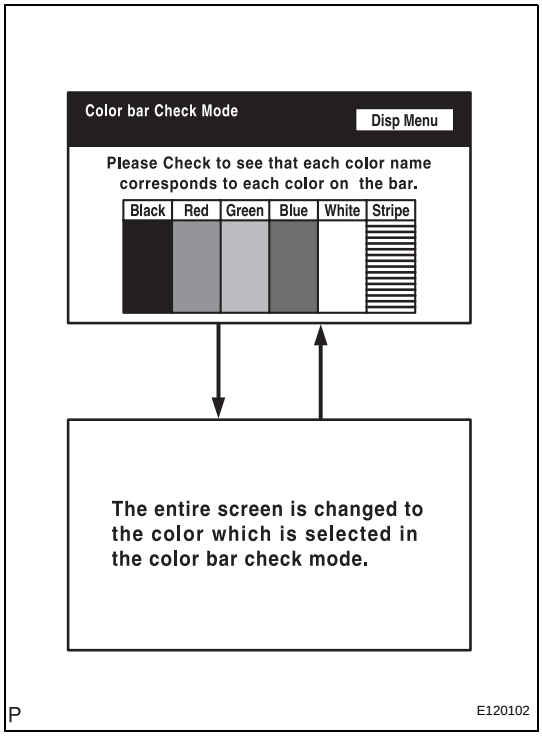

NS

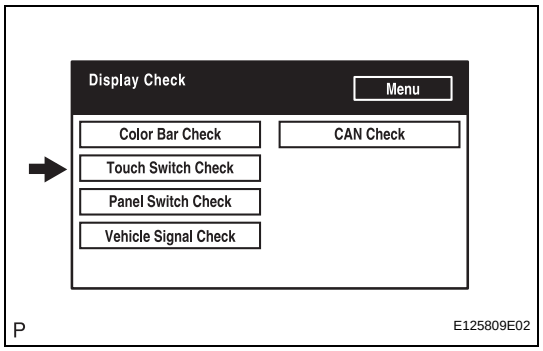

4. TOUCH SWITCH CHECK

(a) Select "Touch Switch Check" from the "Display Check" screen.

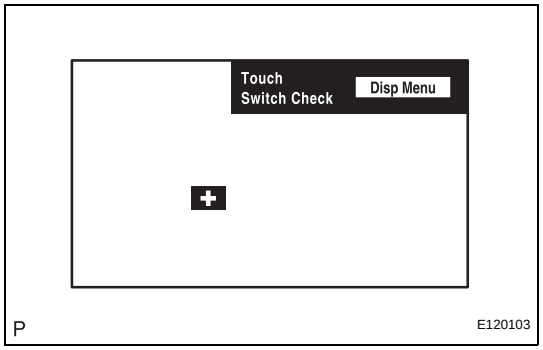

(b) Touch the display anywhere in the open area to perform the check when the "Touch Switch Check" screen is displayed.
HINT:
- A "+" mark is displayed where the display is touched.
- The "+" mark remains on the display even after the finger is removed.

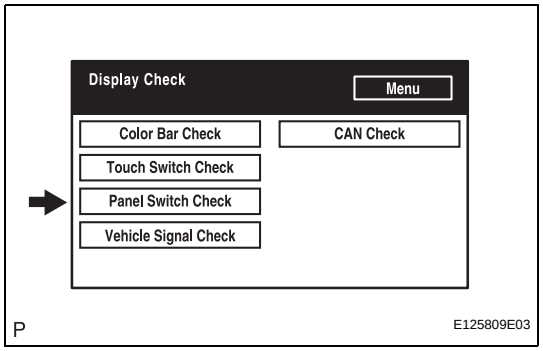

5. PANEL SWITCH CHECK

(a) Select "Panel Switch Check" from the "Display Check" screen.

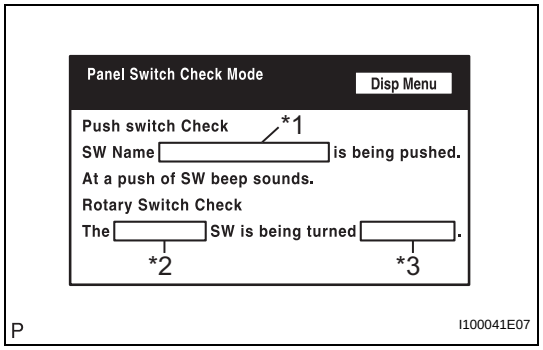

(b) Operate each switch and check that the switch name and condition are correctly displayed.

Display	Contents
Push switch name/*1	• Name of the pressed switch is displayed. • If more than one switch is pressed, "MULTIPLE" is displayed.
Rotary switch name/*2	Name of the rotary switch is displayed.
Rotary switch direction/*3	Direction of the rotary switch is displayed.

NS

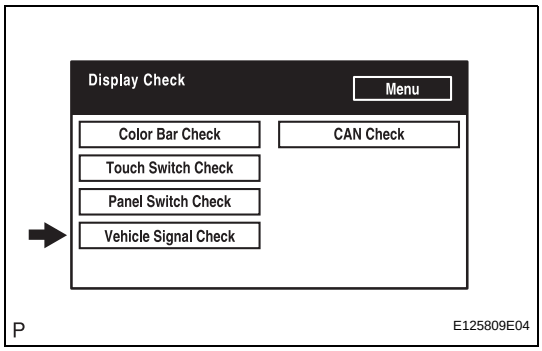

6. VEHICLE SIGNAL CHECK

(a) Select "Vehicle Signal Check" from the "Display Check" screen.

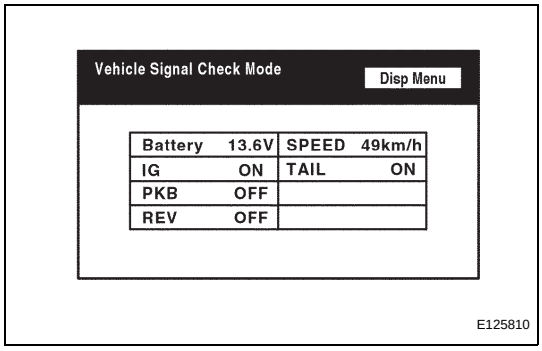

(b) When the "Vehicle Signal Check Mode" screen is displayed, check all the vehicle signal conditions.
HINT:
- Only conditions having inputs are displayed.
- This screen is updated once per second when input signals to the vehicle are changed.
- For details of this function, refer to DIAGNOSIS DISPLAY DETAILED DESCRIPTION (See page NS-30).

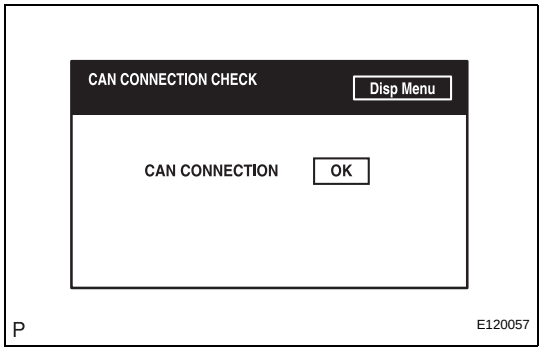

7. CAN CHECK

(a) Select "CAN check" from the "Display check" screen.

(b) Check the CAN connection check result.
HINT:
- This function operates only for the systems connected to the CAN system.
- For details of this function, refer to DIAGNOSIS DISPLAY DETAILED DESCRIPTION (See page NS-30).

BLUETOOTH TEL CHECK MODE

HINT:
Illustration may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed area may not be shown exactly the same as on the actual vehicle.

1. ENTER DIAGNOSTIC MODE (See page NS-49)

2. BLUETOOTH TEL CHECK

(a) Select "Bluetooth TEL Check" from the "Diagnosis MENU" screen.

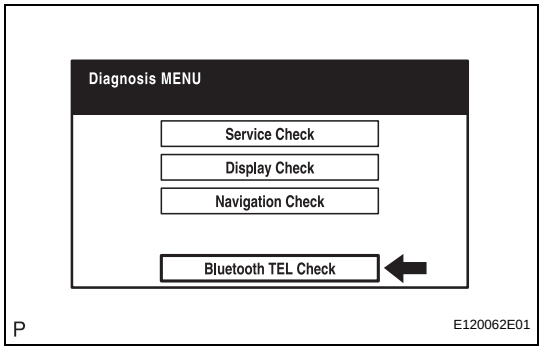

3. BLUETOOTH CHECK

(a) Select "Bluetooth Check" from the "Bluetooth Handsfree Check Menu" screen.

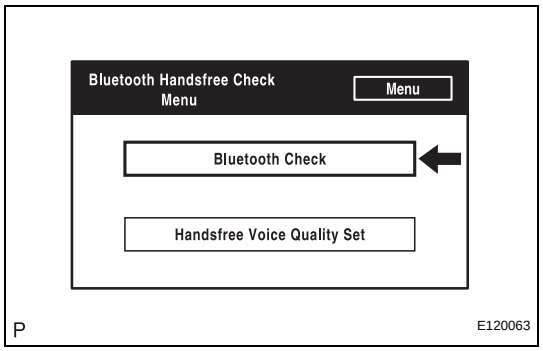

(b) Select "Serial Communication Log" from the "Bluetooth Check Menu" screen.

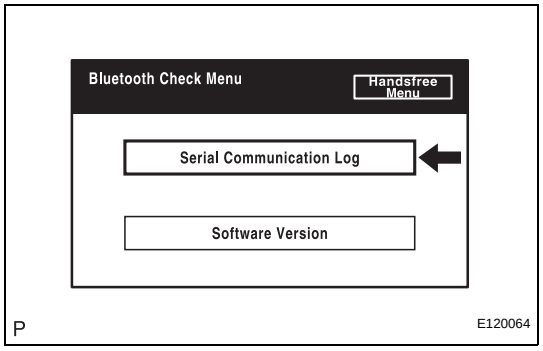

(1) The communication log data in the display ECU are displayed on this screen.
HINT:
The displayed data can be used as a reference.

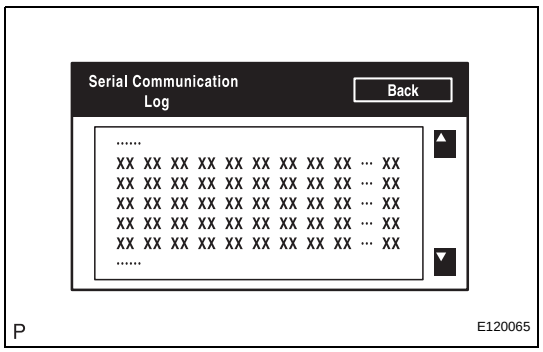

NS

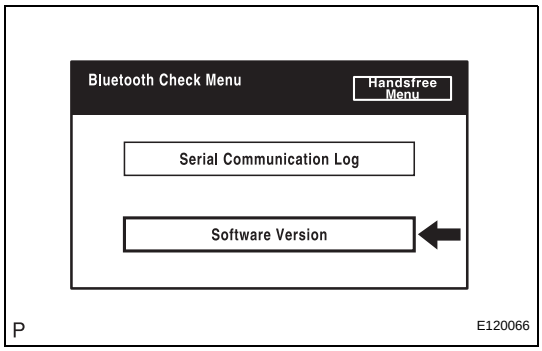

(c) Select "Software Version" from the "Bluetooth Check Menu" screen.

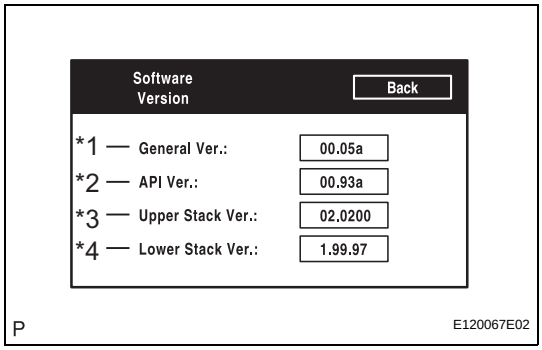

(1) Check the software version of the Bluetooth module.

Screen Description:

Display	Contents
General Version / *1	• General software version of Bluetooth module • If any of the API version, upper stack version, and low stack version is updated, the general version is upgraded.
API Version / *2	API software version is displayed.
Upper Stack Version / *3	Upper Stack version is displayed.
Lower Stack Version / *4	Lower Stack version is displayed.

NS

HINT:
This function is controlled by the built-in display ECU.

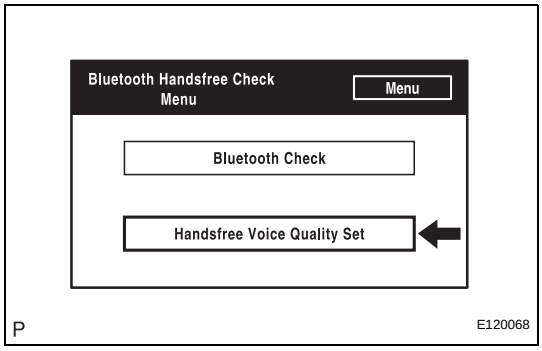

4. HANDSFREE VOICE QUALITY SET

(a) Select "Handsfree Voice Quality Set" from the "Bluetooth Handsfree check Menu" screen.

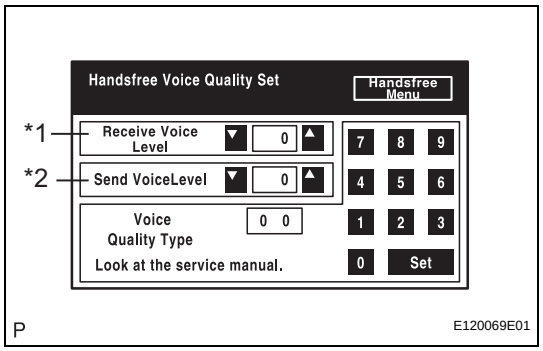

(b) Check the handsfree voice level.

Screen Description:

Display	Contents
Received voice level adjustment / *1	Setting possible for the voice level received from Bluetooth compatible phones.
Sent voice level adjustment / *2	Setting possible for the voice set to Bluetooth compatible phones.

HINT:
This function is controlled by the built-in display ECU.
NOTICE:
"Voice Quality Type" should not be changed.