

NAVIGATION RECEIVER

COMPONENTS

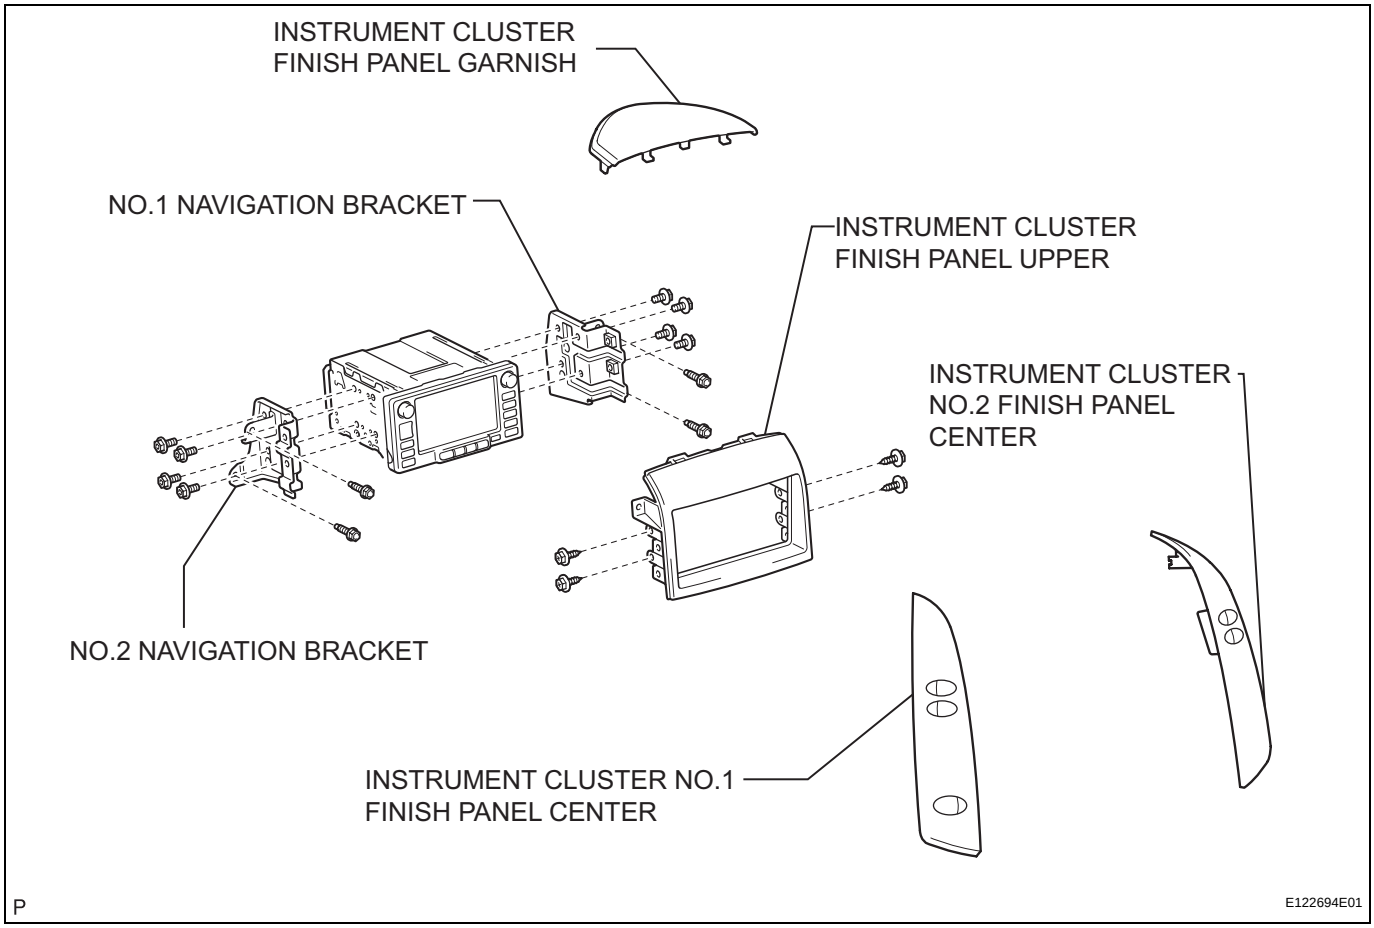


REMOVAL


1. **REMOVE INSTRUMENT CLUSTER NO.1 FINISH PANEL CENTER (See page IP-8)**
2. **REMOVE INSTRUMENT CLUSTER NO.2 FINISH PANEL CENTER**
3. **REMOVE INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page IP-9)**
4. **REMOVE NAVIGATION RECEIVER ASSEMBLY WITH BRACKET**
   (a) Remove the 4 screws.
   (b) Disconnect the connector and remove the navigation receiver assembly with bracket.

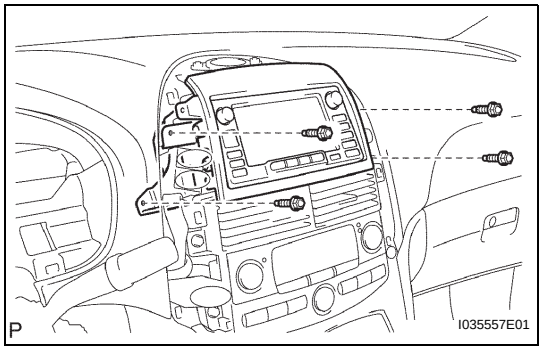


5. **REMOVE INSTRUMENT CLUSTER FINISH PANEL UPPER**
   (a) Remove the 4 screws and the instrument cluster finish panel upper.

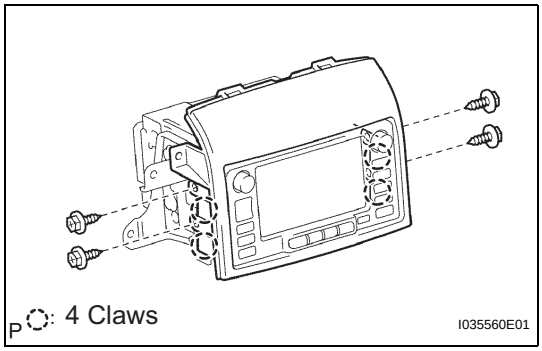

6. **REMOVE NO.1 NAVIGATION BRACKET**
   (a) Remove the 4 screws and the No.1 navigation bracket.

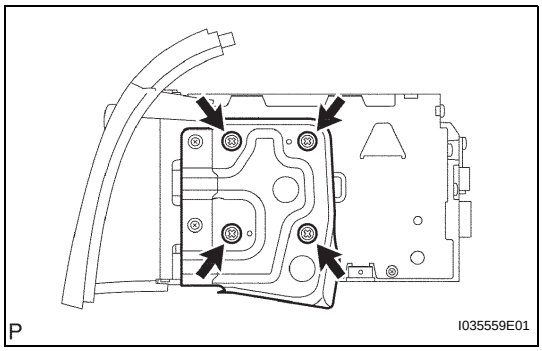


7. **REMOVE NO.2 NAVIGATION BRACKET**
   (a) Remove the 4 screws and the No.2 navigation bracket from the navigation receiver assembly.

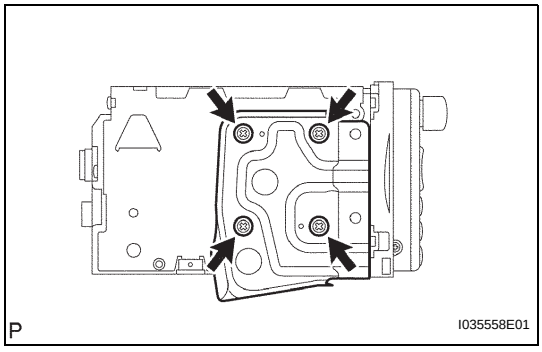


NS

INSTALLATION

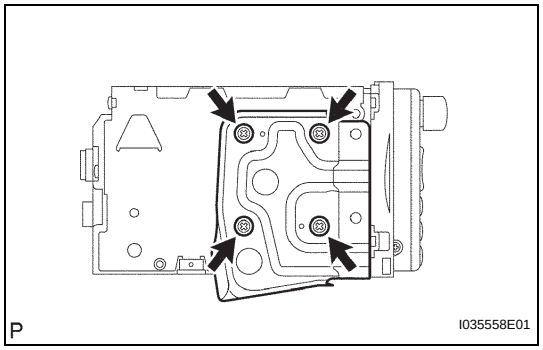


1. INSTALL NO.1 NAVIGATION BRACKET

(a) Install the No.1 navigation bracket with the 4 screws.

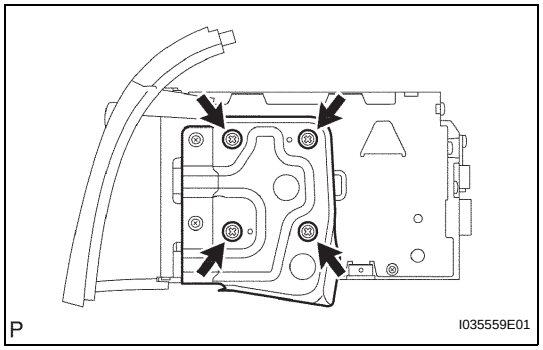


2. INSTALL NO.2 NAVIGATION BRACKET

(a) Install the No.2 navigation bracket with the 4 screws.

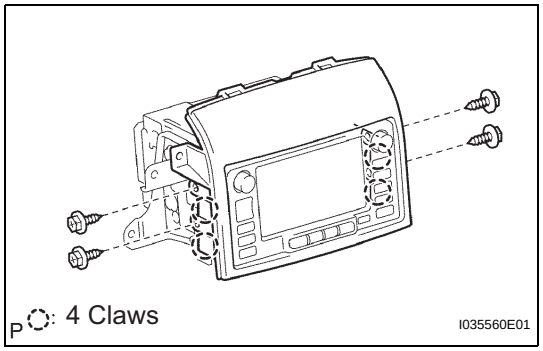

3. INSTALL INSTRUMENT CLUSTER FINISH PANEL UPPER

(a) Install the instrument cluster finish panel upper with the 4 screws.

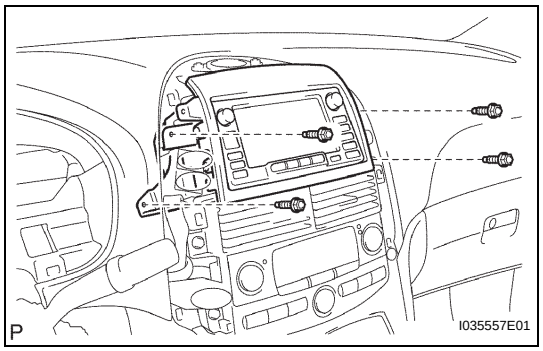

4. INSTALL NAVIGATION RECEIVER ASSEMBLY WITH BRACKET

(a) Connect the connector.

(b) Install the navigation receiver assembly with bracket with the 4 screws.

NS