DTC	63-10	CD Changer Mechanical Error

DTC	63-11	CD Insertion and Ejection Error

DTC	63-12	CD Reading Abnormal

DESCRIPTION

DTC No.	DTC Detection Condition	Trouble Area
63-10	A mechanical error in the CD changer is detected while the CD is not being inserted or ejected.	Radio and navigation assembly
63-11	CD insertion or ejection is failed.	
63-12	CD read problem occurs.	

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.

1	REPLACE RADIO AND NAVIGATION ASSEMBLY

NEXT

END

DTC	63-41	Wrong Disc

DTC	63-42	Disc cannot be Read


DESCRIPTION

DTC No.	DTC Detection Condition	Trouble Area
63-41	An unsuitable disc is inserted.	• CD • Radio and navigation assembly
63-42	The disc cannot be read.	

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.

1 CHECK DISC

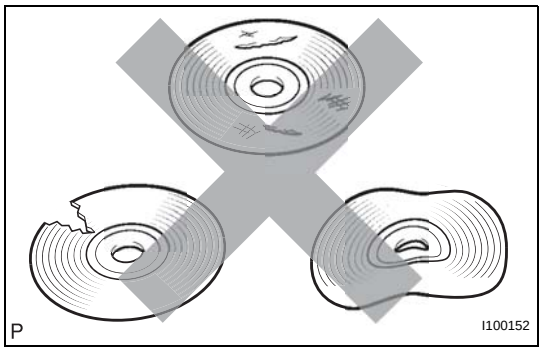


(a) Check that the disc is not deformed or cracked.
OK:
No deformations or cracks on the disc.

NG → **CHANGE DISC**

OK

2 DISC CLEANING

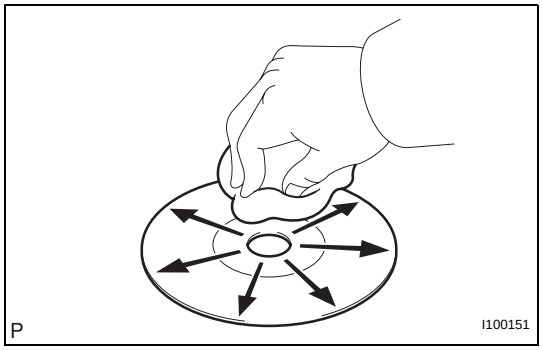

(a) Disc cleaning
(1) If dirt is on the disc surface, wipe it clean with a soft cloth from the inside to outside in a radial direction.
NOTICE:
Do not use a conventional record cleaner or anti-static preservative.

NEXT

3 CLEAR DTC

(a) Clear the DTCs (See page NS-49).

NEXT

4	RECHECK DTC

(a) Recheck for DTCs and check if the same trouble occurs again.
OK:
Malfunction disappears.

OK → **END**

NG

5	REPLACE DISC WITH ANOTHER AND RECHECK

(a) Replace the disc with another and recheck.
(1) Replace the disc with another normal one.
(2) Clear the DTCs (See page NS-49).
(3) Recheck for DTCs and check if the same trouble occurs again.
OK:
Malfunction disappears.

NG → **REPLACE RADIO AND NAVIGATION ASSEMBLY**

OK

END