DTC	63-45	Eject Error

DTC	63-51	Elevator Error

DTC	63-52	Clamp Error

DESCRIPTION

DTC No.	DTC Detection Condition	Trouble Area
63-45	Magazine cannot be ejected.	Radio and navigation assembly
63-51	Mechanical error occurs during elevator operation.	
63-52	Error occurs in CD changer clamp.	

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.

1	CHECK RADIO AND NAVIGATION ASSEMBLY

(a) Check if a disc can be changed, inserted, or ejected normally.
OK:
Malfunction disappears.

NG → **REPLACE RADIO AND NAVIGATION ASSEMBLY**

OK

END

DTC	63-46	Scratched / Reversed Disc

DESCRIPTION

DTC No.	DTC Detection Condition	Trouble Area
63-46	Scratches or dirt is found on CD surface or CD is set upside down.	• CD • Radio and navigation assembly

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.


1 CHECK THAT CD IS INSERTED PROPERLY

(a) Check that the CD is not inserted upside down.
OK:
CD is properly inserted.

NG → **INSERT CD PROPERLY**

OK

2 CHECK DISC

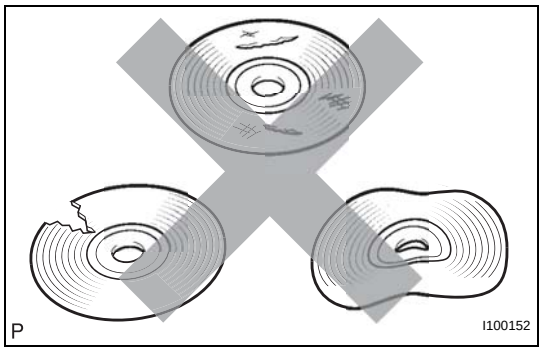


(a) Check that the disc is not deformed or cracked.
OK:
No deformations or cracks on the disc.

NG → **CHANGE DISC**

OK

3 DISC CLEANING

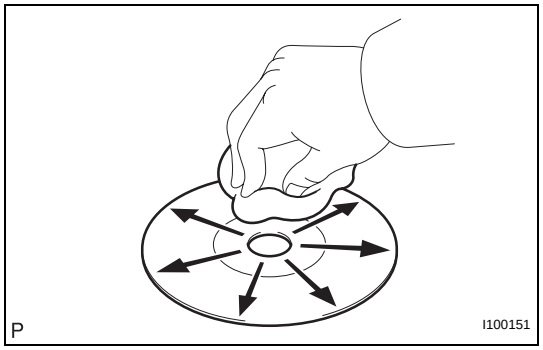

(a) Disc cleaning
(1) If dirt is on the disc surface, wipe it clean with a soft cloth from the inside to outside in a radial direction.
NOTICE:
Do not use conventional record cleaner or anti-static preservative.

NEXT

NS

4	CLEAR DTC

(a) Clear the DTCs (See page NS-49).

NEXT

5	RECHECK DTC

(a) Recheck for DTCs and check if the same trouble occurs again.
OK:
Malfunction disappears.

OK → **END**

NG

6	REPLACE DISC WITH ANOTHER AND RECHECK

(a) Replace the disc with another and recheck.
(1) Replace the disc with another normal one.
(2) Clear the DTCs (See page NS-49).
(3) Recheck for DTCs and check if the same trouble occurs again.
OK:
Malfunction disappears.

NG → **REPLACE RADIO AND NAVIGATION ASSEMBLY**

OK

END