CD cannot be Ejected

INSPECTION PROCEDURE

1	CHECK OPERATION

(a) Press the disc eject switch of the radio receiver for 5 seconds or more and check that the CD is ejected.
OK:
CD is ejected.

NG → **REPLACE RADIO AND NAVIGATION ASSEMBLY**

OK ↓

2	REPLACE CD WITH ANOTHER AND RECHECK

(a) Insert another CD and check if it is ejected.
OK:
CD is ejected.

NG → **REPLACE RADIO AND NAVIGATION ASSEMBLY**

OK ↓

CD IS FAULTY

CD cannot be Inserted / Played or CD is Ejected Right After Insertion

INSPECTION PROCEDURE

1 CHECK IF A PROPER CD IS INSERTED

(a) Make sure that the CD is an audio CD or a CD with an MP3 or WMA file, and that it is not deformed, flawed, stained, burred, or otherwise defective.
OK:
Normal CD
HINT:
- Translucent or uniquely-shaped CDs cannot be played.
- Commercial audio CDs can be played.
- CD-DA files on CD-ROMs, CD-Rs, and CD-RWs can be played.
- MP3 and WMA files on CD-ROMs, CD-Rs and CD-RWs can be played.
- For details on playable CDs, refer to the Owner's Manual.

NG → **CD IS FAULTY**

OK


2 CHECK THAT CD IS INSERTED PROPERLY

(a) Check whether or not the CD is inserted upside down.
OK:
CD is properly inserted.

NG → **SET CD PROPERLY**

OK

3 CHECK CD

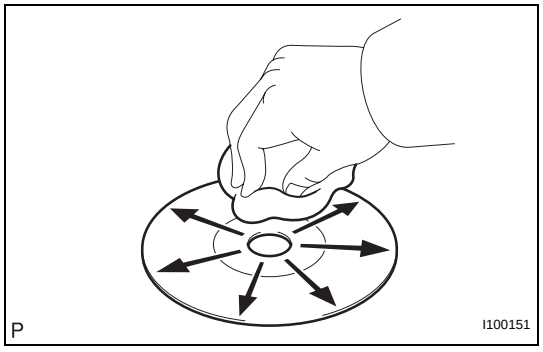

(a) Clean the disc by wiping it with a soft cloth from the inside to the outside in a radial direction.
OK:
Malfunction disappears.
NOTICE:
Do not use a conventional record cleaner or antistatic preservative.

OK → **CD WAS DIRTY**

NG

NS

4	REPLACE CD WITH ANOTHER AND RECHECK

(a) Replace the CD with a normal one and check that the malfunction disappears.
OK:
Malfunction disappears.

NG → **REPLACE RADIO AND NAVIGATION ASSEMBLY**

OK ↓

CD IS FAULTY