
CD Sound Skips

INSPECTION PROCEDURE

1 CHECK CD

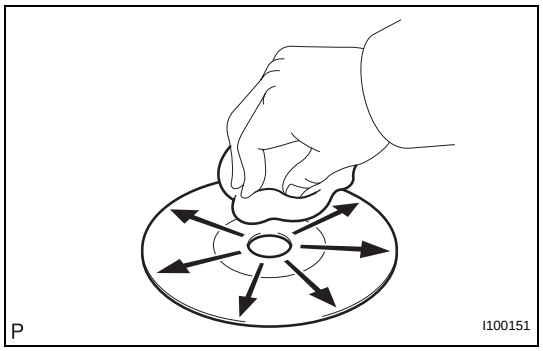


(a) Check the CD.
OK:
The CD is clean.
HINT:
If dirt is on the CD surface, wipe it clean with a soft cloth from the inside to the outside in a radial direction.
NOTICE:
Do not use a conventional record cleaner or anti-static preservative.

NG → **CLEAN CD**

OK

2 CHECK CD

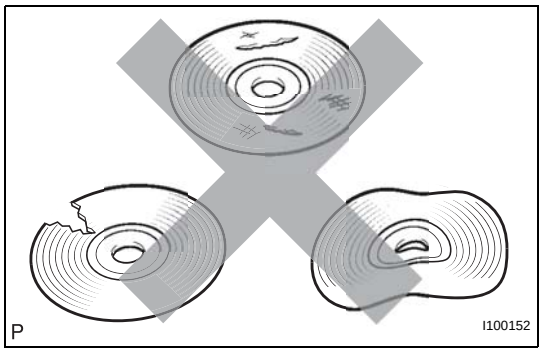

(a) Check that the CD is not deformed or cracked.
OK:
No deformation or cracks on the CD.

NG → **CD IS FAULTY**

OK

3 CHECK OPERATION ANOTHER CD

(a) Check using another CD.
(1) Check if the problem recurs using another CD.
OK:
The problem does not occur.

OK → **CD IS FAULTY**

NG

4 CHECK RADIO AND NAVIGATION ASSEMBLY

(a) Check the radio and navigation assembly installation condition.
(1) Check that the radio and navigation assembly is properly installed.

OK:
Radio and navigation assembly is properly installed.

NG → **REINSTALL RADIO AND NAVIGATION ASSEMBLY**

OK

REPLACE RADIO AND NAVIGATION ASSEMBLY