Panel Switches do not Function

INSPECTION PROCEDURE


1	CHECK PANEL SWITCH

(a) Check for foreign matter around the switches that might prevent operation.
OK:
No foreign matter is found.

NG → **REMOVE ANY FOREIGN MATTER FOUND**

OK

2	CHECK PANEL SWITCH (DISPLAY CHECK MODE)

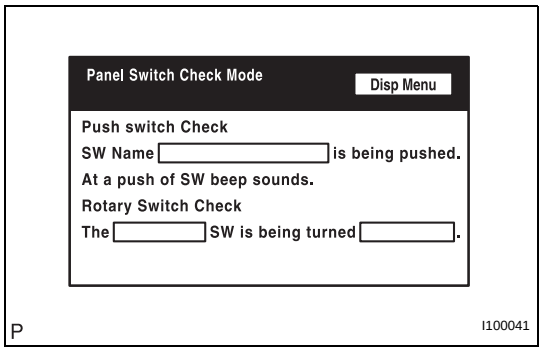

(a) Enter the "Display Check" mode (Panel Switch Check) (See page NS-22).
(b) Operate the abnormal switch and check if the switch name and status are correctly displayed.
OK:
The switch name and status are correctly displayed as operated.

NG → **PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE**

OK

REPLACE RADIO AND NAVIGATION ASSEMBLY

NS

Touch Panel Switch does not Function

INSPECTION PROCEDURE


1	CHECK TOUCH PANEL

(a) Check for foreign matter on the display.
OK:
The display is clean.

NG → **CLEAN DISPLAY AND RECHECK TOUCH PANEL**

OK

2	CHECK TOUCH SWITCH (DISPLAY CHECK MODE)

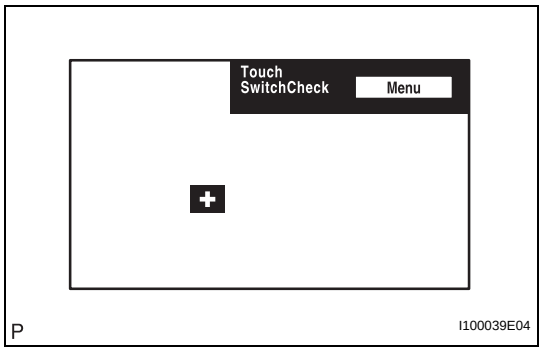

(a) Enter the "Display Check" mode (Touch Switch Check) (See page NS-22).
(b) Touch the display in the area where the switch malfunction occurs.
OK:
A "+" mark appears at the touched position.

NG → **PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE**

OK

REPLACE RADIO AND NAVIGATION ASSEMBLY