

Voice Guidance does not Function

INSPECTION PROCEDURE

1 CHECK NAVIGATION SYSTEM SETTING

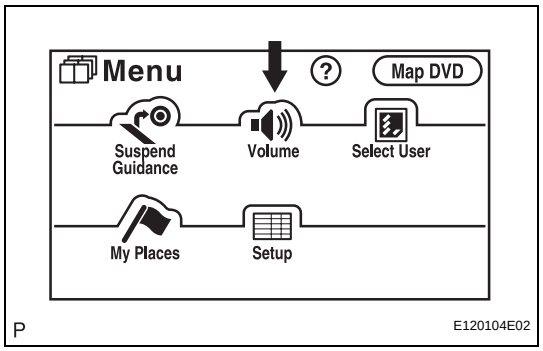

(a) Enter the "Menu" screen by pressing the "MENU" switch.
(b) Select "Volume".

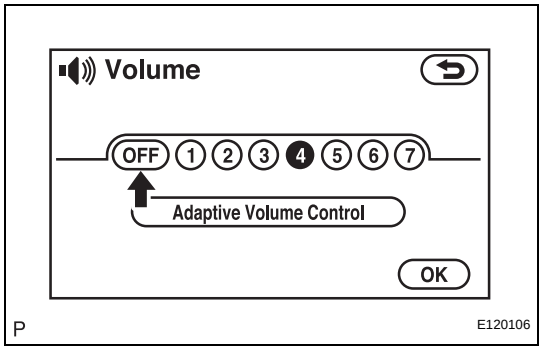


(c) Check that "OFF" is not selected.
OK:
"OFF" is not selected.

NG → **TURN VOICE GUIDANCE VOLUME UP TO 4 USING VOICE ADJUSTMENT SWITCHES**


OK

2 CHECK NAVIGATION SETTING

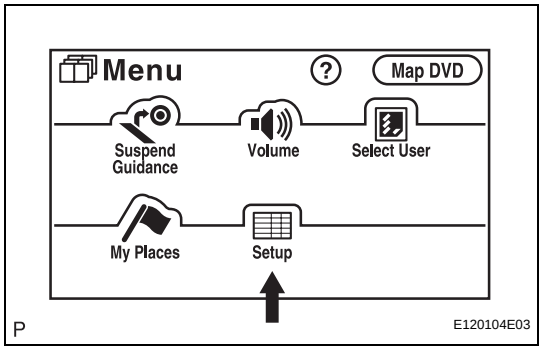

(a) Enter the "Menu" screen by pressing the "MENU" switch.
(b) Select "Set up".

NS

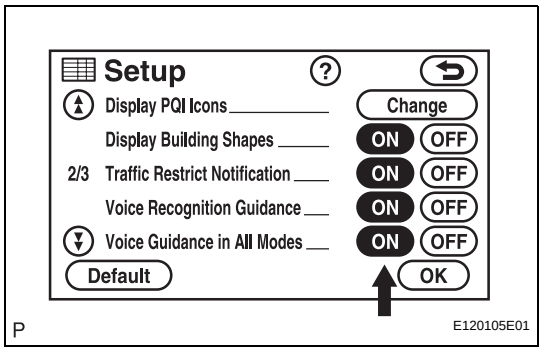


(c) Check that "Voice Guidance in All Modes" is not OFF.
OK:
Voice guidance in all modes is not OFF.


NG → **TURN VOICE GUIDANCE IN ALL MODES "ON"**

OK

3 CHECK NAVIGATION SETTING

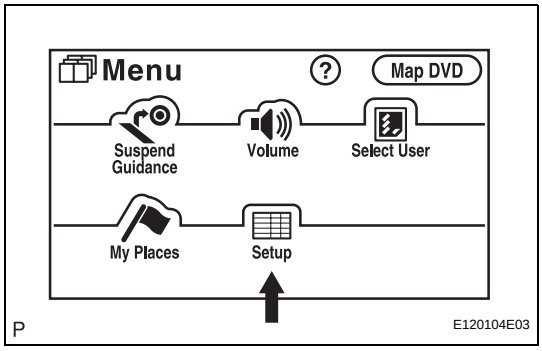

(a) Enter the "Menu" screen by pressing the "MENU" switch.
(b) Select "Setup".

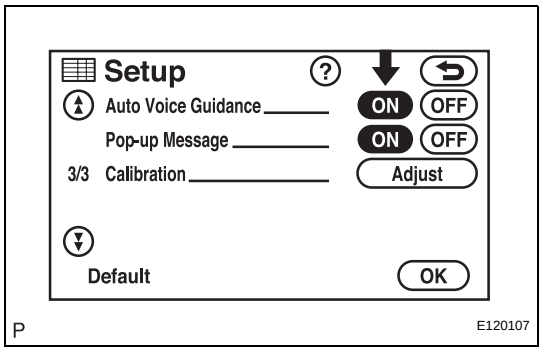


(c) Check that "Auto Voice Guidance" is not OFF.
OK:
Auto voice guidance is not OFF.

NG → **TURN AUTO VOICE GUIDANCE "ON"**

OK

4 CHECK MAP DISC

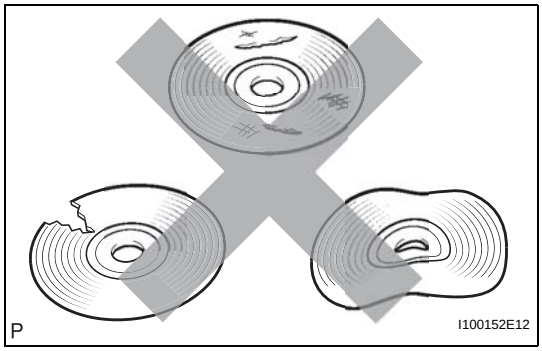

(a) Check that the map disc is not deformed or cracked.
OK:
No deformations or cracks on map disc.

NG → **REPLACE MAP DISC**

NS

OK

5	CHECK RADIO AND NAVIGATION ASSEMBLY

(a) Check that audio sound can be heard from the driver side speaker.
OK:
Audio sound can be heard.

NG → **PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE**

OK

REPLACE RADIO AND NAVIGATION ASSEMBLY