
CLEARANCE WARNING ECU


COMPONENTS

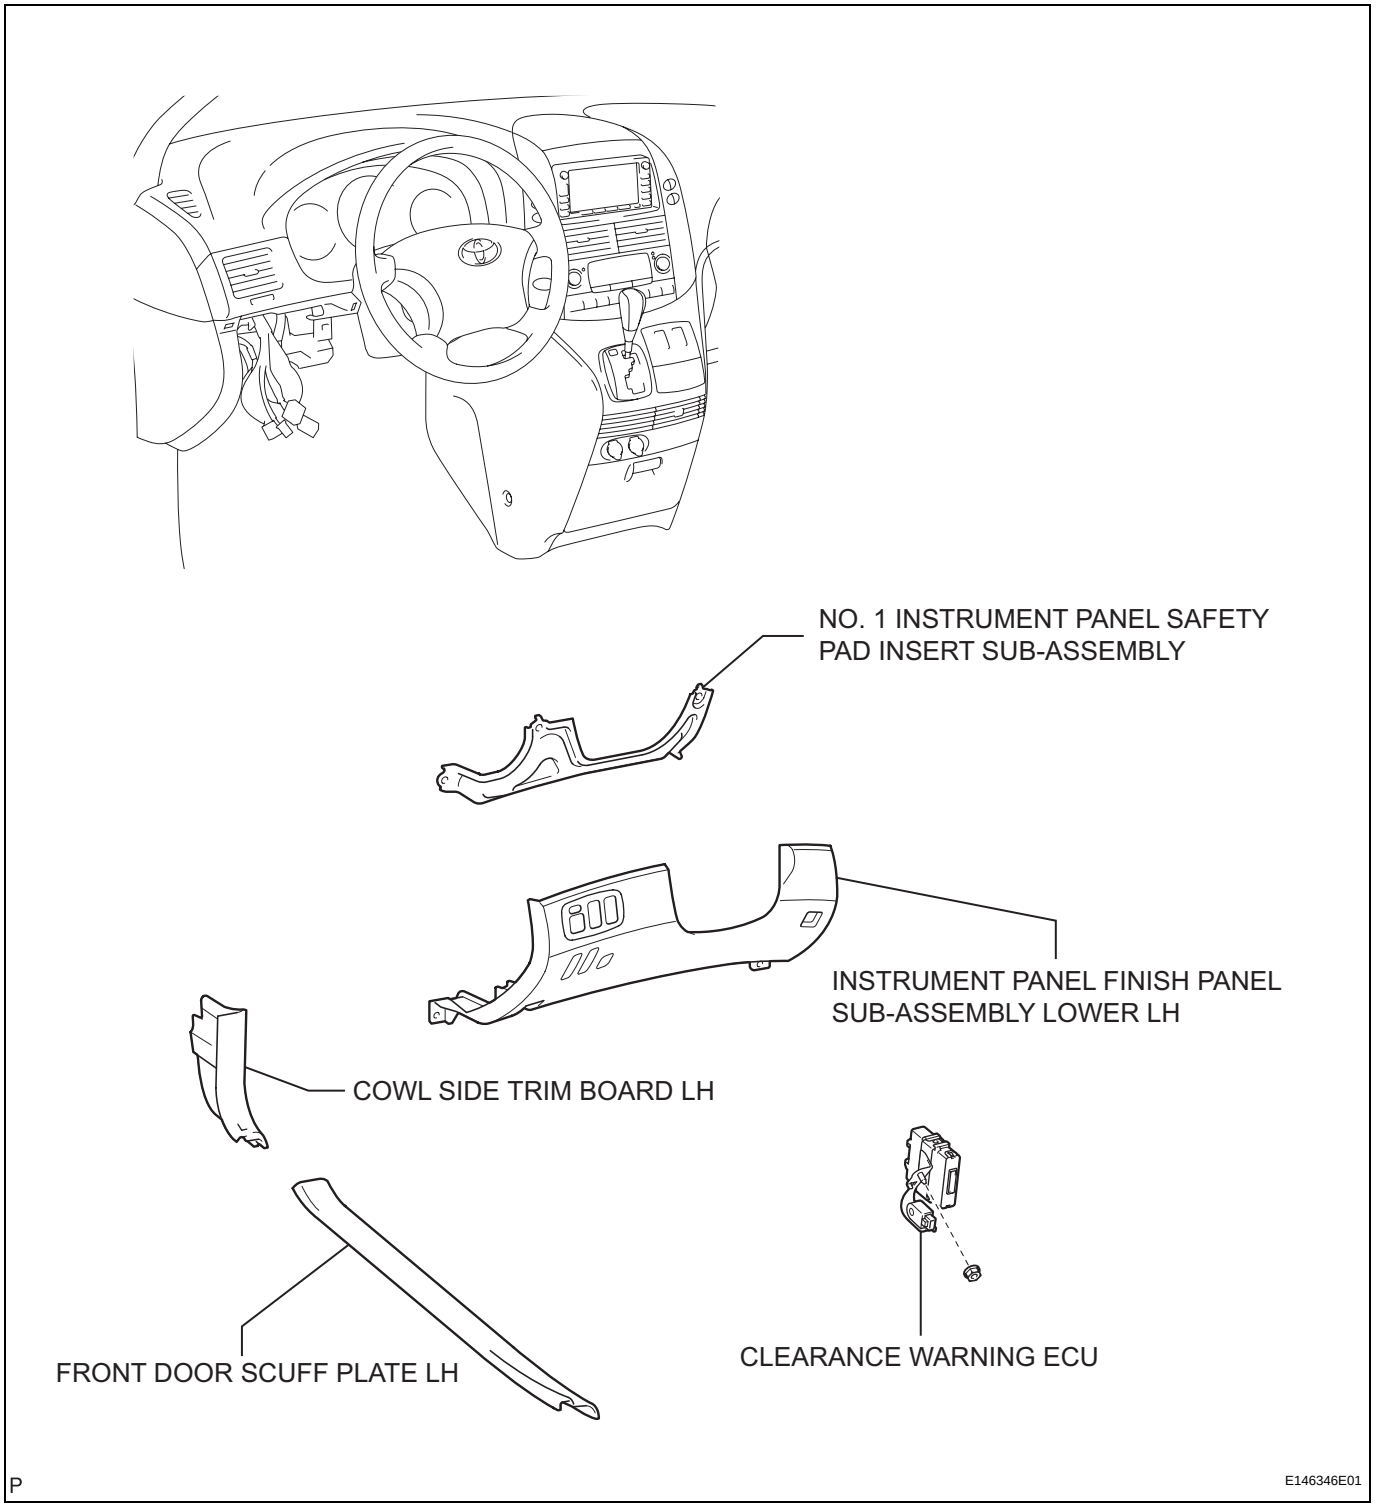


PM

REMOVAL

1. **REMOVE FRONT DOOR SCUFF PLATE LH**
2. **REMOVE COWL SIDE TRIM BOARD LH**
3. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER LH (See page IP-6)**
4. **REMOVE NO. 1 INSTRUMENT PANEL SAFETY PAD INSERT SUB-ASSEMBLY (See page IP-6)**
5. **REMOVE CLEARANCE WARNING ECU**
   (a) Disconnect each connector.
   (b) Remove the nut and clearance warning ECU.

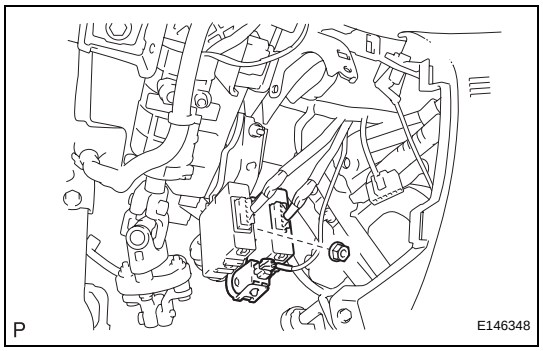

INSTALLATION

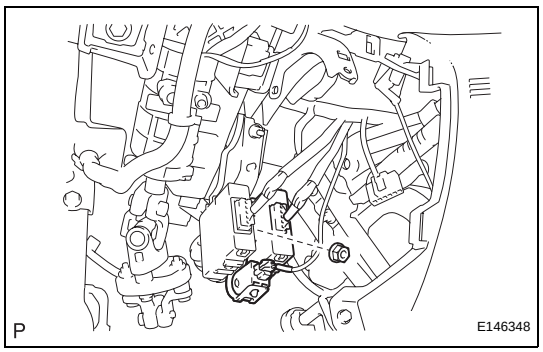

1. **INSTALL CLEARANCE WARNING ECU**
   (a) Install the clearance warning ECU with the nut.
   (b) Connect each connector.
2. **INSTALL NO. 1 INSTRUMENT PANEL SAFETY PAD INSERT SUB-ASSEMBLY (See page IP-14)**
3. **INSTALL INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER LH**
4. **INSTALL COWL SIDE TRIM BOARD LH**
5. **INSTALL FRONT DOOR SCUFF PLATE LH**