

REMOVAL


1. **REMOVE FRONT FENDER LINER LH**
2. **REMOVE FRONT FENDER LINER RH**
3. **REMOVE FRONT BUMPER COVER (See page ET-3)**
4. **REMOVE REAR BUMPER COVER (See page ET-12)**
5. **REMOVE NO. 1 ULTRASONIC SENSOR RETAINER**
   (a) Remove the No. 1 ultrasonic sensor retainer as shown in the illustration.

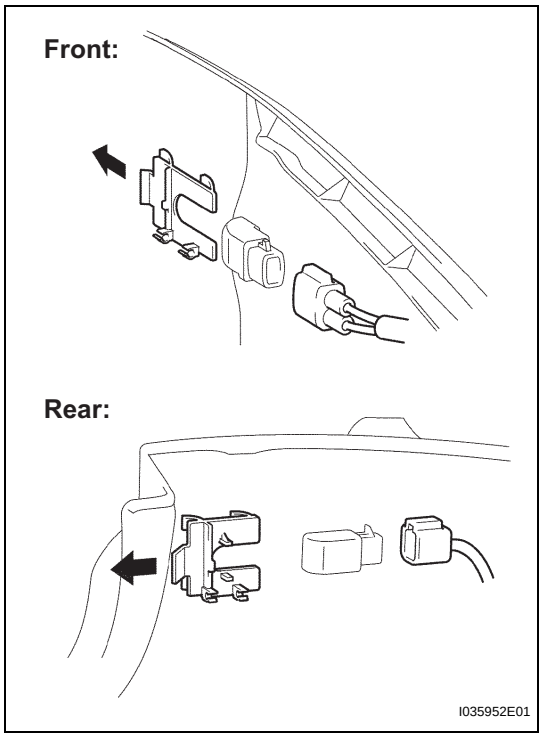

6. **REMOVE NO. 1 ULTRASONIC SENSOR**
   (a) Disconnect the connector and remove the No. 1 ultrasonic sensor.

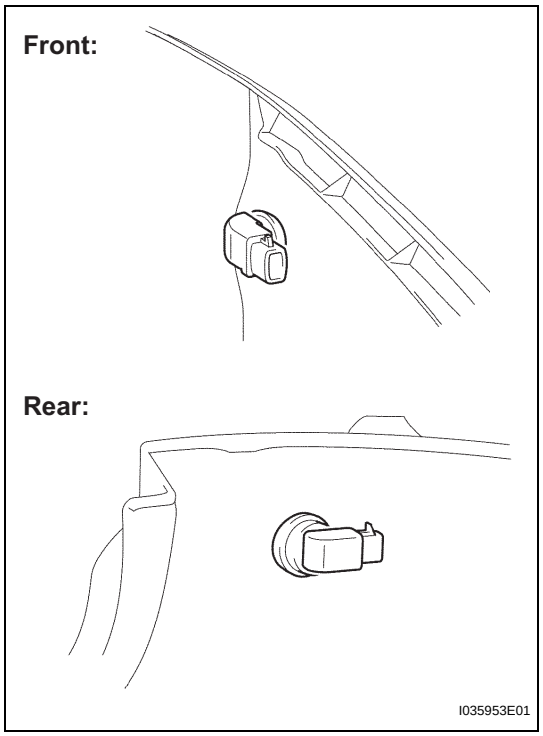

PM

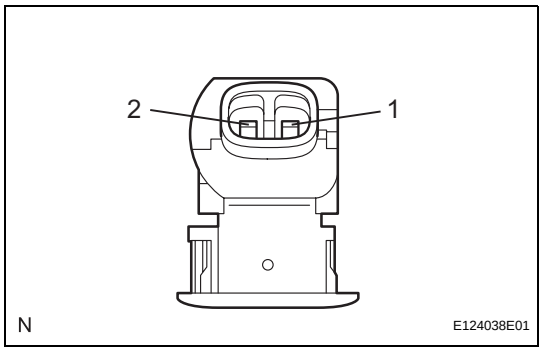

INSPECTION

1. INSPECT NO.1 ULTRASONIC SENSOR

(a) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester connection	Condition	Specified condition
1 - 2	Always	8 to 12 kΩ

If the result is not as specified, replace No.1 ultrasonic sensor.