

REMOVAL

1. **REMOVE REAR BUMPER COVER (See page ET-12)**

2. **REMOVE NO. 1 ULTRASONIC SENSOR RETAINER**
   (a) Remove the No. 1 ultrasonic sensor retainer as shown in the illustration.

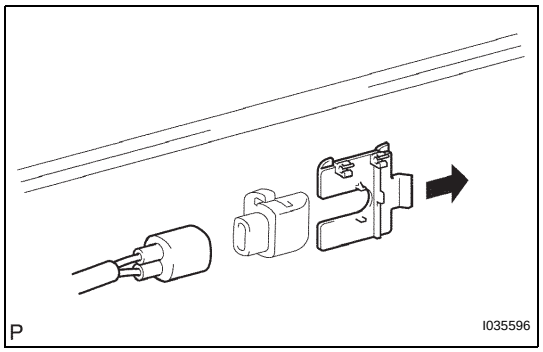


3. **REMOVE NO. 2 ULTRASONIC SENSOR**
   (a) Disconnect the connector and remove the No. 2 ultrasonic sensor.

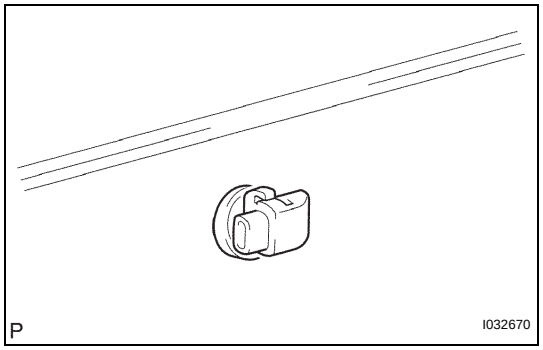

INSPECTION

1. **INSPECT NO.2 ULTRASONIC SENSOR**
   (a) Measure the resistance according to the value(s) in the table below.
   Standard resistance

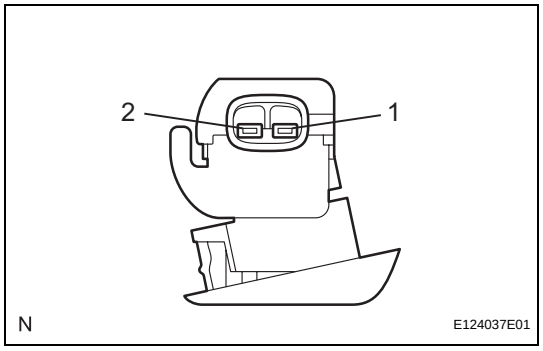

Tester connection	Condition	Specified condition
1 - 2	Always	8 to 12 kΩ

   If the result is not as specified, replace No.2 ultrasonic sensor.

PM

INSTALLATION

1. **INSTALL NO. 2 ULTRASONIC SENSOR**
   (a) Connect the connector and install the No. 2 ultrasonic sensor.
2. **INSTALL NO. 1 ULTRASONIC SENSOR RETAINER**
   (a) Install the No. 1 ultrasonic sensor retainer.
3. **INSTALL REAR BUMPER COVER (See page ET-13)**