
REMOVAL

1. **REMOVE BACK DOOR GARNISH CENTER**
   HINT:
   - Back Door: See page ED-214
   - Power Back Door: See page ED-220
2. **REMOVE BACK DOOR SIDE GARNISH LH**
   HINT:
   - Back Door: See page ED-214
   - Power Back Door: See page ED-220
3. **REMOVE BACK DOOR SIDE GARNISH RH**
   - Back Door: See page ED-214
   - Power Back Door: See page ED-220
4. **REMOVE BACK DOOR PULL STRAP**
   - Back Door: See page ED-214
   - Power Back Door: See page ED-221
5. **REMOVE BACK DOOR TRIM BOARD ASSEMBLY**
   - Back Door: See page ED-214
   - Power Back Door: See page ED-221
6. **REMOVE BACK DOOR GARNISH SUB-ASSEMBLY OUTSIDE**
   - Back Door: See page ED-214
   - Power Back Door: See page ED-221
7. **REMOVE TELEVISION CAMERA ASSEMBLY**
   (a) Release the 2 claw fittings and remove the television camera assembly.

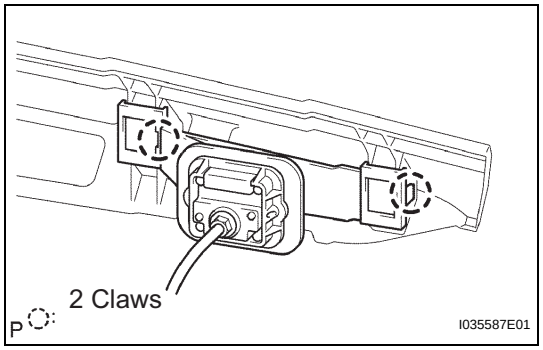

PM

INSTALLATION

1. **INSTALL TELEVISION CAMERA ASSEMBLY**
2. **INSTALL BACK DOOR GARNISH SUB-ASSEMBLY OUTSIDE**
3. **INSTALL BACK DOOR TRIM BOARD ASSEMBLY**
4. **INSTALL BACK DOOR PULL STRAP**
   HINT:
   - Back Door: See page ED-216
   - Power Back Door: See page ED-223
5. **INSTALL BACK DOOR SIDE GARNISH RH**
6. **INSTALL BACK DOOR SIDE GARNISH LH**
7. **INSTALL BACK DOOR GARNISH CENTER**