
REMOVAL

1. **REMOVE INSTRUMENT CLUSTER CENTER NO. 1 FINISH PANEL (See page IP-8)**
2. **REMOVE INSTRUMENT CLUSTER CENTER NO. 2 FINISH PANEL**
3. **REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (See page IP-8)**
4. **REMOVE POSITION INDICATOR HOUSING ASSEMBLY (See page IP-9)**
5. **REMOVE INSTRUMENT CLUSTER CENTER LOWER FINISH PANEL SUB-ASSEMBLY (See page IP-9)**
6. **REMOVE POWER POINT SOCKET ASSEMBLY**
   (a) Release the 2 claw fittings and remove the power point socket assembly.

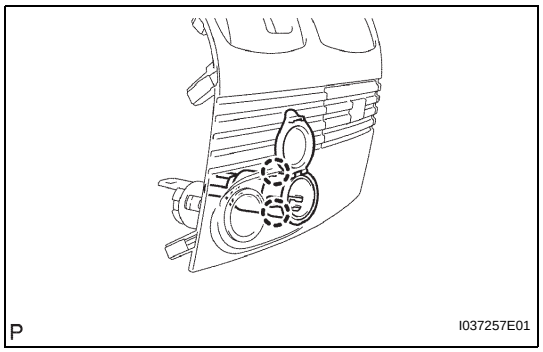

INSTALLATION

1. **INSTALL POWER POINT SOCKET ASSEMBLY**
   (a) Engage the 2 claws to install the power point socket assembly.
2. **INSTALL INSTRUMENT CLUSTER CENTER LOWER FINISH PANEL SUB-ASSEMBLY**
3. **INSTALL POSITION INDICATOR HOUSING ASSEMBLY**
4. **INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY**
5. **INSTALL INSTRUMENT CLUSTER CENTER NO. 2 FINISH PANEL**
6. **INSTALL INSTRUMENT CLUSTER CENTER NO. 1 FINISH PANEL**

