

# CLOCK


## PARTS LOCATION

w/ Navigation System:

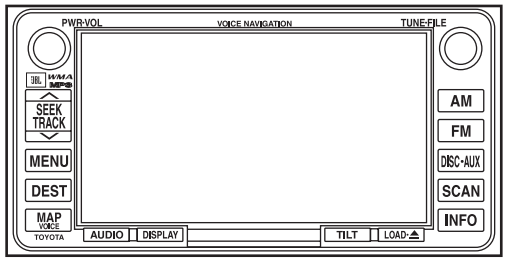


w/ Automatic A/C:

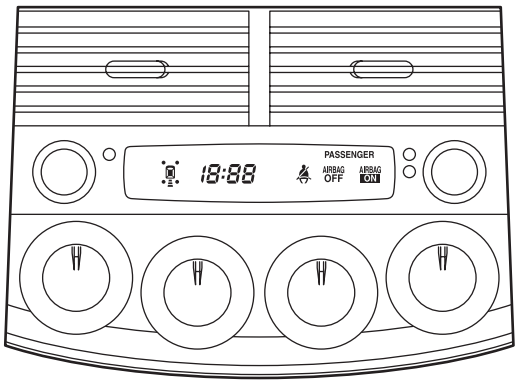

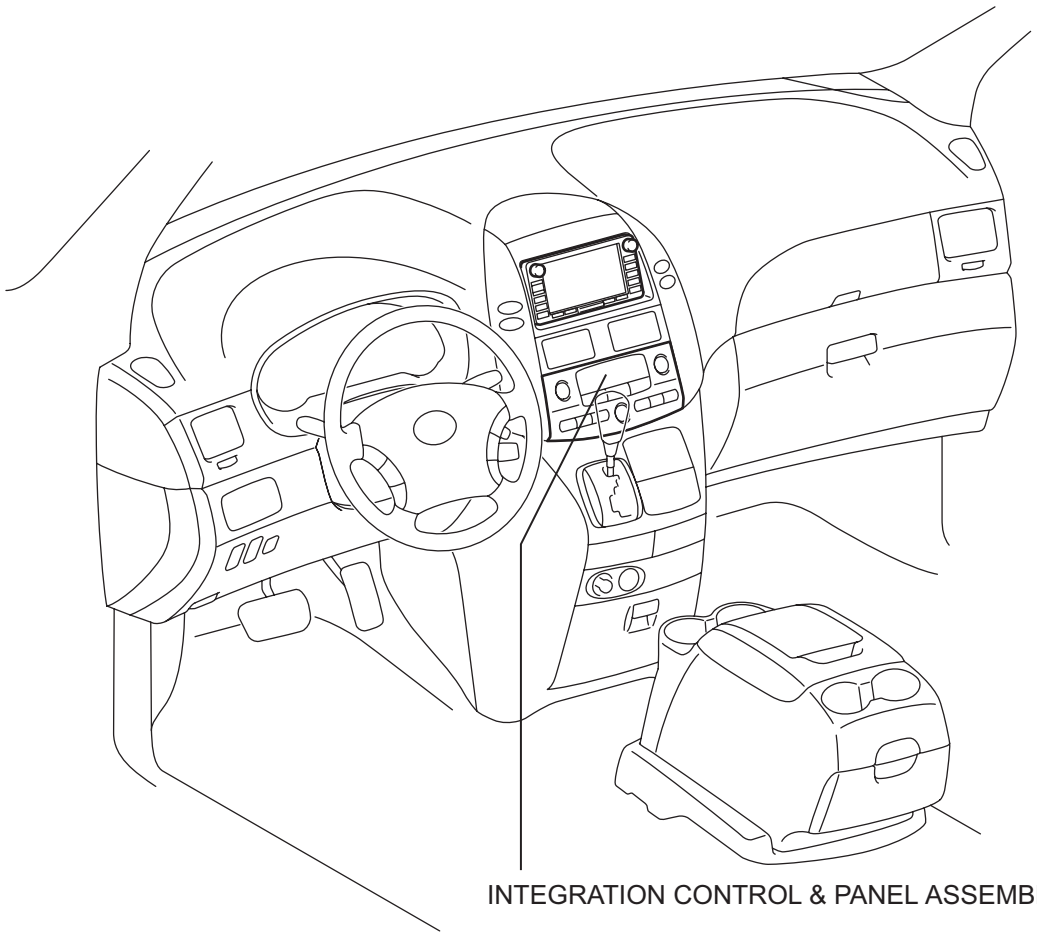INTEGRATION CONTROL & PANEL ASSEMBLY


- CLOCK

H

E143794E01

OT

**Integration Control & Panel Assembly Wire Harness View:**

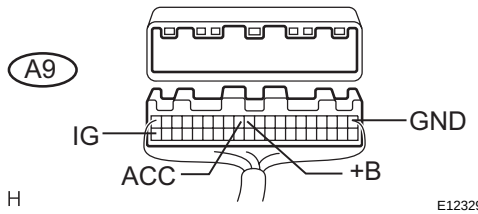


# ON-VEHICLE INSPECTION

## 1. INSPECT INTEGRATION CONTROL & PANEL ASSEMBLY

(a) Disconnect the A9 connector.

(b) Measure the voltage according to the value(s) in the table below.

**Standard voltage**

| Tester Connection | Condition | Specified Condition |
|---|---|---|
| A9-18 (IG) - Body ground | Turn the ignition switch off | Below 1 V |
| | Turn the ignition switch to the ON position | 10 to 14 V |
| A9-19 (ACC) - Body ground | Turn the ignition switch off | Below 1 V |
| | Turn the ignition switch to the ON position | 10 to 14 V |
| A9-20 (B) - Body ground | Always | 10 to 14 V |

(c) Measure the resistance according to the value(s) in the table below.

**Standard resistance**

| Tester Connection | Condition | Specified Condition |
|---|---|---|
| A9-1 (GND) - Body ground | Always | Below 1 Ω |

HINT:

If the value is not as specified, repair or replace harness or connector.