INNER REAR VIEW MIRROR

COMPONENTS

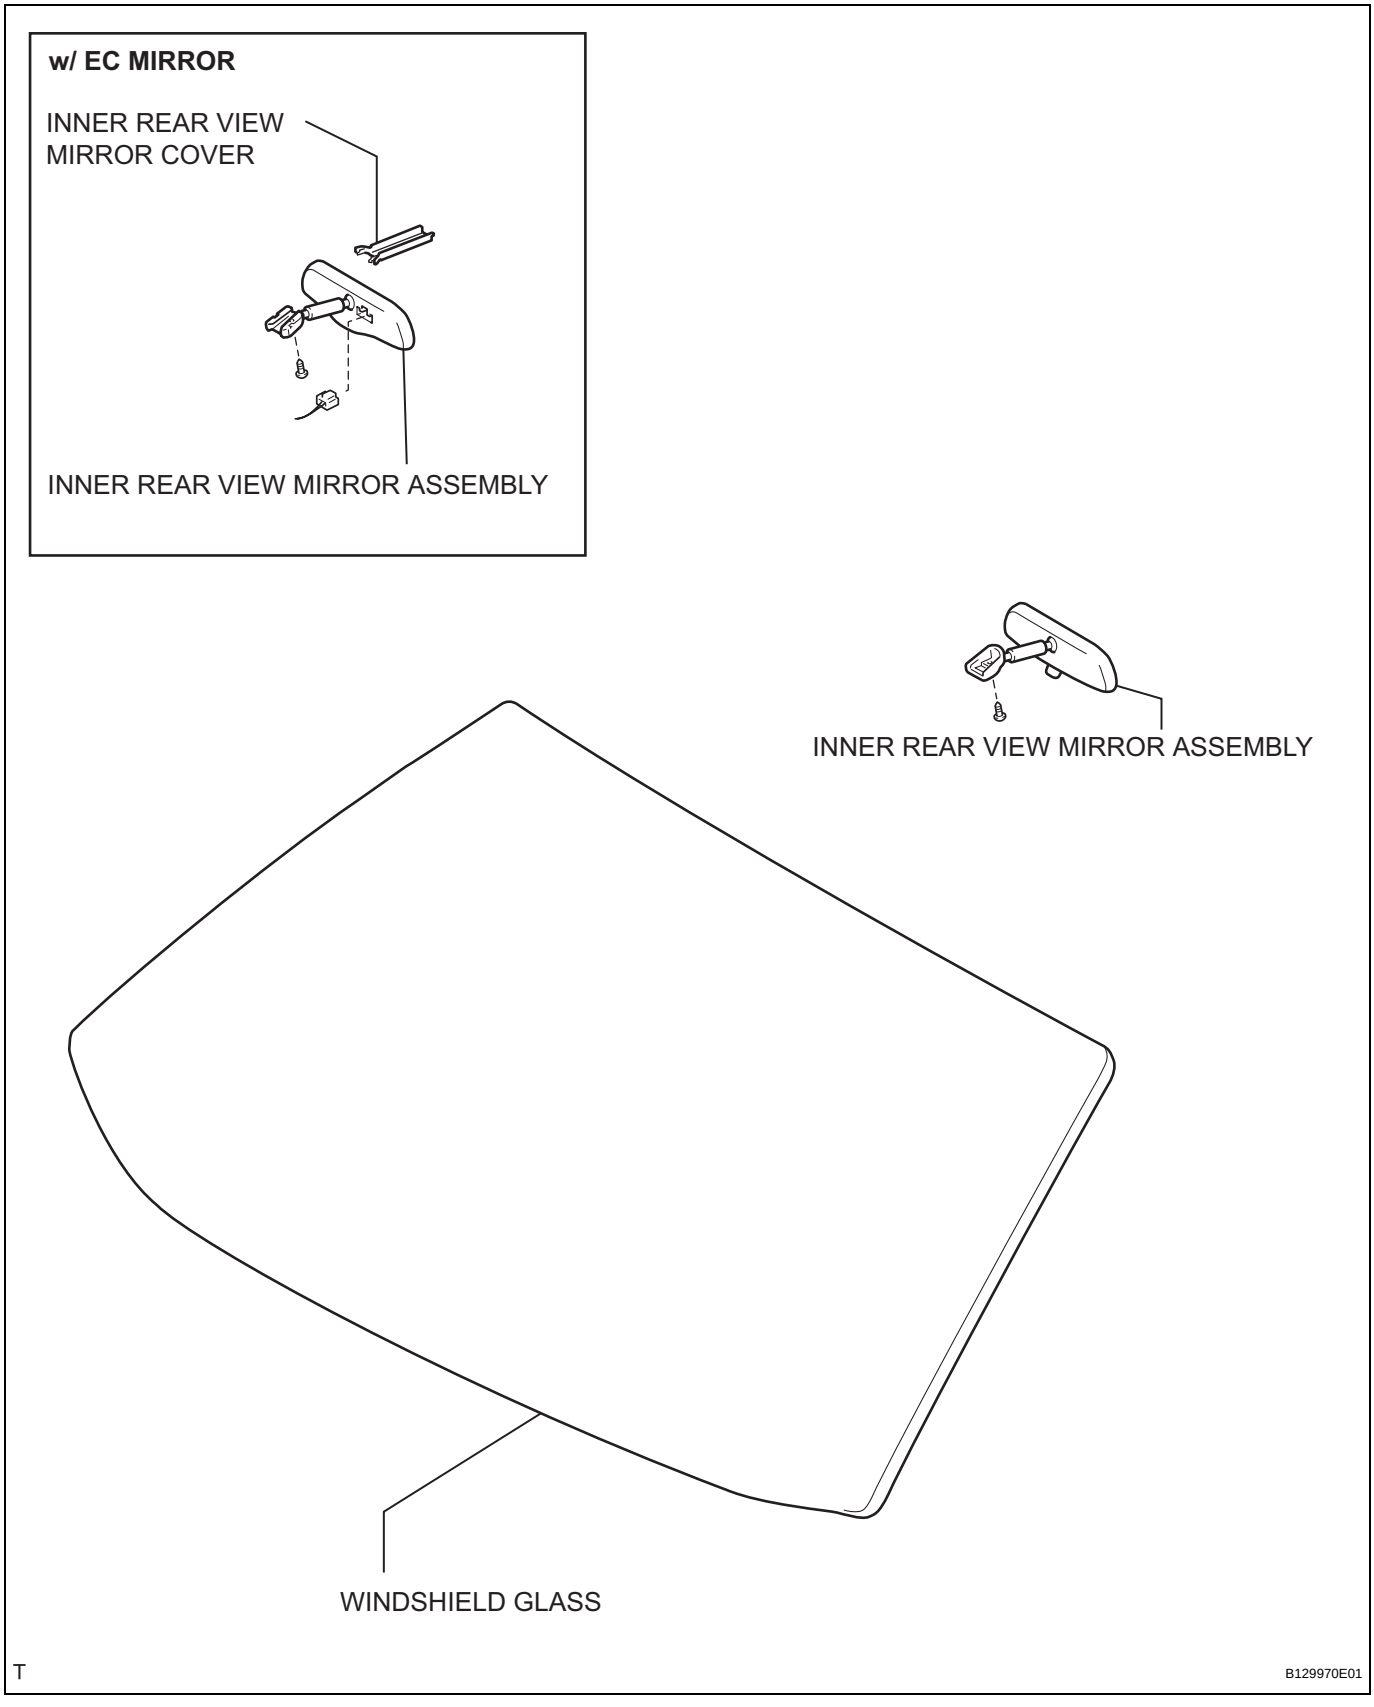

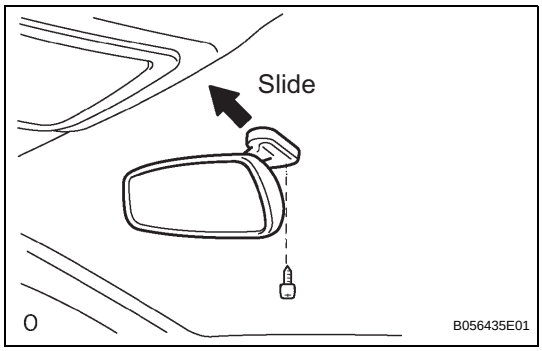

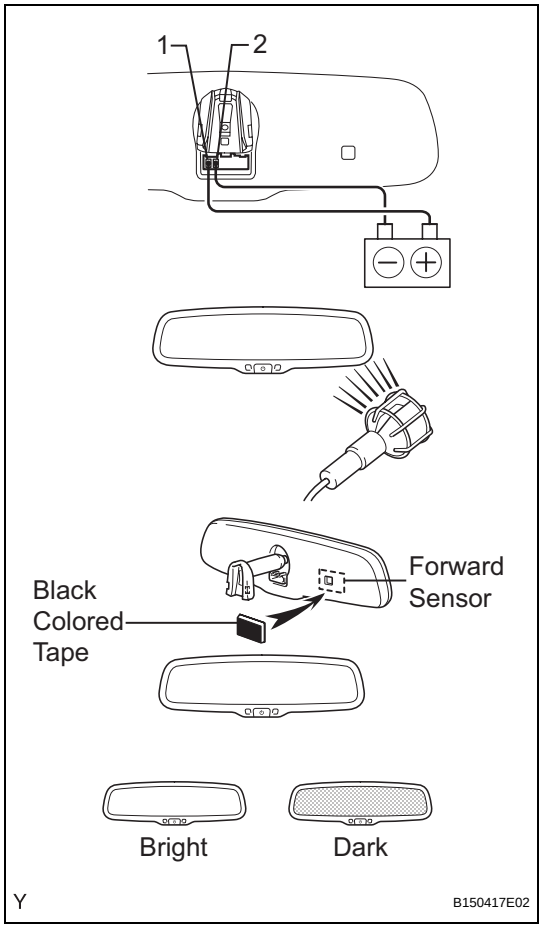

REMOVAL

1. REMOVE INNER REAR VIEW MIRROR ASSEMBLY

(a) w/ EC mirror:
Remove the inner rear view mirror cover.

(b) w/ EC mirror:
Disconnect the connector.

(c) Remove the screw.

(d) Remove the inner rear view mirror assembly as shown in the illustration.

INSPECTION

1. INSPECT INNER REAR VIEW MIRROR ASSEMBLY

(a) Inspect operation of the electrochromic inner mirror.

(1) Connect the positive (+) lead from the battery to terminal 1 and connect the negative (-) lead to terminal 2.

(2) Attach black colored tape to the forward sensor to prevent it from sensing.

(3) Light up the mirror with an electric light and check that the mirror surface changes from bright to dark.

Standard:

Mirror surface changes from bright to dark

If the result is not as specified, replace the mirror assembly.