

SYSTEM DIAGRAM

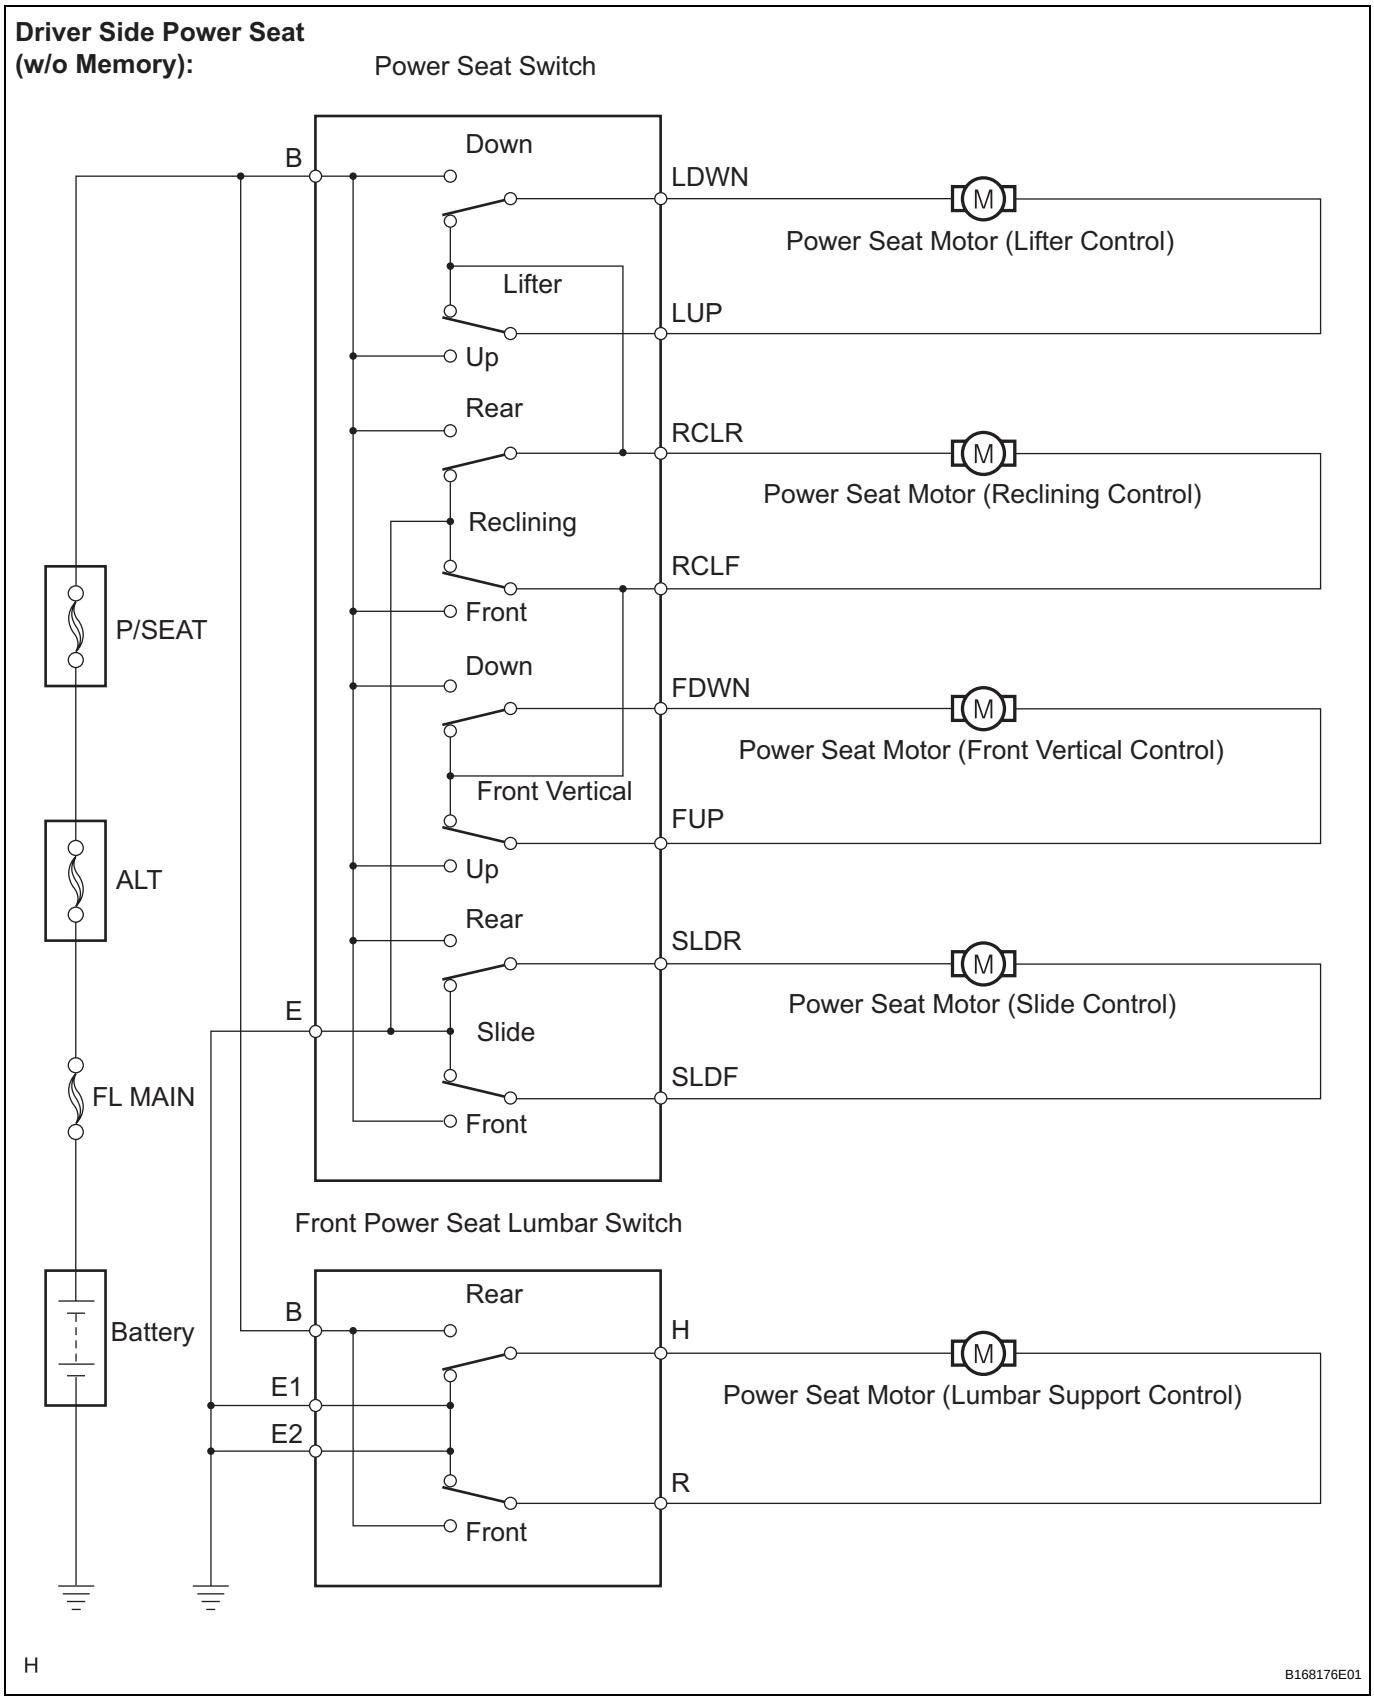


SE

Front Passenger Side Power Seat (w/o Memory):

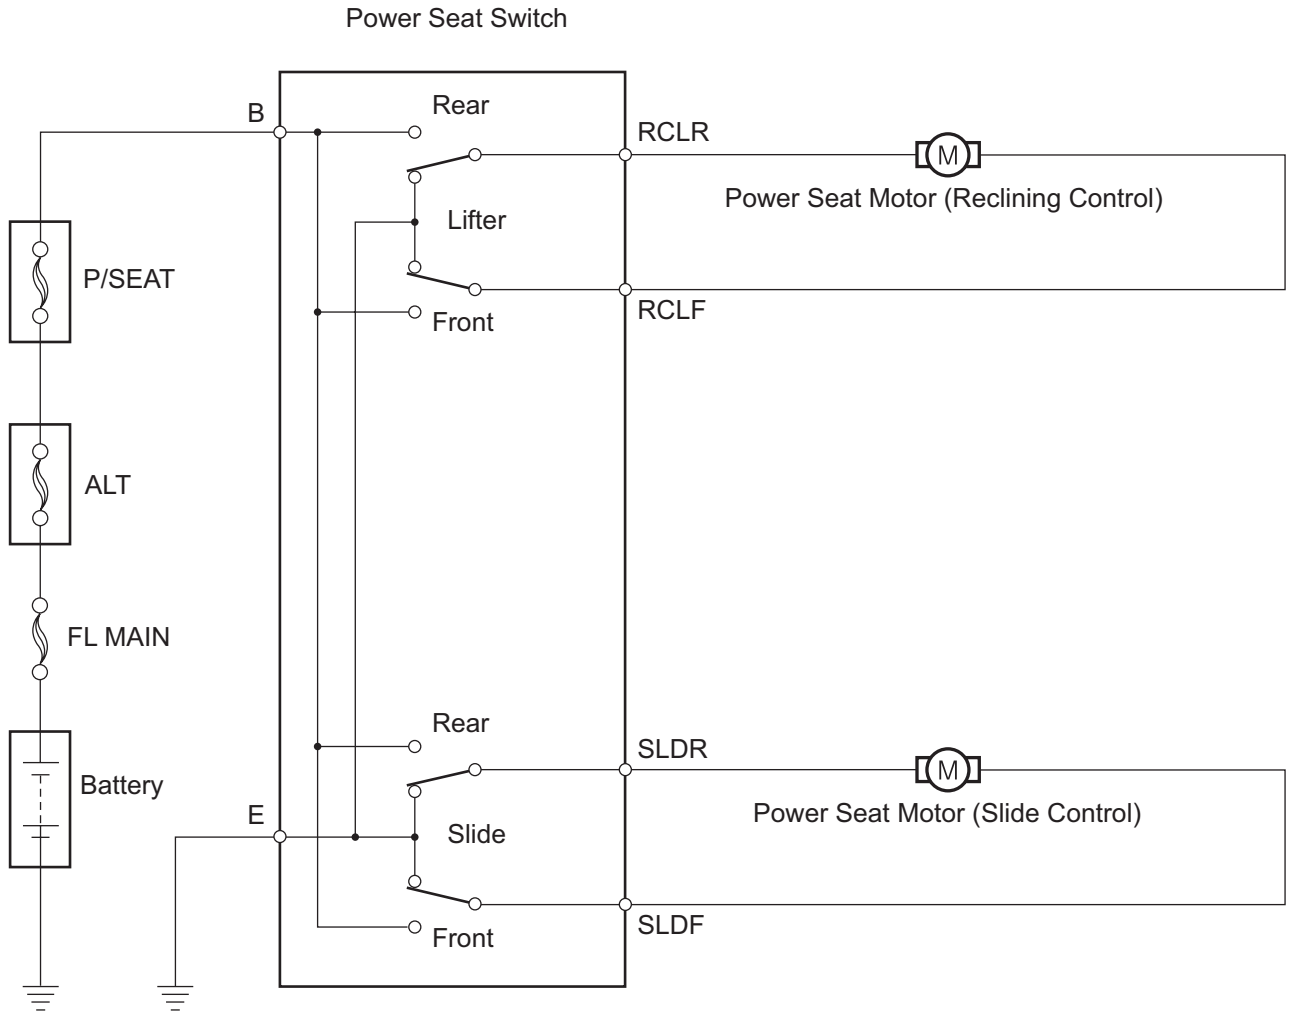


SE

Driver Side Power Seat (w/ Memory):

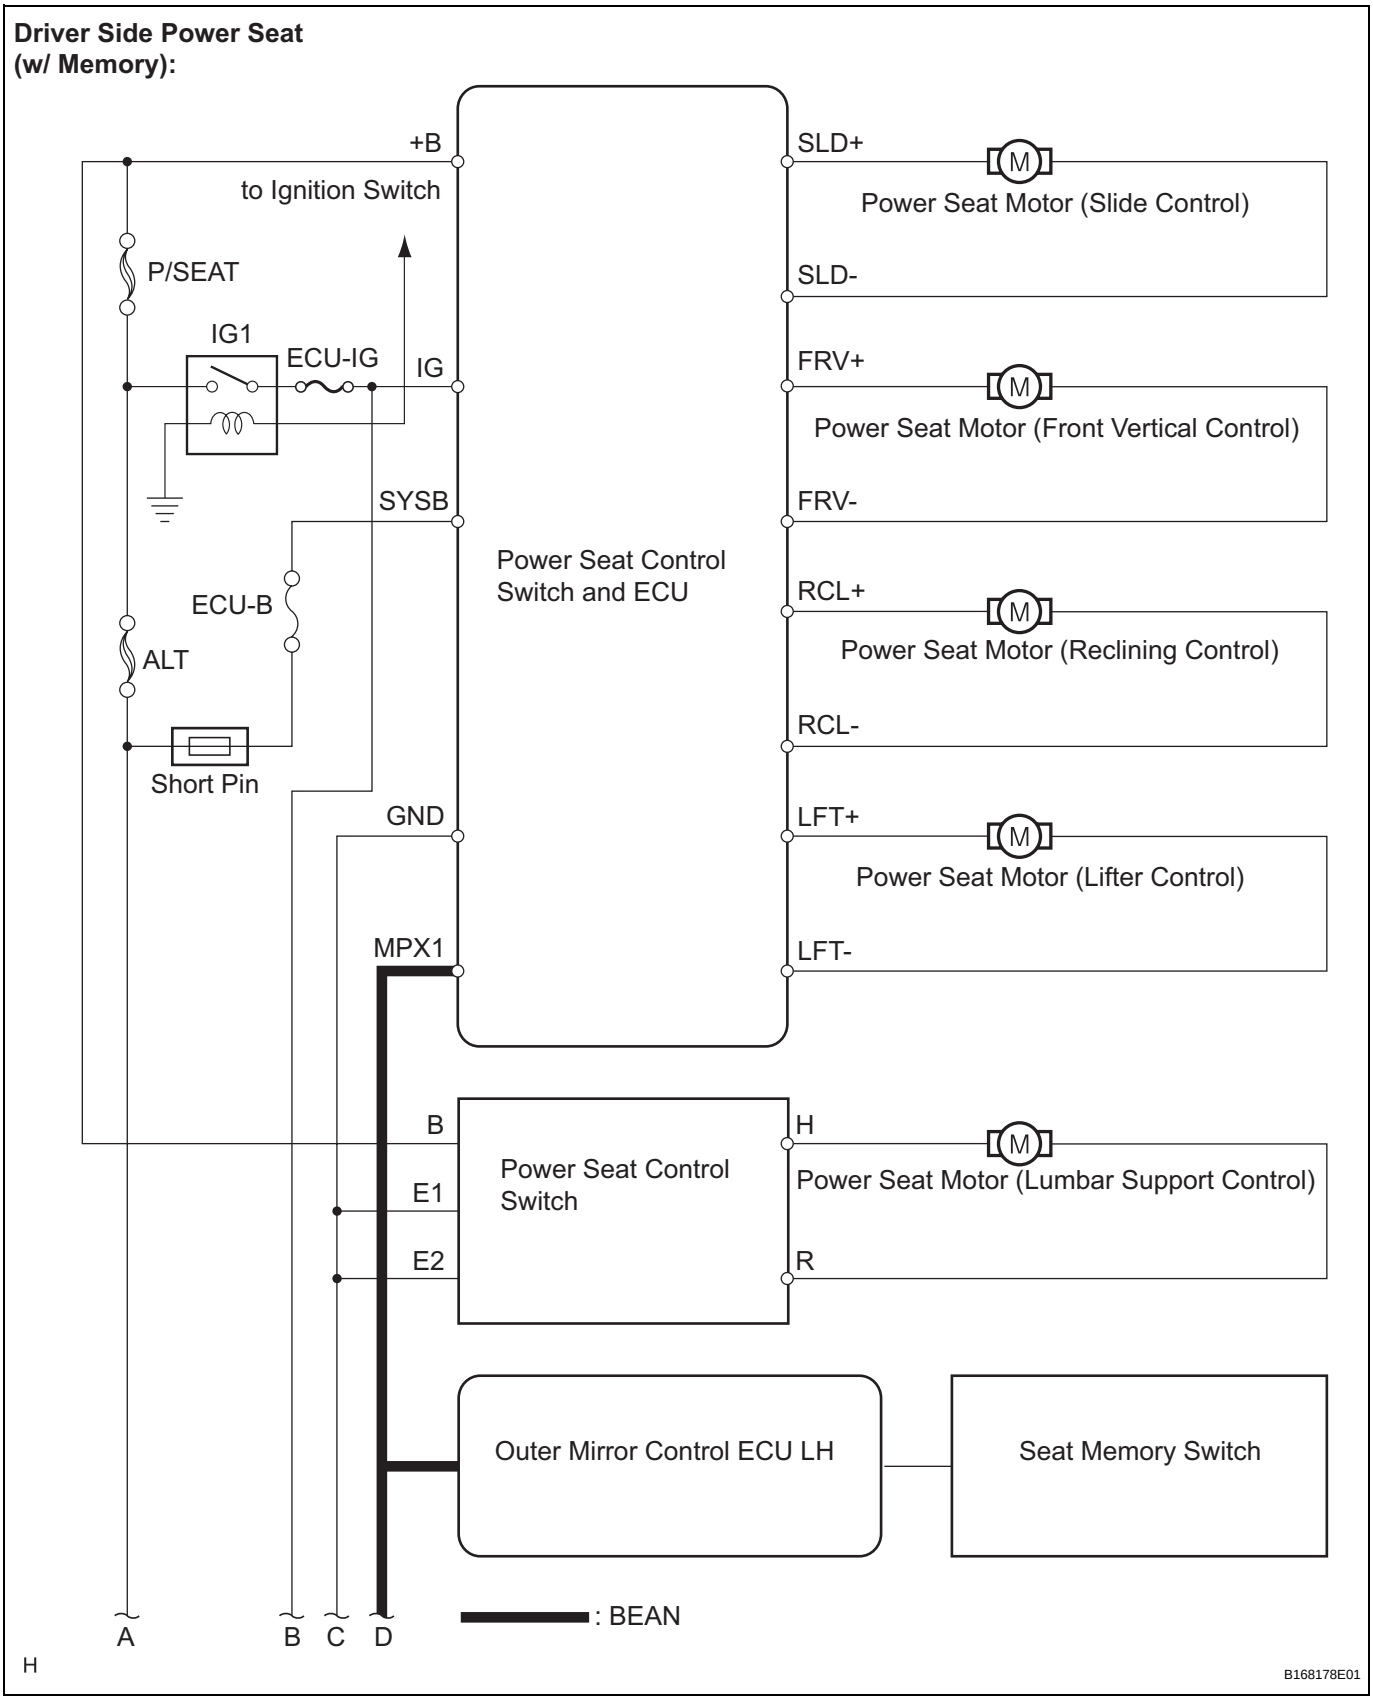

SE

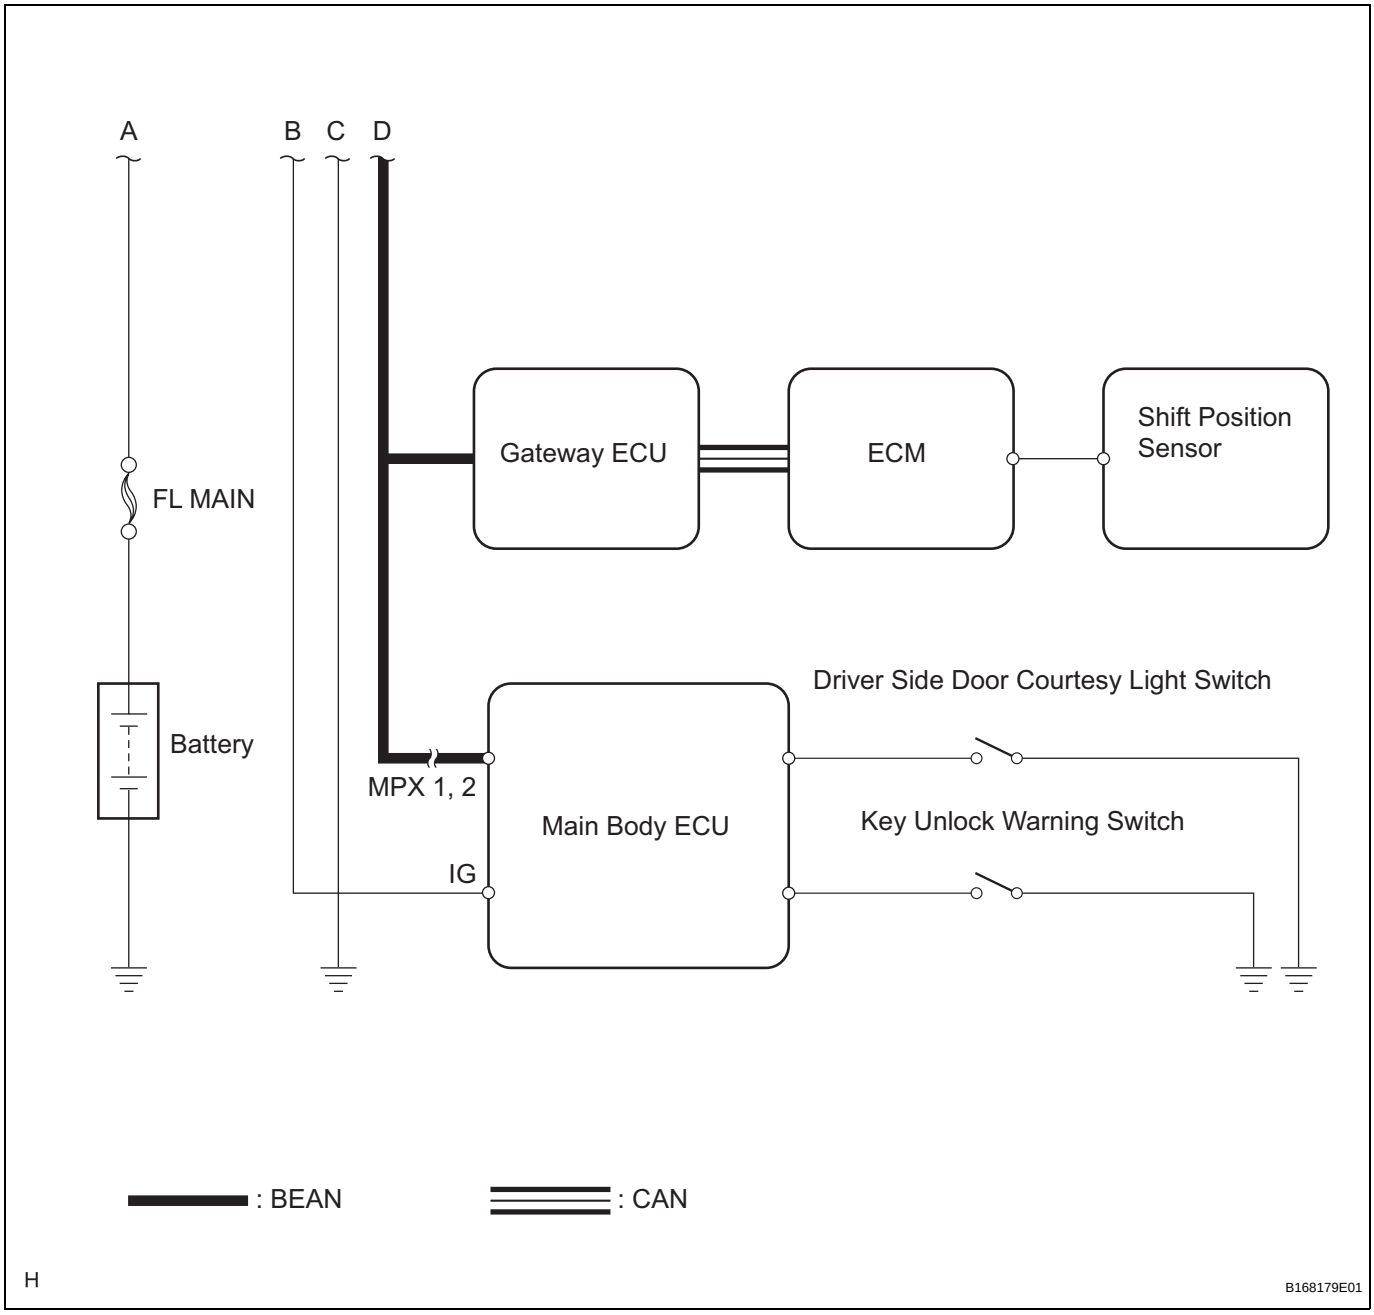

1. SIGNAL COMMUNICATION TABLE

Driver Side Power Seat (with Memory)

Transmitting ECU (Transmitter)	Receiving ECU	Signals	Communication method
ECM	Power seat control switch and ECU	Shift position P signal	CAN - BEAN
Outer mirror control ECU LH	Power seat control switch and ECU	Seat memory switch signal	BEAN
Power seat control switch and ECU	Outer mirror control ECU LH	• M1 switch memory command signal • M2 switch memory command signal • M1 switch regeneration command signal • M2 switch regeneration command signal	BEAN

SE

Transmitting ECU (Transmitter)	Receiving ECU	Signals	Communication method
Main body ECU	Power seat control switch and ECU	• Driver side door courtesy light switch signal • Key unlock warning switch signal • Ignition switch signal	BEAN