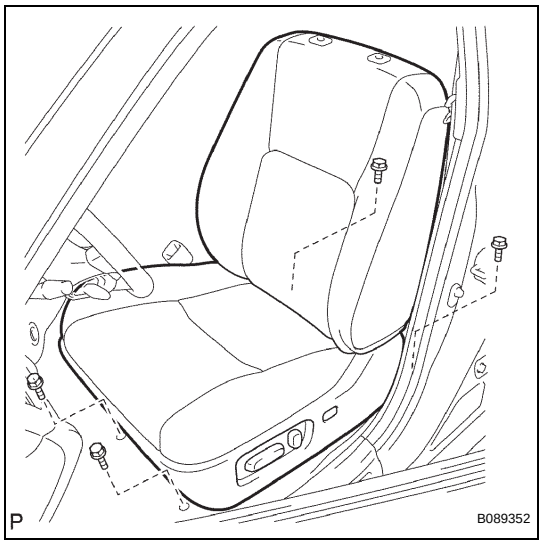


INSTALLATION

1. **INSTALL FRONT SEAT ASSEMBLY LH**
   (a) Place the seat assembly in the cabin.
   NOTICE:
   Be careful not to damage the body.
   (b) Connect the connectors under the seat assembly.
   (c) Tighten the 2 bolts on the front side of the seat assembly.
   Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)
   (d) Tighten the 2 bolts on the rear side of the seat assembly.
   Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)
   (e) Install the 2 seat track covers.
2. **INSTALL FRONT SEAT HEADREST ASSEMBLY**
3. **CHECK SRS WARNING LIGHT**
   HINT:
   See page RS-27
4. **INSPECT POWER SEAT OPERATION (See page SE-17)**
5. **CHECK SEAT HEATER OPERATION (See page SE-34)**
6. **INITIALIZE OCCUPANT CLASSIFICATION SYSTEM**
   HINT:
   See page RS-328